
Nortel Communication Server 1000

Nortel Networks Communication Server 1000 Release 4.5

IP Phones

Description, Installation, and Operation

Document Number: 553-3001-368

Document Release: Standard 26.00

Date: August 2007

Copyright © 2007 Nortel Networks. All Rights Reserved.

Produced in Canada

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, the Nortel Logo, the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Revision history

August 2007

Standard 26.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document includes updated content due to CRs Q01721270 and Q01736698.

May 2007

Standard 25.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document includes updated content due to CR Q01647741.

April 2007

Standard 24.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document includes updated content due to the following CRs:

- Q01586034—page 608 and page 613
- Q01584230—page 218
- Q01605678—page 208

March 2007

Standard 23.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document includes updated content due to CR Q01478322. See page 123, and page 357.

March 2007

Standard 22.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document is up-issued to support the addition of IP Phone 1110.

January 2007

Standard 21.00. Not issued.

December 2006

Standard 20.00. This document is up-issued to include the addition of the Expansion Module for IP Phone Series.

October 2006

Standard 19.00. This document is up-issued to include updated content due to CR Q01462514.

September 2006

Standard 18.00. This document is up-issued to include the addition of the IP Phone 1150E.

August 2006

Standard 17.00. This document is up-issued to include content update due to CR Q01434634.

July 2006

Standard 16.00. This document is up-issued to include updated technical content for CR Q01337301.

June 2006

Standard 15.00. This document is up-issued to include UNISTim firmware up-version.

April 2006

Standard 14.00. This document is up-issued to include content for the IP Audio Conference Phone 2033 Release 2.

April 2006

Standard 13.00. Not issued.

March 2006

Standard 12.00. This document is up-issued to include updated content for the IP Softphone 2050 V2.

January 2006

Standard 11.00. This document is up-issued to include updated content for the IP Phone 1120E and IP Phone 1140E.

January 2006

Standard 10.00. This document is up-issued to include updated content for the IP Phone 1140E, on pages 405 to 412, and 509 to 530.

January 2006

Standard 9.00. This document is up-issued to reflect change in technical content on page 456 due to CR Q01233903.

November 2005

Standard 8.00. This document is up-issued to support the addition of IP Phone 1140E.

August 2005

Standard 7.00. This document is up-issued to support CS 1000 Release 4.5.

April 2005

Standard 6.00. This document is up-issued to support the addition of the IP Phone 2007.

April 2005

Standard 5.00. This document is up-issued to support the addition of the IP Audio Conference Phone 2033.

February 2005

Standard 4.00. This document is up-issued to support the 8.x Firmware Upgrade for IP Phones.

September 2004

Standard 3.00. This document is up-issued to support Communication Server 1000 Release 4.0.

June 2004

Standard 2.00. This document is up-issued to include the Nortel Networks Mobile Voice Client 2050.

October 2003

Standard 1.00. This document is a new document for Succession 3.0 Software. It was created to support a restructuring of the Documentation Library. This document contains information previously contained in the following legacy document, now retired: *Internet Terminals Description (553-3001-217)*.

Contents

| | |
|---|-----------|
| List of procedures | 19 |
| How to get Help | 31 |
| Getting help from the Nortel web site | 31 |
| Getting help over the phone from a Nortel Solutions Center | 31 |
| Getting help from a specialist by using an Express Routing Code | 32 |
| Getting help through a Nortel distributor or reseller | 32 |
| About this document | 33 |
| Subject | 33 |
| Applicable systems | 34 |
| Intended audience | 35 |
| Conventions | 35 |
| Related information | 36 |
| Nortel IP Phone 2001 | 39 |
| Contents | 39 |
| Introduction | 39 |
| Description | 40 |
| Components and functions | 41 |
| Supported features | 44 |
| Features not currently supported | 46 |
| Display characteristics | 46 |
| Key number assignments | 48 |

| | |
|---|----------------|
| Package components | 49 |
| Installation and Configuration | 51 |
| Full Duplex mode | 68 |
| Gratuitous Address Resolution Protocol Protection | 70 |
| Extensible Authentication Protocol | 70 |
| Reinstalling an IP Phone 2001 | 70 |
| Replacing an IP Phone 2001 | 72 |
| Removing an IP Phone 2001 from service | 72 |
| Nortel IP Phone 2004 | 73 |
| Contents | 73 |
| Introduction | 74 |
| Description | 74 |
| Components and functions | 75 |
| Supported features | 79 |
| Features not currently supported | 81 |
| Central Answering Position | 81 |
| Display characteristics | 82 |
| Key number assignments | 84 |
| Package components | 84 |
| Installation and Configuration | 86 |
| Full Duplex mode | 106 |
| Gratuitous Address Resolution Protocol Protection | 107 |
| Extensible Authentication Protocol | 108 |
| Reinstalling an IP Phone 2004 | 108 |
| Replacing an IP Phone 2004 | 109 |
| Removing an IP Phone 2004 from service | 110 |
| Nortel IP Phone 2002 | 111 |
| Contents | 111 |
| Introduction | 112 |

| | |
|---|----------------|
| Description | 112 |
| Components and functions | 113 |
| Supported features | 117 |
| Features not currently supported | 119 |
| Display characteristics | 120 |
| Key number assignments | 122 |
| Package components | 122 |
| Installation and Configuration | 124 |
| Full Duplex mode | 144 |
| Gratuitous Address Resolution Protocol Protection | 146 |
| Extensible Authentication Protocol | 146 |
| Reinstalling an IP Phone 2002 | 146 |
| Replacing an IP Phone 2002 | 147 |
| Removing an IP Phone 2002 from service | 148 |
| Nortel IP Phone 2007 | 149 |
| Contents | 149 |
| Introduction | 150 |
| Description | 150 |
| Components and functions | 151 |
| Supported features | 156 |
| Features not currently supported | 159 |
| Touch panel | 159 |
| Dialpad entry | 159 |
| Cleaning the IP Phone display screen | 161 |
| Display characteristics | 161 |
| Local Tools menu password protection | 165 |
| Key number assignments | 167 |
| Package components | 168 |
| Installation and Configuration | 169 |

| | |
|---|-----|
| Full Duplex mode | 182 |
| Gratuitous Address Resolution Protocol Protection | 184 |
| Extensible Authentication Protocol | 184 |
| Reinstalling an IP Phone 2007 | 185 |
| Replacing an IP Phone 2007 | 186 |
| Removing an IP Phone 2007 from service | 186 |

IP Phone

Key Expansion Module (KEM) 189

| | |
|---|-----|
| Contents | 189 |
| Description | 189 |
| Features | 190 |
| Display characteristics | 191 |
| Key number assignments | 191 |
| Package components | 191 |
| Configuration | 192 |
| Installation | 196 |
| IP Phone KEM startup initialization | 198 |
| Operating parameters | 199 |

Nortel IP Softphone 2050 203

| | |
|------------------------------|-----|
| Contents | 203 |
| Introduction | 203 |
| Description | 204 |
| Supported features | 206 |
| Components | 207 |
| Operation | 212 |
| Key number assignments | 220 |
| Operating parameters | 222 |
| System components | 223 |
| Before you begin | 224 |

| | |
|---|------------------------|
| First-time installation | 224 |
| Installing or upgrading the IP Softphone 2050 | 226 |
| Running the IP Softphone 2050 for the first time | 230 |
| Changing the TN of an existing IP Softphone 2050 | 231 |
| Removing an IP Softphone 2050 from service | 232 |
| Nortel Mobile Voice Client 2050 | 233 |
| Contents | 233 |
| Introduction | 233 |
| Description | 234 |
| System requirements | 234 |
| Supported features | 235 |
| MVC 2050 components | 236 |
| MVC 2050 Call Handling screen | 238 |
| Operation | 246 |
| MVC 2050 installation | 247 |
| MVC 2050 removal | 249 |
| Configuration | 249 |
| 802.1p and DiffServ | 259 |
| MVC 2050 and WLAN | 259 |
| Nortel WLAN Handset 2210, WLAN Handset 2211, and WLAN Handset 2212 | 261 |
| Nortel IP Audio Conference Phone 2033 | 263 |
| Contents | 263 |
| Introduction | 264 |
| Description | 264 |
| Extension microphones | 266 |
| Components and functions | 266 |
| Supported features | 269 |

| | |
|---|------------|
| Features not currently supported | 270 |
| Display characteristics | 271 |
| Key number assignments | 274 |
| Package components | 275 |
| Installation and Configuration | 278 |
| Full Duplex mode | 294 |
| Extensible Authentication Protocol | 296 |
| Reinstalling an IP Audio Conference Phone 2033 | 296 |
| Replacing an IP Audio Conference Phone 2033 | 298 |
| Removing an IP Audio Conference Phone 2033 from service | 298 |
| Connecting an extension microphone | 299 |
| Nortel IP Phone 1110 | 301 |
| Contents | 301 |
| Introduction | 302 |
| Description | 302 |
| Components and functions | 303 |
| Supported features | 307 |
| Features not supported | 309 |
| Display characteristics | 309 |
| Local Tools menu password protection | 311 |
| Key number assignments | 313 |
| Package components | 314 |
| Installation and Configuration | 316 |
| Full Duplex mode | 338 |
| TFTP firmware upgrade | 340 |
| Gratuitous Address Resolution Protocol Protection | 340 |
| Extensible Authentication Protocol | 340 |
| Redeploying an IP Phone 1110 | 341 |
| Replacing an IP Phone 1110 | 342 |

| | |
|--|-----|
| Removing an IP Phone 1110 from service | 342 |
|--|-----|

Nortel IP Phone 1120E 343

| | |
|---|-----|
| Contents | 343 |
| Introduction | 344 |
| Description | 344 |
| Components and functions | 345 |
| Supported features | 351 |
| Features not currently supported | 354 |
| Display characteristics | 354 |
| Cleaning the IP Phone display screen | 357 |
| Local Tools menu password protection | 357 |
| Key number assignments | 359 |
| Package components | 360 |
| Installation and Configuration | 361 |
| Full Duplex mode | 378 |
| TFTP firmware upgrade | 380 |
| Gratuitous Address Resolution Protocol Protection | 381 |
| Extensible Authentication Protocol | 381 |
| Reinstalling an IP Phone 1120E | 381 |
| Replacing an IP Phone 1120E | 383 |
| Removing an IP Phone 1120E from service | 383 |

Nortel IP Phone 1140E 385

| | |
|--|-----|
| Contents | 385 |
| Introduction | 386 |
| Description | 386 |
| Components and functions | 387 |
| Supported features | 393 |
| Features not currently supported | 397 |
| Display characteristics | 398 |

| | |
|---|------------|
| Local Tools menu password protection | 400 |
| Key number assignments | 402 |
| Package components | 403 |
| Installation and Configuration | 404 |
| Full Duplex mode | 422 |
| TFTP firmware upgrade | 424 |
| Gratuitous Address Resolution Protocol Protection | 424 |
| Extensible Authentication Protocol | 424 |
| Bluetooth wireless technology | 424 |
| Reinstalling an IP Phone 1140E | 425 |
| Replacing an IP Phone 1140E | 426 |
| Removing an IP Phone 1140E from service | 426 |
| Nortel IP Phone 1150E | 427 |
| Contents | 427 |
| Introduction | 428 |
| Description | 428 |
| Components and functions | 430 |
| Supported features | 437 |
| Features not currently supported | 441 |
| Display characteristics | 441 |
| Headset support | 444 |
| Local Tools menu password protection | 444 |
| Key number assignments | 447 |
| Package components | 449 |
| Installation and Configuration | 450 |
| Full Duplex mode | 469 |
| TFTP firmware upgrade | 471 |
| Gratuitous Address Resolution Protocol Protection | 471 |
| Extensible Authentication Protocol | 471 |

| | |
|--|------------|
| Bluetooth wireless technology | 471 |
| Reinstalling an IP Phone 1150E | 472 |
| Replacing an IP Phone 1150E | 473 |
| Removing an IP Phone 1150E from service | 473 |
| Expansion Module for IP Phone 1100 series | 475 |
| Contents | 475 |
| Description | 475 |
| Features | 477 |
| Display characteristics | 478 |
| Package components | 478 |
| Configuration | 479 |
| Installation | 480 |
| Expansion Module startup initialization | 484 |
| Operating parameters | 486 |
| Services key operation | 487 |
| Firmware | 490 |
| Features overview | 491 |
| Contents | 491 |
| Introduction | 491 |
| Corporate Directory | 492 |
| Personal Directory | 492 |
| Redial List | 493 |
| Callers List | 493 |
| Password Administration | 493 |
| IP Call Recording | 493 |
| Virtual Office | 494 |
| Emergency Services for Virtual Office | 494 |
| Active Call Failover | 494 |
| Enhanced UNISTim Firmware download | 495 |

| | |
|---|------------|
| SRTP media encryption | 496 |
| Appendix A: Specifications | 499 |
| Contents | 499 |
| Environmental specifications | 502 |
| Regulatory and safety information | 503 |
| Other compliances | 506 |
| DenAn regulatory notice for Japan | 507 |
| Appendix B: 802.1Q VLAN description | 509 |
| Contents | 509 |
| Introduction | 509 |
| Description | 510 |
| IP Phone support | 511 |
| Three-port switch support | 512 |
| VLAN IDs | 513 |
| Enhanced DATA VLAN | 515 |
| Appendix C: 802.1x Port-based network access control | 519 |
| Contents | 519 |
| Introduction | 519 |
| Extensible Authentication Protocol | 520 |
| Appendix D: 802.1ab Link Layer Discovery Protocol | 521 |
| Contents | 521 |
| Introduction | 521 |
| Description | 521 |
| Appendix E: IP Phone diagnostic utilities | 523 |
| Contents | 523 |

| | |
|---|------------|
| Introduction | 523 |
| Text-based diagnostic utilities | 524 |
| Graphic-based diagnostics utilities | 557 |
| Appendix F: Configuring the Local Tools menu | 577 |
| Contents | 577 |
| Introduction | 577 |
| Configuring the Local Tools menu | 578 |
| Appendix G: Bluetooth wireless technology | 589 |
| Contents | 589 |
| Introduction | 589 |
| Description | 589 |
| Appendix H: TFTP Server | 603 |
| Contents | 603 |
| Introduction | 603 |
| TFTP Server planning | 604 |
| Updating IP Phones firmware | 605 |
| Appendix I: IP Phone soft keys | 617 |
| Appendix J: Call features | 619 |
| Index | 623 |

List of procedures

| | |
|---|----|
| Procedure 1 | |
| Configuring the IP Phone 2001 | 52 |
| Procedure 2 | |
| Installing the IP Phone 2001 for the first time using manual configuration | 56 |
| Procedure 3 | |
| Installing an IP Phone 2001 for the first time using DHCP | 62 |
| Procedure 4 | |
| Enabling Full Duplex mode | 69 |
| Procedure 5 | |
| Checking Ethernet Statistics | 69 |
| Procedure 6 | |
| Changing the TN of an existing IP Phone 2001 | 71 |
| Procedure 7 | |
| Replacing an IP Phone 2001 | 72 |
| Procedure 8 | |
| Removing an IP Phone 2001 from service | 72 |
| Procedure 9 | |
| Configuring the IP Phone 2004 | 88 |

| | |
|--|------------|
| Procedure 10 Installing the IP Phone 2004 for the first time using manual configuration | 92 |
| Procedure 11 Installing an IP Phone 2004 for the first time using DHCP | 99 |
| Procedure 12 Enabling Full Duplex mode | 106 |
| Procedure 13 Checking Ethernet Statistics | 107 |
| Procedure 14 Changing the TN of an existing IP Phone 2004 | 108 |
| Procedure 15 Replacing an IP Phone 2004 | 109 |
| Procedure 16 Removing an IP Phone 2004 from service | 110 |
| Procedure 17 Configuring the IP Phone 2002 | 126 |
| Procedure 18 Installing the IP Phone 2002 for the first time using manual configuration | 130 |
| Procedure 19 Installing an IP Phone 2002 for the first time using DHCP | 137 |
| Procedure 20 Enabling Full Duplex mode | 144 |
| Procedure 21 Checking Ethernet Statistics | 145 |

| | |
|---|-----------------|
| Procedure 22 | |
| Changing the TN of an existing IP Phone 2002 |146 |
| Procedure 23 | |
| Replacing an IP Phone 2002 |147 |
| Procedure 24 | |
| Removing an IP Phone 2002 from service |148 |
| Procedure 25 | |
| Configuring the IP Phone 2007 |170 |
| Procedure 26 | |
| Installing the IP Phone 2007 |174 |
| Procedure 27 | |
| Enabling Full Duplex mode |183 |
| Procedure 28 | |
| Checking Ethernet Statistics |184 |
| Procedure 29 | |
| Changing the TN of an existing IP Phone 2007 |185 |
| Procedure 30 | |
| Replacing an IP Phone 2007 |186 |
| Procedure 31 | |
| Removing an IP Phone 2007 from service |186 |
| Procedure 32 | |
| Connecting the IP Phone KEM to an IP Phone 2002 or IP Phone 2004 |197 |
| Procedure 33 | |
| Preinstallation checklist |224 |
| Procedure 34 | |
| Installing an IP Softphone 2050 for the first time |225 |

| | |
|--|------------|
| Procedure 35 | |
| Installing the IP Softphone 2050 on the PC | |
| (new installation) | 227 |
| Procedure 36 | |
| Upgrading the IP Softphone 2050 on your PC | 228 |
| Procedure 37 | |
| Uninstalling the IP Softphone 2050 (Version 1) | 228 |
| Procedure 38 | |
| Uninstalling the IP Softphone 2050 (Version 2) | 229 |
| Procedure 39 | |
| Installing the Accessibility Interface | 229 |
| Procedure 40 | |
| Installing the Windows QoS Packet Scheduler for Windows | |
| 2000 | 230 |
| Procedure 41 | |
| Changing the TN of an existing IP Softphone 2050 ... | 231 |
| Procedure 42 | |
| Removing an IP Softphone 2050 from service | 232 |
| Procedure 43 | |
| Starting MVC 2050 | 246 |
| Procedure 44 | |
| Synchronizing a PDA with a desktop PC | |
| using ActiveSync | 247 |
| Procedure 45 | |
| Installing MVC 2050 | 248 |
| Procedure 46 | |
| Removing MVC 2050 from your PDA | 249 |

| | |
|--|------------|
| Procedure 47 | |
| Enabling Auto-Create | 251 |
| Procedure 48 | |
| Configuring the IP Audio Conference Phone 2033 ... | 279 |
| Procedure 49 | |
| Installing the IP Audio Conference Phone 2033 for the first time using manual configuration | 283 |
| Procedure 50 | |
| Installing an IP Audio Conference Phone 2033 for the first time using DHCP | 289 |
| Procedure 51 | |
| Enable Full Duplex mode | 295 |
| Procedure 52 | |
| Checking Ethernet Statistics | 296 |
| Procedure 53 | |
| Changing the TN of an existing IP Audio Conference Phone 2033 | 297 |
| Procedure 54 | |
| Replacing an IP Audio Conference Phone 2033 | 298 |
| Procedure 55 | |
| Removing an IP Audio Conference Phone 2033 from service | 298 |
| Procedure 56 | |
| Connecting an extension microphone to the IP Audio Conference Phone 2033 | 299 |
| Procedure 57 | |
| Configuring the IP Phone 1110 | 317 |

| | |
|---|------------|
| Procedure 58 | |
| Installing the IP Phone 1110 for the first time using manual configuration | 325 |
| Procedure 59 | |
| Installing an IP Phone 1110 for the first time using DHCP | 332 |
| Procedure 60 | |
| Enabling Full Duplex | 339 |
| Procedure 61 | |
| Checking Ethernet Statistics | 339 |
| Procedure 62 | |
| Changing the TN of an existing IP Phone 1110 | 341 |
| Procedure 63 | |
| Replacing an IP Phone 1110 | 342 |
| Procedure 64 | |
| Removing an IP Phone 1110 from service | 342 |
| Procedure 65 | |
| Configuring the IP Phone 1120E | 363 |
| Procedure 66 | |
| Installing the IP Phone 1120E | 371 |
| Procedure 67 | |
| Enabling Full Duplex mode | 379 |
| Procedure 68 | |
| Checking Ethernet Statistics | 380 |
| Procedure 69 | |
| Changing the TN of an existing IP Phone 1120E | 382 |
| Procedure 70 | |
| Replacing an IP Phone 1120E | 383 |

| | |
|--|------------|
| Procedure 71 | |
| Removing an IP Phone 1120E from service | 383 |
| Procedure 72 | |
| Configuring the IP Phone 1140E | 406 |
| Procedure 73 | |
| Installing the IP Phone 1140E | 414 |
| Procedure 74 | |
| Enabling Full Duplex mode | 422 |
| Procedure 75 | |
| Checking Ethernet Statistics | 423 |
| Procedure 76 | |
| Changing the TN of an existing IP Phone 1140E | 425 |
| Procedure 77 | |
| Replacing an IP Phone 1140E | 426 |
| Procedure 78 | |
| Removing an IP Phone 1140E from service | 426 |
| Procedure 79 | |
| Configuring an IP Phone 1150E | 452 |
| Procedure 80 | |
| Installing the IP Phone 1150E for the first time using manual configuration | 461 |
| Procedure 81 | |
| Enabling Full Duplex mode | 469 |
| Procedure 82 | |
| Checking Ethernet Statistics | 470 |

| | |
|--|------------|
| Procedure 83 | |
| Changing the TN of an existing | |
| IP Phone 1150E | 472 |
| Procedure 84 | |
| Replacing an IP Phone 1150E | 473 |
| Procedure 85 | |
| Removing an IP Phone 1150E from service | 473 |
| Procedure 86 | |
| Connecting the Expansion Module for | |
| IP Phones 1100 Series to the IP Phone | 481 |
| Procedure 87 | |
| Accessing the Network Diagnostic Tools | |
| menu in Local mode | 528 |
| Procedure 88 | |
| Executing Ping | 528 |
| Procedure 89 | |
| Executing TraceRoute | 529 |
| Procedure 90 | |
| Accessing Ethernet Statistics | 529 |
| Procedure 91 | |
| Accessing IP Network Statistics | 529 |
| Procedure 92 | |
| Accessing IP Set & DHCP Information | 530 |
| Procedure 93 | |
| Accessing the Diagnostics submenu | |
| in Remote Mode | 530 |
| Procedure 94 | |
| Accessing Diagnostic Tools in Remote mode | 531 |

| | |
|--|------------|
| Procedure 95 | |
| Entering an IP address | 532 |
| Procedure 96 | |
| Changing the number of Pings | 532 |
| Procedure 97 | |
| Pinging an IP address | 533 |
| Procedure 98 | |
| Reviewing the results of the Ping: | 533 |
| Procedure 99 | |
| Entering an IP address | 533 |
| Procedure 100 | |
| Changing the number of Hops | 534 |
| Procedure 101 | |
| Tracing a route | 534 |
| Procedure 102 | |
| Reviewing the results of the trace | 535 |
| Procedure 103 | |
| Browsing Ethernet Statistics | 535 |
| Procedure 104 | |
| Checking 802.1x Supplicant status | 535 |
| Procedure 105 | |
| Checking 802.1x Supplicant Authentication state | 536 |
| Procedure 106 | |
| Checking Device ID | 536 |
| Procedure 107 | |
| Checking Authenticator ID | 537 |
| Procedure 108 | |
| Browsing IP Statistics | 537 |

| | |
|---|------------|
| Procedure 109 | |
| Browsing RUDP Statistics | 538 |
| Procedure 110 | |
| Browsing Quality of Service Statistics | 538 |
| Procedure 111 | |
| Using Network Diagnostic Tools | 558 |
| Procedure 112 | |
| Using Ethernet Statistics tool | 560 |
| Procedure 113 | |
| Using the IP Network Statistics tool | 561 |
| Procedure 114 | |
| Using the IPSet&DHCP Information tool | 563 |
| Procedure 115 | |
| Using the IP Set&DHCP Information tool | 565 |
| Procedure 116 | |
| Using Network Diagnostic Tools | 567 |
| Procedure 117 | |
| Using Ethernet Statistics tool | 569 |
| Procedure 118 | |
| Using the IP Network Statistics tool | 572 |
| Procedure 119 | |
| Using the USB Devices tool | 575 |
| Procedure 120 | |
| Locking the Tools menu | 583 |
| Procedure 121 | |
| Unlocking the Tools menu | 583 |
| Procedure 122 | |
| Locking the Tools menu | 587 |

| | |
|---|------------|
| Procedure 123 | |
| Unlocking the Tools menu | 587 |
| Procedure 124 | |
| Configure the Bluetooth wireless technology administration setting | 591 |
| Procedure 125 | |
| Enabling Bluetooth wireless technology on the IP Phone 1140E | 592 |
| Procedure 126 | |
| Pairing the Bluetooth wireless technology headset with your IP Phone | 596 |
| Procedure 127 | |
| Switching between a wired headset and wireless headset | 601 |
| Procedure 128 | |
| Unpairing a wireless headset | 601 |
| Procedure 129 | |
| Updating the IP Phones firmware | 606 |
| Procedure 130 | |
| Downloading the firmware for the IP Phone 2007 | 608 |
| Procedure 131 | |
| Upgrading the firmware for IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E using automatic TFTP download at bootup | 613 |
| Procedure 132 | |
| Upgrading the firmware for IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E using BootC | 614 |

How to get Help

This chapter explains how to get help for Nortel products and services.

Getting help from the Nortel web site

The best way to get technical support for Nortel products is from the Nortel Technical Support web site:

www.nortel.com/support

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. From this site, you can:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the phone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support web site, and you have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following web site to obtain the telephone number for your region:

www.nortel.com/callus

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

www.nortel.com/erc

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

About this document

This document is a global document. Contact your system supplier or your Nortel representative to verify that the hardware and software described is supported in your area.

Subject

This document contains description, installation, and administration information for the following:

- Nortel IP Audio Conference Phone 2033
- Nortel IP Phone 2001, IP Phone 2002, IP Phone 2004, and IP Phone 2007
- Nortel IP Phone Key Expansion Module (KEM)
- Nortel IP Softphone 2050
- Nortel Mobile Voice Client 2050 for Personal Digital Assistants (PDAs)
- Nortel IP Phone 1110
- Nortel IP Phone 1120E
- Nortel IP Phone 1140E
- Nortel IP Phone 1150E
- Nortel Expansion Module 1100

Note on legacy products and releases

This NTP contains information about systems, components, and features that are compatible with Nortel Communication Server 1000 Release 4.5

software. For more information on legacy products and releases, click the **Technical Documentation** link under **Support** on the Nortel home page:

<http://www.nortel.com>

Applicable systems

This document applies to the following systems:

- Communication Server 1000S (CS 1000S)
- Communication Server 1000M Chassis (CS 1000M CH)
- Communication Server 1000M Cabinet (CS 1000M CA)
- Communication Server 1000M Half Group (CS 1000M HG)
- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Communication Server 1000E (CS 1000E)
- Meridian 1 PBX 11C Chassis
- Meridian 1 PBX 11C Cabinet
- Meridian 1 PBX 51C
- Meridian 1 PBX 61C
- Meridian 1 PBX 81
- Meridian 1 PBX 81C

Note: When upgrading software, memory upgrades may be required on the Signaling Server, the Call Server, or both.

System migration

When particular Meridian 1 systems are upgraded to run CS 1000 Release 4.5 software and configured to include a Signaling Server, they

become CS 1000M systems. Table 1 lists each Meridian 1 system that supports an upgrade path to a CS 1000M system.

Table 1
Meridian 1 systems to CS 1000M systems

| This Meridian 1 system... | Maps to this CS 1000M system |
|----------------------------------|-------------------------------------|
| Meridian 1 PBX 11C CH | CS 1000M CH |
| Meridian 1 PBX 11C CA | CS 1000M CA |
| Meridian 1 PBX 51C | CS 1000M Half Group |
| Meridian 1 PBX 61C | CS 1000M Single Group |
| Meridian 1 PBX 81 | CS 1000M Multi Group |
| Meridian 1 PBX 81C | CS 1000M Multi Group |

For more information, see one or more of the following NTPs:

- *Communication Server 1000M and Meridian 1: Small System Upgrade Procedures* (553-3011-258)
- *Communication Server 1000M and Meridian 1: Large System Upgrade Procedures* (553-3021-258)
- *Communication Server 1000S: Upgrade Procedures* (553-3031-258)

Intended audience

This document is intended for individuals responsible for maintaining Internet Enabled systems.

Conventions

Terminology

In this document, the following systems are referred to generically as “system”:

- Communication Server 1000S (CS 1000S)

- Communication Server 1000M (CS 1000M)
- Communication Server 1000E (CS 1000E)
- Meridian 1

The following systems are referred to generically as “Small System”:

- Communication Server 1000M Chassis (CS 1000M CH)
- Communication Server 1000M Cabinet (CS 1000M CA)
- Meridian 1 PBX 11C Chassis
- Meridian 1 PBX 11C Cabinet

The following systems are referred to generically as “Large System”:

- Communication Server 1000M Half Group (CS 1000M HG)
- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 PBX 51C
- Meridian 1 PBX 61C
- Meridian 1 PBX 81
- Meridian 1 PBX 81C

Related information

This section lists information sources that relate to this document.

NTPs

The following NTPs and documents are referenced in this document:

- *IP Phone 2001 User Guide*
- *IP Phone 2002 User Guide*
- *IP Phone 2004 User Guide*
- *IP Phone 2007 User Guide*
- *IP Audio Conference Phone 2033 User Guide*

- *IP Phone 1110 User Guide*
- *IP Phone 1120E User Guide*
- *IP Phone 1140E User Guide*
- *Nortel Networks IP Phone Key Expansion Module User Guide*
- *Nortel Networks WLAN IP Telephony: Installation and Configuration (553-3001-304)*
- *Nortel Networks IP Softphone 2050 and Mobile Voice Client 2050 User Guide*
- *Data Networking for Voice over IP (553-3001-160)*
- *Signaling Server: Installation and Configuration (553-3001-212)*
- *IP Peer Networking: Installation and Configuration (553-3001-213)*
- *Secure Media Controller: Implementation Guide (553-3001-225)*
- *System Security Management (553-3001-302)*
- *Features and Services (553-3001-306)*
- *Software Input/Output: Administration (553-3001-311)*
- *IP Line: Description, Installation, and Operation (553-3001-365)*
- *Software Input/Output: Maintenance (553-3001-511)*

Online

To access Nortel documentation online, click the **Technical Documentation** link under **Support** on the Nortel home page:

<http://www.nortel.com>

CD-ROM

To obtain Nortel documentation on CD-ROM, contact your Nortel customer representative.

Nortel IP Phone 2001

Contents

This section contains information on the following topics:

| | |
|---|----|
| Introduction | 39 |
| Description | 40 |
| Components and functions | 41 |
| Supported features | 44 |
| Features not currently supported | 46 |
| Display characteristics | 46 |
| Key number assignments | 48 |
| Package components | 49 |
| Installation and Configuration | 51 |
| Full Duplex mode | 68 |
| Gratuitous Address Resolution Protocol Protection | 70 |
| Extensible Authentication Protocol | 70 |
| Reinstalling an IP Phone 2001 | 70 |
| Replacing an IP Phone 2001 | 72 |
| Removing an IP Phone 2001 from service | 72 |

Introduction

This section explains how to install and maintain the IP Phone 2001. For information on using the IP Phone 2001, see the *IP Phone 2001 User Guide*.

This section contains the following procedures:

- Procedure 1, “Configuring the IP Phone 2001” on page 52.
- Procedure 2, “Installing the IP Phone 2001 for the first time using manual configuration” on page 56.
- Procedure 3, “Installing an IP Phone 2001 for the first time using DHCP” on page 62.
- Procedure 4, “Enabling Full Duplex mode” on page 69.
- Procedure 5, “Checking Ethernet Statistics” on page 69.
- Procedure 6, “Changing the TN of an existing IP Phone 2001” on page 71.
- Procedure 7, “Replacing an IP Phone 2001” on page 72.
- Procedure 8, “Removing an IP Phone 2001 from service” on page 72.

Note: After an IP Phone has been installed and configured, if power to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 2001 uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 2001 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2001 network connection, and connection to the Communication Server 1000.

Figure 1 on [page 41](#) shows the IP Phone 2001.

Figure 1
IP Phone 2001



Components and functions

This section describes the following components and functions of the IP Phone 2001:

- Keys and functions
- Services menu

Keys and functions

Table 2 describes the IP Phone 2001 keys and functions.

Table 2
IP Phone 2001 keys and functions

| Key | Function |
|---|---|
| Speaker | Press the Line key to activate the speaker for on-hook dialing and listening. |
| Message waiting/ Incoming call indicator | The Message waiting lamp turns ON to indicate that a message has been left for the user. This lamp also flashes when the set ringer is ON. |
| Volume control bar | Use the volume control bar to adjust the volume of the Handset, Ringer, and On-hook Dialing/Listen tones. Press the right side of the rocker bar to increase volume; press the left side to decrease volume. |
| Navigation keys | Use the navigation keys to scroll through menus and lists in the display area. |
| Dial/Line key | Use the Line key to access the single line and activate on-hook dialing. No status icon or LED is provided. |
| Hold key | Press the Hold key to put an active call on hold. Press the Dial/Line key to return to the caller on hold. |
| Soft keys (self-labeled) | Soft keys (self-labeled) are located below the display area. The LCD label above the key changes, based on the active feature. Note: A triangle before a key label indicates that the key is active. |
| Message key | Press the Message key to access your voicemail box. |
| Goodbye key | Press the Goodbye key to terminate an active call. |

Services menu

Table 3 shows the Services menu.

Table 3
Services menu (Part 1 of 2)

| | |
|--------------|---|
| Services key | <p>Press the Services key to access the following items:</p> <ul style="list-style-type: none">• Telephone Options (see Notes 1 and 2):<ul style="list-style-type: none">— Volume adjustment— Contrast adjustment— Language— Date/Time— Local DialPad Tone— Set Info— Diagnostics— Ring type— Call Timer• Password Admin:<ul style="list-style-type: none">— Station Control Password• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured) <p>Press the Services key to exit from any menu or menu item.</p> <p>Note 1: Double-press the Services key to access Network diagnostic utilities. For more information on Network diagnostic utilities, see Appendix Appendix E:: “IP Phone diagnostic utilities” on page 525.</p> |
|--------------|---|

Table 3
Services menu (Part 2 of 2)

Note 1: If a call is presented while the user is manipulating information, the phone rings. However, the screen display is not updated with Caller ID and the programming text is not disturbed.

Note 2: The user can originate a call using Autodial or Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or Caller ID, and Autodial and Last Number Redial intercept the dialpad.

Supported features

The IP Phone 2001 supports the following telephony features:

- three soft keys providing access to a maximum of nine features

Note: Functions for the soft keys are configured in LD 11.

- volume control bar for adjusting ringer, speaker, handset, and headset volume
- two specialized feature keys:
 - Message/Inbox
 - Services
- two call-processing keys
 - Goodbye
 - Hold
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISTim Firmware Download

The IP Phone 2001 supports the following data network features:

- 10/100 Mbps Full Duplex mode

- automatic network configuration through DHCP
For more information about automatic network configuration, see Table 5, “IP Phone 2001 IP parameters,” on page 54.
- 802.1ab Link Layer Discovery Protocol (LLDP)
For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).
- Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, see “Features overview” on page 493.
- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 2
- Gratuitous Address Resolution Protocol (GARP) Protection

The IP Phone 2001 supports the following languages:

English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, Turkish

Features not currently supported

The following features are not supported on the IP Phone 2001:

- External three-port switch to support sharing LAN access with a PC or other data device is not provided. However, the IP Phone 2001 does provide 100 Mbps full-duplex support.
- Integrated switch
- Personal Directory, Call Log and Redial List are not supported. However, if the primary DN on an IP Phone 2001 is an MADN of an IP Phone 2002, IP Phone 2004, or IP Softphone 2050, Preferred Name Match and Idle Set Display (new call indication) are supported.
- Corporate Directory
- Automatic Call Distribution
- IP Key Expansion Modules
- Support of accessory modules
- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys
- Handsfree operation
- Headset support


Display characteristics

An IP Phone 2001 has two display areas:

- information line display
- soft key label display

Figure 2 on [page 47](#) shows these two display areas.

Figure 2
IP Phone 2001 display areas

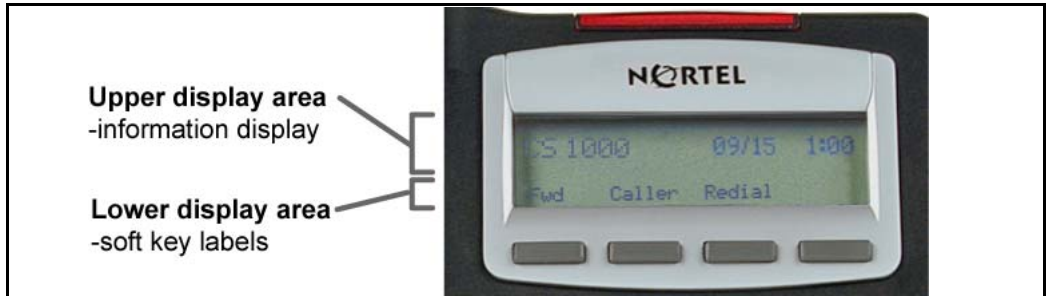

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone 2001. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Information Line display

An IP Phone 2001 has a one-line information display area with the following information:

- Caller Number
- Caller Name
- Feature prompt strings
- User-entered digits
- Date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)
- Set information

The information area changes, according to call processing state and active features.

Soft key label display

The soft key label has a maximum six characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the More soft key to navigate through the layers of functions. If there are only four functions assigned to the soft keys, the More key does not appear and all four functions are displayed.

Key number assignments

A maximum of nine functions can be assigned to the four soft-labeled, pre-defined soft keys. Because they are pre-defined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message key is numbered 16. Key numbers 17 to 31 are the four soft key labels below the display area. See Figure 1 on [page 41](#).

Key numbers 17 to 31 support the features A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RNP, SCC, SCU, SSC, SSU, and TRN. See Appendix Appendix I:: “IP Phone soft keys” on [page 619](#) for a description of these features.

Key number assignments at the Call Server are aligned with that of the IP Phone 2002. The mappings between IP Phone 2001 soft key numbers and PBX CPU key numbers are the same as on the IP Phone 2002 and IP Phone 2004.

Package components

The following information applies to Phase II IP Phones. Product codes for Phase II IP Phones are different from previous sets.

See the product code on the back of the phone to confirm whether it is a Phase II IP Phone. The product code for Phase II IP Phones appears as IP Phone 200x. The product code for previous versions of the IP Phones appears with an “i” in front of the model number; example, i200x.

The AC power adapter must be ordered separately if local power using the AC adapter is required, because Phase II IP Phones include integrated support for a number of power over LAN options, including support for IEEE 802.3af standard power.

Table 4 lists the IP Phone 2001 package components and product codes.

Table 4
IP Phone 2001 components list (Part 1 of 2)

| | |
|--|---------------------|
| IP Phone 2001 package contents include: | |
| <ul style="list-style-type: none"> • IP Phone 2001 • handset • handset cord • footstand • 7 ft. Cat5 Ethernet cable • Getting Started card | |
| IP Phone 2001(Ethergray) with Icon keycaps | NTDU90AA16/A0533387 |
| IP Phone 2001 (Ethergray) with English text label keycaps | NTDU90BA16/A0533388 |
| IP Phone 2001 (Charcoal) with Icon keycaps | NTDU90AA70/A0053389 |
| IP Phone 2001 (Charcoal) with English text label keycaps | NTDU90BA70/A0533390 |
| IP Phone 2001 (Charcoal with Bezel) with Icon keycaps | NTDU90AB70 |
| IP Phone 2001 (Charcoal with Bezel) with Icon keycaps (RoHS) | NTDU90AC70E6 |

Table 4
IP Phone 2001 components list (Part 2 of 2)

| | |
|--|--------------|
| IP Phone 2001 (Charcoal with Bezel) with English text label keycaps | NTDU90BB70 |
| IP Phone 2001 (Charcoal with Bezel) with English text label keycaps (RoHS) | NTDU90BC70E6 |
| Replacement parts | |
| 7 ft. Cat5 Ethernet Cable | A0648375 |
| Handset, Ethergray | A0788874 |
| Handset, Charcoal | A0758634 |
| Handset cord, Ethergray; for IP Phone 2004 and IP Phone 2001 | A088682 |
| Handset cord, Charcoal; for IP Phone 2004 and IP Phone 2001 | N0000764 |
| IP Phone 2001/2002/2004 Power Adapters | |
| Power transformer (117/120 VAC 50/60 Hz) (North America) | A0619627 |
| Power transformer 3-prong AC to AC, direct plug-in, 8W, 240 VAC, 50Hz to 16 VAC at 500 mA (Ireland and UK) | A0656598 |
| Power transformer AC to AC, direct plug-in, 8W, 230 VAC, 50/60 Hz, to 16 VAC at 500 mA (Europe) | A0619635 |
| Power transformer 2-prong wall plug direct plug-in AC to AC, 8W, 240 VAC, 50 Hz, to 16 VAC at 500 mA (Australia and New Zealand) | A0647042 |
| Power transformer AC to AC, direct plug-in, 8W, 100 VAC, 50 Hz, to 16 VAC at 500 mA | A0828858 |

For more information, and for information about previous versions of the IP Phone, contact your Nortel representative.

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 2001 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 2001
- Startup sequence
- Installing the IP Phone 2001

Before you begin

Before installing the IP Phone 2001, complete the following pre-installation checklist:

- Ensure there is one IP Phone 2001 boxed package for each IP Phone 2001 being installed. The package contains:
 - IP Phone 2001
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 2001 being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 4, “IP Phone 2001 components list,” on page 49.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Do not plug your IP Phone 2001 into an ISDN connection. Severe damage can result.

Configuring the IP Phone 2001

Use Procedure 1 on [page 52](#) to configure the IP Phone 2001 for the first time.

Procedure 1

Configuring the IP Phone 2001

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2 Configure the IP Phone 2001 on the Call Server using LD 11.

For more information, see *Software Input/Output: Administration* (553-3001-311).

- 3 Connect the IP Phone 2001 components:

- a. Connect one end of the handset cord to the handset jack on the back of the IP Phone identified with a handset icon.
- b. Connect the other end of the handset cord to the handset.


- 4 Connect one end of the CAT5 Ethernet cable to the network interface located on the back of the IP Phone (identified with a LAN icon, see Figure 3). The other end of the CAT5 Ethernet cable plugs into the IP network.

- 5 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable and then thread the adapter cord through the channels in the stand.
- 6 Secure the IP Phone footstand to the base of the IP Phone. Use the angle adjustment grip on the top back of the IP Phone to adjust the position.

**CAUTION****Damage to Equipment**

Do not plug any device into your IP Phone 2001 Ethernet port other than one PC.

Figure 3
IP Phone 2001 Ethernet network interface connections

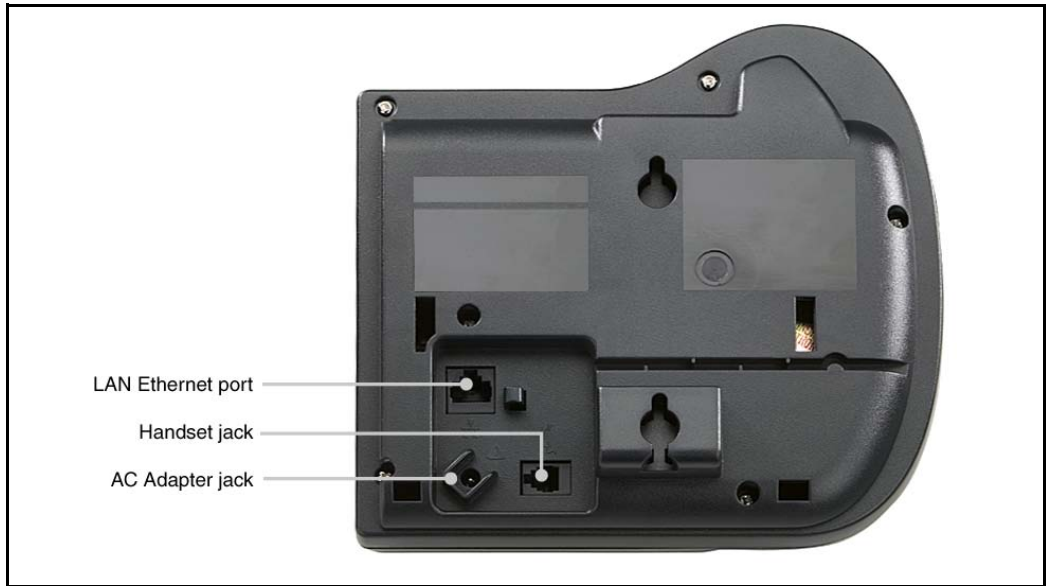

- 7
- Power the IP Phone 2001 using either the Power over Ethernet or an AC power transformer (local power). If you are using local power, plug the AC power transformer into the nearest power outlet. Make sure you use the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 4, “IP Phone 2001 components list,” on page 49.
- Note:** The IP Phone 2001 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 2. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.
- 8
- Use Procedure 2 on [page 56](#) to install the IP Phone 2001 for the first time using manual configuration, or use Procedure 3 on [page 62](#) to install the IP Phone 2001 for the first time using DHCP.

End of Procedure

Startup sequence

- When an IP Phone 2001 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:
- obtaining VLAN ID (if supported by the network infrastructure)
 - obtaining the IP parameters
 - connecting to the Call Server
 - obtaining a User ID

See Table 5 for a summary of the IP parameters and how they are obtained.

Table 5
IP Phone 2001 IP parameters (Part 1 of 2)

| Parameter | Method of Acquisition |
|------------|---|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically retrieved through Partial or Full DHCP. |

Table 5
IP Phone 2001 IP parameters (Part 2 of 2)

| Parameter | Method of Acquisition |
|---|---|
| Net Mask | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Default Gateway Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count — primary and secondary) | Manually entered or automatically retrieved through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Retrieved from local storage on subsequent power cycles. |

Installing the IP Phone 2001

To install the IP Phone 2001 for the first time using manual configuration, use Procedure 2. To install the IP Phone 2001 for the first time using DHCP, use Procedure 3 on [page 62](#).

Procedure 2
Installing the IP Phone 2001 for the
first time using manual configuration

IMPORTANT!

Timing information

There are only four seconds (s) between plugging in the IP Phone 2001 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 2001 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 At the prompt **EAP Enable?**, enter **1**-Yes (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **0**-No (0 for No), you will not be prompted to enter Device ID and Password.

For more information about EAP, see Appendix Appendix C:: "802.1x Port-based network access control" on [page 521](#).

- 2 At the prompt, **LLDP Enable?**, enter **1**-Y (1 for Yes, default), or **0**-N (0 for No).

For more information about LLDP, see Appendix Appendix D:: "802.1ab Link Layer Discovery Protocol" on [page 523](#).

- 3 At the prompt **DHCP Yes/No?**, enter **0-N** (0 for No). You are prompted to enter all parameters.

By default, Full DHCP is configured on the IP Phone 2001. Depending on the configuration requirements, you can change the IP Phone 2001 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 4 Enter the following information:

| Screen prompt | Description |
|---------------|-------------|
|---------------|-------------|

| | |
|---------|---|
| set IP | A valid IP Phone 2001 IP address. |
| net msk | A subnet mask. |
| def gw | The default Gateway for the IP Phone 2001 on the LAN segment to which the IP Phone 2001 is connected. |

- 5 Enter the information for the primary Connect Server (S1) and the secondary Connect Server (S2):
- | | |
|----------------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2001. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2001 attempts to connect to the server. Enter 10. |
| S1 PK | <p>Default is ffffffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set S1 PK to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | The secondary CS 1000 node IP address for the IP Phone 2001. |

| | |
|--------------------------|---|
| S2 Port | Same as S1 |
| S2 action | Same as S1 Note: You are not prompted for S2 PK if S2 Action is set to 1. |
| S2 retry count | Same as S1 |
| S2 PK | Default is ffffffff. The Private key of the alternate Secure Media Controller to which the IP Phone is connected. If you are using a Secure Media Controller, do the following: <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| Cfg XAS? (0-No,1-Yes) | Default 0 (for No) Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address. |
| XAS IP: | Enter the IP address of the XAS server. |
| VLAN Cfg? (0-No, 1-Yes) | |
| VLAN Cfg? 0-Auto, 1-Man: | 1-Man Enter the VLAN ID manually. This is a number between 1 and 4094. 0-Auto Automatically obtains VLAN ID using DHCP or the 802.1ab data switch. |

| | |
|---------------------------------|---|
| LLDP-MED? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.</p> <p>You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.</p> |
| LLDP VLAN? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>You are not prompted for LLDP VLAN if VLAN is not set to Auto (2-Auto), or if LLDP is not enabled.</p> |
| DHCP (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| Duplex? (0-Auto, 1-Full) | <p>Default 0 (for Auto)</p> |
| PSK SRTP? (0 for No, 1 for Yes) | <p>Default 0 (for No)</p> |
| GARP Ignore? (0-No,1-Yes) | <p>Default 0 (for No)\</p> |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2001 can support primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2001 saves the configuration and then reboots. The IP Phone 2001 searches for the connect server. When the connection is complete, proceed with step 6.

6 Enter the following information:

| Screen prompt | Description |
|---------------|--|
| Password | IP Phone Installer Password You are not prompted to enter the IP Phone Installer Password if it has not been configured in your system. |
| Node | The node ID. |
| TN | The TN or VTN. |

The IP Phone 2001 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Phone 2001 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

7 Check for dial tone and the correct DN above the display.

- 8 (Optional) Customize the feature keys as required. For more information, see *IP Phone 2001 User Guide*.

End of Procedure

Procedure 3
Installing an IP Phone 2001 for the first time
using DHCP

IMPORTANT!

Timing information

There are only four seconds(s) between plugging in the IP Phone 2001 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 2001 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
 - BkSpace—backspace a configuration entry to change it
 - Clear—clear an entire configuration entry
 - Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.
- 1 When the Nortel logo appears in the middle of the display, immediately press the four keys at the bottom of the display in sequence from left to right.
 - 2 At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **0-No** (0 for No), you will not be prompted to enter Device ID and Password.

For more information about EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

- 3** At the prompt, **LLDP Enable?**, enter **1-Y** (1 for Yes, default), or **0-N** (0 for No).

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 4** At the prompt **DHCP Yes/No?**, select **1-Y** (1 for Yes).

By default, Full DHCP is configured on the IP Phone 2001. Depending on the configuration requirements, you can change the IP Phone 2001 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 5** At the prompt, **Cached IP?**, select **0** (0-No, default) to conform to the DHCP standard and to obtain an IP address from the DHCP server. Only select **1** (1 for Yes) to force the IP Phone to start with a cached IP address in the event that the IP Phone cannot connect to the DHCP server and obtain an IP address.

- 6** Select **Partial** or **Full DHCP**.

- a.** If you select Full DHCP, then the following parameters are retrieved from the DHCP server:
- a valid IP Phone 2001 IP address
 - a subnet mask
 - the default Gateway for the IP Phone 2001 on the LAN segment to which it is connected

- the S1 IP. The primary CS 1000 node IP address of the IP Phone.
 - the S1 action
 - the S1 retry count. This is the number of times the IP Phone 2001 attempts to connect to the server
 - the S2 IP. The secondary CS 1000 node IP address of the IP Phone.
 - the S2 action
 - the S2 retry count
- b.** If you select Partial DHCP, then you must enter the following parameters:

| Screen prompt | Description |
|----------------|---|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2001. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | Choose one of the following: <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if the S1 action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2001 attempts to connect to the server. Enter 10. |

| | |
|-----------------------|--|
| S1 PK | <p>Default is ffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address for the IP Phone 2001.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if the S2 action is set to 1.</p> |
| S2 retry count | <p>Same as S1</p> |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| Cfg XAS? (0-No,1-Yes) | <p>Default 0 (for No)</p> <p>Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address.</p> |
| XAS IP: | <p>Enter the IP address of the XAS server.</p> |

7 Enter the following parameters:

VLAN Cfg? (0-No, 1-Yes)

VLAN Cfg? 0-Auto, 1-Man:

1-Man

Enter the VLAN ID manually. This is a number between 1 and 4094.

0-Auto

Automatically obtains VLAN ID using DHCP, or the 802.1ab data switch.

LLDP-MED? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.

You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.

LLDP VLAN? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.

You are not prompted for LLDP VLAN if VLAN is not set to Auto (2-Auto), or if LLDP is not enabled.

DHCP (0-No, 1-Yes)

If you select 1 (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.

You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.

| | |
|---------------------------------|---|
| VLANFILTER (0-No, 1-Yes) | Default 0 (0 for No) You are not prompted for VLANFILTER if VLAN is not enabled. |
| Duplex? (0-Auto, 1-Full) | Default 0 (for Auto) |
| PSK SRTP? (0 for No, 1 for Yes) | Default 0 (for No) |
| GARP Ignore? (0-No,1-Yes) | Default 0 (for No) |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2001 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2001 saves the configuration and then reboots. The IP Phone 2001 searches for the connect server. When the connection is complete, proceed to step 8.

8 Enter the following information:

| Screen prompt | Description |
|---------------|--|
| Password | IP Phone Installer Password You are not prompted to enter the IP Phone Installer Password if it has not been configured in your system. |
| Node | The node ID |
| TN | The TN or VTN |

The IP Phone 2001 registers with the TPS and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Phone 2001 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 9 Check for dial tone and the correct DN above the display.
- 10 (Optional) Customize the feature keys as required. For more information, see *IP Phone 2001 User Guide*.

End of Procedure

Full Duplex mode

In the Configuration menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 4 on [page 69](#) to enable Full Duplex mode.

Procedure 4 **Enabling Full Duplex mode**

- 1** Reset the phone by disconnecting and re-connecting power.
- 2** When the Nortel logo appears, press each of the soft keys in sequence. See Procedure 2 on [page 56](#).
- 3** If no other configuration changes are required, press **OK** repeatedly until the Duplex network option appears.
- 4** Select 1 to enable Full Duplex mode.
- 5** When the Speed option appears, select one of the following:
 - 0 for 10 Mbps
 - 1 for 100 Mbps (default)
- 6** Select **OK** to confirm the change.
- 7** Restart the IP Phone 2001. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 5 to confirm activation of Full Duplex mode.

Procedure 5 **Checking Ethernet Statistics**

- 1** Double-click the **Services** key. The Network Diagnostics menu appears.
- 2** Select **Ethernet Statistics**.
 - If Full Duplex mode is active, the following is displayed:
 - Link: UP
 - Duplex: Full
 - Speed: 10 (Mb) or 100(Mb)

- Auto-Negotiate Capability: N
- Auto-Negotiate Completed: N

End of Procedure

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 2001 from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim's machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim's machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 1, “Configuring the IP Phone 2001” on page 52 or Procedure 1, “Installing an IP Phone 2001 for the first time using DHCP” on page 62.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Reinstalling an IP Phone 2001

You can reinstall an existing previously configured IP Phone 2001 on the same system. For example, the IP Phone 2001 can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 2001.

Procedure 6**Changing the TN of an existing IP Phone 2001**

- 1 Repower the IP Phone 2001.

Note: During the reboot sequence of a previously configured Internet Telephone, the IP Phone 2001 displays the existing node number for approximately five seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |

- 4 Enter password at the password screen, and press **OK**.

A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 2001

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 2001 that is currently using the TN.

Procedure 7 **Replacing an IP Phone 2001**

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 2001 that you want to replace.
- 3 Follow Procedure 1 on [page 52](#) and Procedure 1 on [page 52](#) or Procedure 3 on [page 62](#) to install and configure the IP Phone 2001.
- 4 Enter the same TN and Node Number as the IP Phone 2001 you replaced. The system associates the new IP Phone 2001 with the existing TN.

End of Procedure

Removing an IP Phone 2001 from service

Procedure 8 **Removing an IP Phone 2001 from service**

- 1 Disconnect the IP Phone 2001 from the network or turn off the power.

 If the IP Phone 2001 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.
- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 2004

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 74 |
| Description | 74 |
| Components and functions | 75 |
| Supported features | 79 |
| Features not currently supported | 82 |
| Key number assignments | 84 |
| Package components | 85 |
| Installation and Configuration | 87 |
| Full Duplex mode | 107 |
| Gratuitous Address Resolution Protocol Protection | 108 |
| Extensible Authentication Protocol | 109 |
| Reinstalling an IP Phone 2004 | 109 |
| Replacing an IP Phone 2004 | 110 |
| Removing an IP Phone 2004 from service | 111 |

Introduction

This section explains how to install and maintain the IP Phone 2004. For information on using the IP Phone 2004, see the *IP Phone 2004 User Guide*.

This section contains the following procedures:


- Procedure 9, “Configuring the IP Phone 2004” on page 89.
- Procedure 10, “Installing the IP Phone 2004 for the first time using manual configuration” on page 93.
- Procedure 11, “Installing an IP Phone 2004 for the first time using DHCP” on page 100.
- Procedure 12, “Enabling Full Duplex mode” on page 107.
- Procedure 13, “Checking Ethernet Statistics” on page 108.
- Procedure 14, “Changing the TN of an existing IP Phone 2004” on page 109.
- Procedure 15, “Replacing an IP Phone 2004” on page 110.
- Procedure 16, “Removing an IP Phone 2004 from service” on page 111.

Note: After an IP Phone has been installed and configured, if power is to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 2004 uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 2004 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2004 network connection, and connection to the Communication Server 1000.

Figure 4 on [page 75](#) shows the IP Phone 2004.

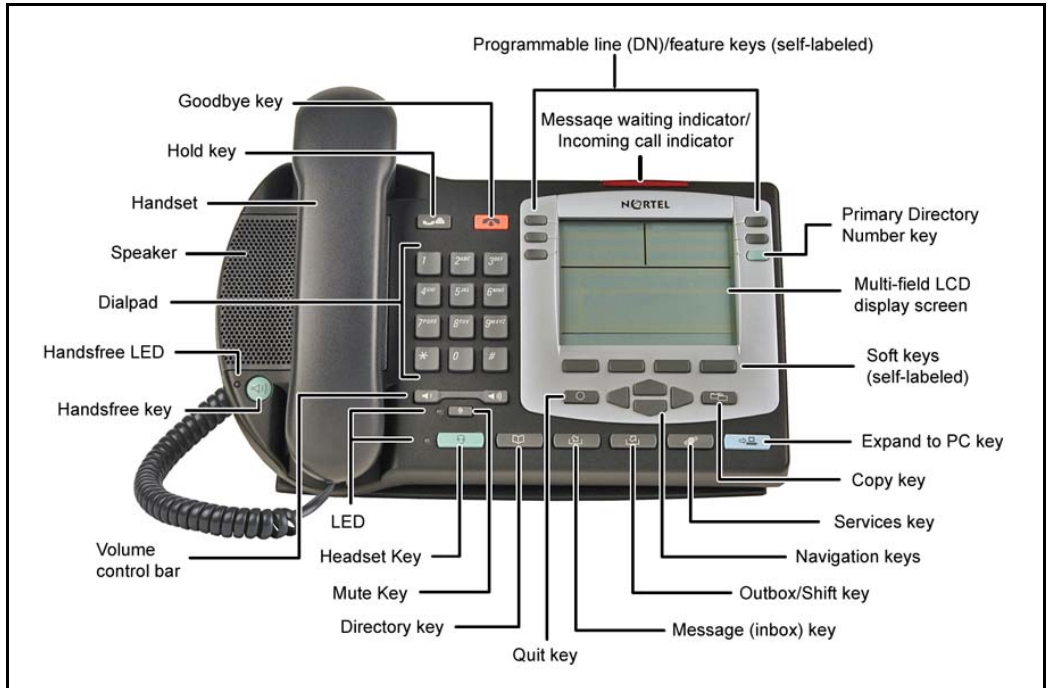Figure 4
IP Phone 2004

Components and functions

This section describes the following components and functions of the IP Phone 2004:

- Keys and functions
- Services menu

Keys and functions

Table 6 shows the IP Phone 2004 keys and functions.

Table 6
IP Phone 2004 keys and functions (Part 1 of 2)

| Key | Function |
|---|---|
| Hold | Press the Hold key to put an active call on hold. Press the line (DN) key beside the flashing LCD to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Message waiting light/ Incoming call indicator | The Message waiting indicator turns ON to indicate that a message has been left for the user. This indicator also flashes when the set ringer is ON. |
| Programmable line(DN)/ feature keys (self- labeled) | <p>Programmable line(DN)/feature keys (self-labeled) are configured for various features on the IP Phones.</p> <p>A steady LCD light beside a line (DN) key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed.</p> |
| Soft keys (self-labeled) | <p>Soft keys (self-labeled) are located below the display area. The LCD label above the key changes, based on the active feature.</p> <p>Note: A triangle before a key label indicates that the key is active.</p> |
| Fixed feature keys | Use these keys to access non-programmable standard features. |
| Expand to PC | The Expand to PC key is used to access external server applications such as External Application Server. |
| Copy | A fixed key reserved for future feature development. An audible non-working tone is generated along with a display message. |
| Navigation keys | Use the navigation keys to scroll through menus and lists in the display area. |
| Shift | Press the Shift key to toggle between two feature key pages and access an additional six lines/features. |
| Inbox (Message) | Press the Message (Inbox) key to access your voice mailbox. |

Table 6
IP Phone 2004 keys and functions (Part 2 of 2)

| Key | Function |
|--------------------|---|
| Quit | <p>Press the Quit key to end an active application.</p> <p>Pressing the Quit key does not affect the status of the calls currently on your IP Phone.</p> |
| Directory | <p>Press the Directory key to access Directory services.</p> |
| Mute | <p>Press the Mute key to listen to the receiving party without transmitting.</p> <p>Press the Mute key again to return to a two-way conversation.</p> <p>The Mute key applies to Handsfree, Handset, and Headset microphones.</p> <p>The Mute LED flashes when the Mute option is in use.</p> |
| Headset | <p>Press the Headset key to answer a call using the headset or to switch a call from the handset or Handsfree to the headset.</p> |
| Volume control bar | <p>Use the Volume control bar to adjust the volume of the handset, headset, speaker, ringer, and Handsfree feature.</p> <p>Press the right side of the rocker bar to increase volume, the left side to decrease volume.</p> |
| Handsfree key | <p>Press the Handsfree key to activate handsfree.</p> <p>The LED lights to indicate when the handsfree feature is active.</p> |

Services menu

Table 7 shows the Services menu.

Table 7
Services menu

| | |
|--------------|---|
| Services key | Press the Services key to access the following items: |
| | <ul style="list-style-type: none">• Telephone Options (see Notes 1 and 2):<ul style="list-style-type: none">— Volume Adjustment— Contrast Adjustment— Language— Date/Time Format— Display diagnostics— Local Dialpad Tone— Ring type— Call Timer— OnHook Default Path— Change Feature Key Label— Set Info• Password Administration• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured) |

Table 7
Services menu

Double-press the Services key to access Network diagnostic utilities. For more information on Network diagnostic utilities, see Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

Note 1: If a call is presented while the user is manipulating an option, the IP Phone 2004 rings and the DN key flashes. However, the screen display is not updated with Caller ID information. The programming text is not disturbed.

Note 2: The user can originate a call using Autodial or Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or the Caller ID, and Autodial and Last Number Redial intercept the dialpad.

Supported features

The IP Phone 2004 supports the following telephony features:

- six programmable line (DN)/feature keys (self-labeled)
- four soft keys (self-labeled) providing access to a maximum of nine features

Note: Functions for the soft keys are configured in LD 11.

- volume control bar for adjusting ringer, speaker, handset, and headset volume
- six specialized feature keys:
 - Quit
 - Directory
 - Message/Inbox
 - Shift/Outbox
 - Services
 - Copy
- six call-processing fixed keys:
 - Mute

- Handsfree
- Goodbye
- Expand to PC
- Headset
- Hold
- Call Duration Timer
- ability to change the user-defined feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 2004 supports the following data network features:

- integrated switch for shared PC access
 - the LAN Ethernet port supports 10/100BT Mbps Full Duplex mode
 - the PC Ethernet port supports 10/100BT Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 9, “IP Phone 2004 IP parameters,” on page 92.

- 802.1ab Link Layer Discovery Protocol (LLDP)

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, see “Features overview” on page 493.
- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 2
- Gratuitous Address Resolution Protocol (GARP) Protection

The IP Phone 2004 supports the following user interface features:

- External Application Server (XAS)
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, and Turkish
- IP Key Expansion module

Features not currently supported

The following features are not supported on the IP Phone 2004:

- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys

Central Answering Position

The Central Answering Position (CAP) operates as an Automatic Call Distribution (ACD) agent on the IP Phone 2004. A CAP provides call-handling features, such as transferring a call, parking a call, and answering a call. You can add an IP Phone Key Expansion Module (KEM) to provide additional lines and features, Direct Station Select, and Busy Lamp Field functionality.

For further information about Central Answering Position, see *Central Answering Position Implementation Guide* (NN43011-501).


Display characteristics

An IP Phone 2004 has three major display areas:

- programmable line (DN)/feature key label
- information line
- soft key label

Figure 6 shows the three display areas.

Figure 5
IP Phone 2004 display areas.

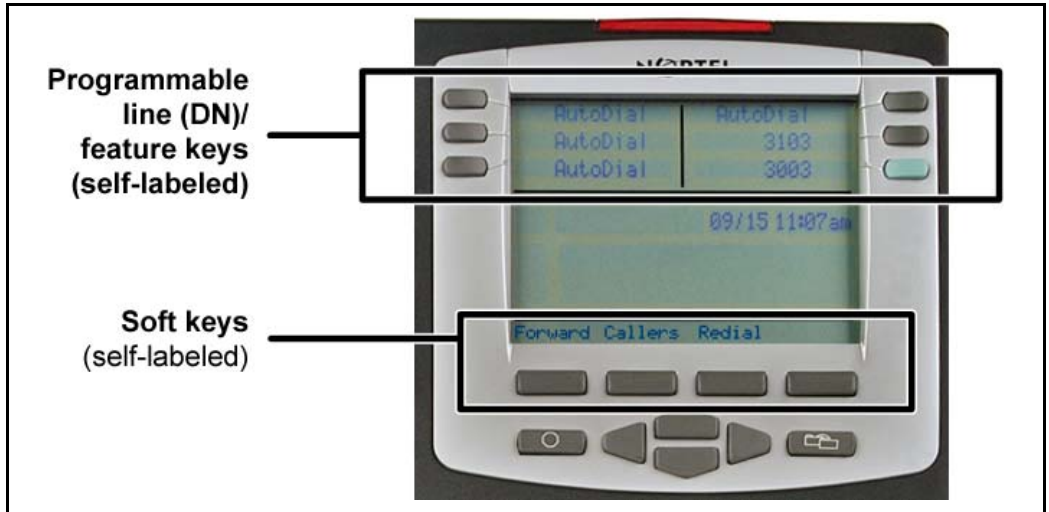

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Programmable line (DN)/ feature key label display

The feature key label area displays a ten-character string for each of the four feature keys. Each feature key includes the key label and an icon. The icon state can be on, off, or flashing. A telephone icon displays the status of the configured DN. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen.

Note: If a label is longer than ten characters, the last ten characters are displayed, and the excess characters are deleted from the beginning of the string.

Information line display

An IP Phone 2004 has a three-line information display area with the following information:

- caller number
- caller name
- feature prompt strings
- user-entered digits
- date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Soft key label display

The soft key label has a maximum six characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the More soft key to navigate through the layers of functions. If there are only four functions assigned to the soft keys, the More key does not appear and all four functions are displayed.

Key number assignments

A maximum of nine functions can be assigned to the four soft-labeled, predefined soft keys. Because they are pre-defined, the user cannot change

the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message key is numbered 16. Key numbers 17 to 31 are the four soft-key labels below the display area. See Figure 5 on [page 83](#).

Key numbers 17 to 31 support the features A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RNP, SCC, SCU, SSC, SSU, and TRN. See Appendix Appendix I:: “IP Phone soft keys” on [page 619](#) for a description of these features.

Package components

The following information applies to Phase II IP Phones. Product codes for Phase II IP Phones are different from previous sets.

See the product code on the back of the phone to confirm whether it is a Phase II IP Phone. The product code for Phase II IP Phones appears as IP Phone 200x. The product code for previous versions of the IP Phone appears with an i in front of the model number (for example, i200x).

The AC power adapter must be ordered separately if local power using the AC adapter is required, because Phase II IP Phones include integrated support for a number of power over LAN options, including support for IEEE 802.3af standard power.

Table 8 lists the IP Phone 2004 package components and product codes.

Table 8
IP Phone 2004 component list (Part 1 of 2)

| | |
|--|---------------------|
| IP Phone 2004 package contents includes <ul style="list-style-type: none"> • IP Phone 2004 • handset • handset cord • footstand • 7 ft. Ethernet cable • Getting Started card | |
| IP Phone 2004 (Ethergray) with Icon keycaps | NTDU92AA16/A0533408 |
| IP Phone 2004 (Ethergray) with English text label keycaps | NTDU92BA16/A0533409 |
| IP Phone 2004 (Charcoal) with Icon keycaps | NTDU92AA70/A0533410 |
| IP Phone 2004 (Charcoal) with English text label keycaps | NTDU92BA70/A0533411 |
| IP Phone 2004 (Charcoal) with English text label keycaps | NTDU91BA70/A0533407 |
| IP Phone 2004 (Charcoal with Bezell) with Icon keycaps | NTDU92AB70 |
| IP Phone 2004 (Charcoal with Bezell) with Icon keycaps (RoHS) | NTDU92AC70E6 |
| IP Phone 2004 (Charcoal with Bezell) with English text label keycaps | NTDU92BB70 |
| IP Phone 2004 (Charcoal with Bezell) with English text label keycaps (RoHS) | NTDU92BC70E6 |
| IP Phone 2004 wall mount kit (Charcoal), used with Ethergray and Charcoal models | NTMN15BA70/A0503076 |
| Replacement parts | |
| 7 ft. Ethernet Cat5 cable | A0648375 |
| Handset (Ethergray) | A0788874 |

Table 8
IP Phone 2004 component list (Part 2 of 2)

| | |
|--|----------|
| Handset (Charcoal) | A0758634 |
| Handset cord (Ethergray) | A0788682 |
| Handset cord (Charcoal) | N0000764 |
| Footstand (Charcoal), used for Ethergray and Charcoal models | A0538587 |
| IP Phone 2004 Power Adaptors | |
| Power transformer (117/120 VAC 50/60 Hz) (North America) | A0619627 |
| Power transformer 3-prong AC to AC, direct plug-in, 8W, 240 VAC, 50Hz to 16 VAC at 500 mA (Ireland and UK) | A0656598 |
| Power transformer AC to AC, direct plug-in, 8W, 230 VAC, 50/60 Hz, to 16 VAC at 500 mA (Europe) | A0619635 |
| Power transformer 2-prong wall plug direct plug-in AC to AC, 8W, 240 VAC, 50 Hz, to 16 VAC at 500 mA (Australia and New Zealand) | A0647042 |
| Power transformer AC to AC, direct plug-in, 8W, 100 VAC, 50 Hz, to 16 VAC at 500 mA | A0828858 |

For more information, and for information about previous versions of the IP Phone, contact your Nortel representative.

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 2004 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 2004

- Startup sequence
- Installing the IP Phone 2004

Before you begin

Before installing the IP Phone 2004, complete the following pre-installation checklist:

- Ensure there is one IP Phone 2004 boxed package for each IP Phone 2004 being installed. The package contains:
 - IP Phone 2004
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 2004 being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 8, “IP Phone 2004 component list,” on page 86.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Do not plug your IP Phone 2004 into an ISDN connection. Severe damage can result.

Configuring the IP Phone 2004

Procedure 9 to configure the IP Phone 2002 for the first time.

Procedure 9 **Configuring the IP Phone 2004**

- 1** Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2** Configure the IP Phone 2004 on the Call Server using LD 11.

For more information, see *Software Input/Output: Administration* (553-3001-311).

- 3** Connect the IP Phone 2004 components:

- a.** Connect one end of the handset cord to the handset jack on the back of the IP Phone (identified with a handset icon).
- b.** Connect the other end of the handset cord to the handset.

- 4** Choose one of the following connections:

- For an IP Phone not sharing a LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the LAN Ethernet port located on the back of the IP Phone 2004 (identified with a LAN icon). The other end of the CAT5 Ethernet cable plugs into the IP network.

For an IP Phone sharing a LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the LAN Ethernet port located on the back of the IP Phone (identified with a LAN icon, see Figure 6) and the other end to the IP network. Insert one end of a second CAT5 Ethernet cable into the PC Ethernet port located on the back of the IP Phone (identified with a PC icon, see Figure 6) and the other end into the computer.




CAUTION

Damage to Equipment

Do not plug any device into your IP Phone 2004 Ethernet port other than one PC. The IP Phone 2004 does not support multiple devices connected through the PC Ethernet port.

Figure 6
IP Phone 2004 Ethernet network connections

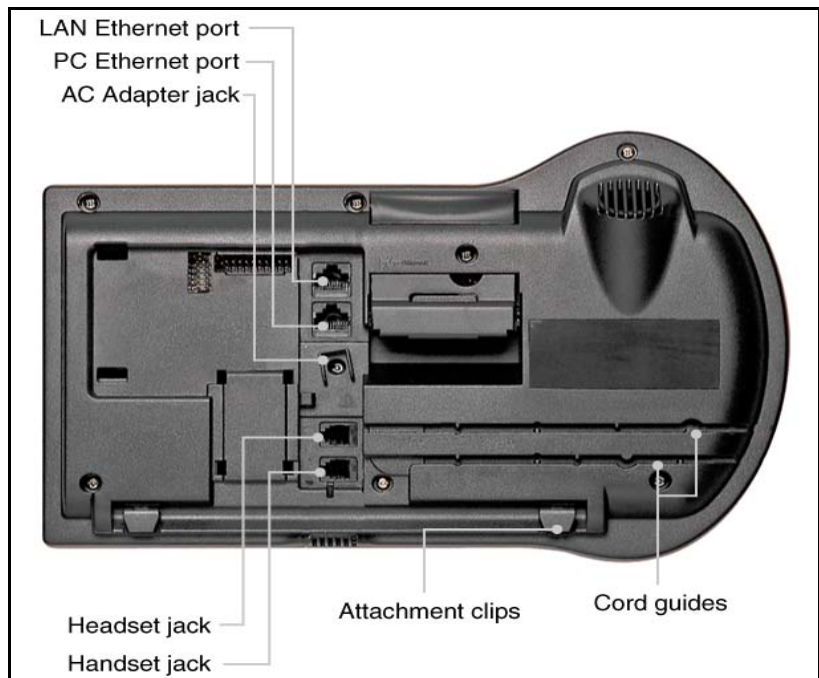

- 5 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable and then thread the adapter cord through the channels in the stand.
- 6 Secure the IP Phone footstand to the base of the IP Phone. Use the angle adjustment grip on the top back of the IP Phone to adjust the position.
- 7 Power the IP Phone 2002 using either the Power over Ethernet or an AC power transformer (local power). If you are using local power, plug the AC power transformer into the nearest power outlet. Make sure you use the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 8, "IP Phone 2004 component list," on page 86.

Note: The IP Phone 2004 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 2. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

- 8 Use Procedure 10 on [page 93](#) to install the IP Phone 2004 for the first time using manual configuration, or use Procedure 11 on [page 100](#) to install the IP Phone 2004 for the first time using DHCP.

End of Procedure

Startup sequence

When an IP Phone 2004 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 9 for a summary of the IP parameters and how they are obtained.

Table 9
IP Phone 2004 IP parameters

| Parameter | Method of Acquisition |
|---|---|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Default Gateway Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count — primary and secondary) | Manually entered or automatically retrieved through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Retrieved from local storage on subsequent power cycles. |

Installing the IP Phone 2004

To install the IP Phone 2004 for the first time using manual configuration, use Procedure 10 on [page 93](#). To install the IP Phone 2004 for the first time using DHCP, use Procedure 11 on [page 100](#).

Procedure 10
Installing the IP Phone 2004 for the
first time using manual configuration

IMPORTANT!

Timing information

There are only four seconds (s) between plugging in the IP Phone 2004 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 2004 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 When the Nortel logo appears in the middle of the display, immediately press the four soft keys at the bottom of the display in sequence from left to right.
- 2 At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **No**, you will not be prompted to enter Device ID and Password.

For more information on EAP, see Appendix Appendix C:: "802.1x Port-based network access control" on [page 521](#).

- 3 At the prompt, **LLDP Enable?**, enter **1-Y** (1 for Yes, default), or **0-N** (0 for No).

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 4 At the prompt **DHCP Yes/No?**, enter **0-N** (0 for No).

By default, Full DHCP is configured on the IP Phone 2004. Depending on the configuration requirements, you can change the IP Phone 2004 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 5 Enter the following information:

| Screen prompt | Description |
|---------------|---|
| set IP | a valid IP Phone 2004 IP address |
| net msk | a subnet mask |
| def gw | the default Gateway for the IP Phone 2004 on the LAN segment to which it is connected |

- 6** Enter the information for the primary Connect Server (S1) and the secondary Connect Server (S2):

| Screen prompt | Description |
|----------------------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2004. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2004 attempts to connect to the server. Enter 10. |
| S1 PK | <p>Default is ffffffffffffffff.</p> <p>The Private key of the SMC to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | The secondary CS 1000 node IP address for the IP Phone 2004. |

| | |
|--------------------------|---|
| S2 Port | Same as S1 |
| S2 action | Same as S1 |
| S2 retry count | <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> <p>Same as S1</p> |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none"> • Set to 6 or 1. • Enter a 16-digit hexadecimal number. |
| Cfg XAS? (0-No,1-Yes) | <p>Default 0 (for No).</p> <p>Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address.</p> |
| XAS IP: | Enter the IP address of the XAS server. |
| VLAN Cfg? (0-No, 1-Yes) | |
| VLAN Cfg? 0-Auto, 1-Man: | <p>1-Man</p> <p>Enter the VLAN ID manually. This is a number between 1 and 4094.</p> <p>0-Auto</p> <p>Automatically obtains VLAN ID using DHCP or the 802.1ab data switch.</p> |

| | |
|--------------------------|---|
| LLDP-MED? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.</p> <p>You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.</p> |
| LLDP VLAN? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>You are not prompted for LLDP VLAN if VLAN is not set to Auto (2- Auto), or if LLDP is not enabled.</p> |
| DHCP (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| PC Port? (1-ON, 0-OFF) | <p>Default</p> |
| Data VLAN? (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), and if LLDP is enabled, the Data VLAN Cfg prompt appears on the display.</p> <p>This prompt is not displayed if the PC port prompt is set to OFF.</p> |

| | |
|---------------------------|---|
| Data VLAN Cfg? (0-A, 1-M) | <p>If you select 0 (0 for A), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>This prompt is not displayed if Data VLAN, or LLDP is not enabled.</p> |
| Data VLAN ID: | <p>This prompt is displayed if Data VLAN is enabled but LLDP is not enabled.</p> |
| Duplex? (0-Auto, 1-Full) | Default 0 (for Auto) |
| PSK SRTP? (0-No, 1-Yes) | Default 0 (for No) |
| GARP Ignore? (0-No,1-Yes) | Default 0 (for No) |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2004 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2004 searches for the connect server. When the connection is complete, proceed with step 7.

7 Enter the following information

| Screen prompt | Description |
|---------------|---|
| Password | IP Phone Installer Password You are not prompted to enter the IP Phone Installer Password if it has not been configured in your Call Server. |
| Node | The node ID. |
| TN | The TN or VTN. |

The IP Phone 2004 registers with the TPS and, if needed, begins the firmware download. This takes several minutes. When registration is complete, the IP Phone 2004 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

8 Check for dial tone and the correct DN above the display.**9** (Optional) Customize the feature keys as required. For more information, see *IP Phone 2004 User Guide*.

End of Procedure

Procedure 11**Installing an IP Phone 2004 for the first time
using DHCP****IMPORTANT!****Timing information**

There are only four seconds (s) between plugging in the IP Phone 2004 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 2004 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: “IP Phone diagnostic utilities” on [page 525](#).

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 When the Nortel logo appears in the middle of the display, immediately press the four feature keys at the bottom of the display in sequence from left to right.
- 2 At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

Note: If you select **No**, you will not be prompted to enter Device ID and Password.

For more information on EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

- 3** At the prompt, **LLDP Enable?**, enter 1-Y (1 for Yes, default), or 0-N (0 for No).

For more information about LLDP, see Appendix Appendix D: "802.1ab Link Layer Discovery Protocol" on [page 523](#).

- 4** At the prompt **DHCP Yes/No?**, enter 1-Y (1 for Yes).

By default, Full DHCP is configured on the IP Phone 2004. Depending on the configuration requirements, you can change the IP Phone 2004 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 5** At the prompt, **Cached IP?**, select 0 (0-No, default) to conform to the DHCP standard and to obtain an IP address from the DHCP server. Only select 1 (1 for Yes) to force the IP Phone to start with a cached IP address in the event that the IP Phone cannot connect to the DHCP server and obtain an IP address.

- 6** Select Partial or Full DHCP.

- a.** If you select Full DHCP, then the following parameters are retrieved from the DHCP server:
- a valid IP Phone 2004 IP address
 - a subnet mask
 - the default Gateway for the IP Phone 2004 on the LAN segment to which it is connected
 - the S1IP. The primary CS 1000 node IP address of the IP Phone.
 - the S1 Action

- the S1 retry count. This is the number of times the IP Phone attempts to connect to the server
- the S2 IP. The secondary CS 1000 node IP address of the IP Phone.
- the S2 Action
- the S2 retry count
- the External Application Server (XAS) IP address

b. If you select Partial DHCP, then you must enter the following parameters:

| Screen prompt | Description |
|----------------|---|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2004. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none"> • for TPS only, enter 1 • for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2004 attempts to connect to the server. Enter 10. |

| | |
|----------------|--|
| S1 PK | <p>Default is ffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address for the IP Phone 2004.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> |
| S2 retry count | <p>Same as S1</p> |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |

Cfg XAS? (0-No,1-Yes)

Default 1 (for Yes)

Note: If there is no External Application Server (XAS), enter 0 (for No). You will not be prompted to enter the XAS IP address.

XAS IP:

Enter the IP address of the XAS server.

7 Enter the following parameters:

Screen prompt

Description

VLAN Cfg? (0-No, 1-Yes)

VLAN Cfg? 0-Auto, 1-Man:

1-Man

Enter the VLAN ID manually. This is a number between 1 and 4094.

0-Auto

Automatically obtains VLAN ID using DHCP or the 802.1ab data switch.

LLDP-MED? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.

You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto), or if LLDP is not enabled.

LLDP VLAN? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.

You are not prompted for LLDP VLAN if VLAN is not set to Auto (2- Auto), or if LLDP is not enabled.

| | |
|---------------------------|--|
| DHCP (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| PC Port? (1-On, 0-Off) | <p>Default (1 for On)</p> |
| Data VLAN? (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), and if LLDP is enabled, the Data VLAN Cfg prompt appears on the display.</p> <p>This prompt is not displayed if the PC port prompt is set to OFF.</p> |
| Data VLAN Cfg? (0-A, 1-M) | <p>If you select 0 (0 for A), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>This prompt is not displayed if Data VLAN, or LLDP is not enabled.</p> |
| Data VLAN ID: | <p>This prompt is displayed if Data VLAN is enabled but LLDP is not enabled.</p> |
| Duplex? (0-Auto, 1-Full) | <p>Default 0 (for Auto)</p> |
| PSK SRTP? (0-No, 1-Yes) | <p>Default 0 (for No)</p> |
| GARP Ignore? (0-No,1-Yes) | <p>Default 0 (for No)</p> |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2004 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2004 searches for the connect server. When the connection is complete, proceed to step 8.

- 8** Enter the following information:

| Screen prompt | Description |
|---------------|--|
| Password | IP Phone Installer Password |
| | You are not prompted to enter the IP Phone Installer Password if it has not been configured in your Call Server. |
| Node | The node ID |
| TN | The TN or VTN |

The IP Phone 2004 registers with the TPS and, if needed, will begin the firmware download. This takes several minutes. When the download is complete, the IP Phone 2004 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 9** Check for dial tone and the correct DN above the display.

- 10** (Optional) Customize the feature keys as required. For more information, see *IP Phone 2004 User Guide*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 12 to enable Full Duplex mode.

Procedure 12 **Enabling Full Duplex mode**

- 1** Reset the IP Phone 2004 by disconnecting and reconnecting power.
- 2** When the Nortel logo appears in the middle of the display, press each of the soft keys in sequence. See Procedure 11 on [page 100](#).
- 3** If no other configuration changes are required, press **OK** repeatedly until the Duplex network option appears.
- 4** Select 1 to enable Full Duplex mode.

- 5 When the Speed option appears, select one of the following:
 - 0 for 10 Mbps
 - 1 for 100 Mbps (default)
- 6 Select **OK** to confirm the change.
- 7 Restart the IP Phone 2004. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 13 to confirm activation of Full Duplex mode.

Procedure 13**Checking Ethernet Statistics**

- 1 Double-click the **Services** key. The Network Diagnostics menu appears.
- 2 Select **Ethernet Statistics**.
 - If Full Duplex mode is active, the following is displayed:
 - Link: UP
 - Duplex: Full
 - Speed: 10 (Mb) or 100(Mb)
 - Auto-Negotiate Capability: N
 - Auto-Negotiate Completed: N

End of Procedure

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 2004 from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages,

thus manipulating the ARP table of the victim's machine. The malicious device also launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim's machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 9, "Configuring the IP Phone 2004" on page 89 or Procedure 9, "Installing an IP Phone 2004 for the first time using DHCP" on page 100.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: "802.1x Port-based network access control" on [page 521](#).

Reinstalling an IP Phone 2004

You can reinstall an existing previously configured IP Phone 2004 on the same Call Server. For example, the IP Phone 2004 can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 2004.

Procedure 14

Changing the TN of an existing IP Phone 2004

- 1 Repower the IP Phone 2004.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 2004 displays the existing node number for approximately five seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.

- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |

- 4 Enter the password at the password screen, and press **OK**.

A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 2004

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 2004 that is currently using the TN.

Procedure 15 Replacing an IP Phone 2004

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 2004 that you want to replace.
- 3 Follow Procedure 9 on [page 89](#) or Procedure 11 on [page 100](#) to install and configure the IP Phone 2004.

- 4 Enter the same TN and Node Number as the IP Phone 2004 you replaced. The Call Server associates the new IP Phone 2004 with the existing TN.

End of Procedure

Removing an IP Phone 2004 from service

Procedure 16

Removing an IP Phone 2004 from service

- 1 Disconnect the IP Phone 2004 from the network or turn the power off.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 2004.

If the IP Phone 2004 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 2002

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 114 |
| Description | 114 |
| Components and functions | 115 |
| Supported features | 119 |
| Features not currently supported | 122 |
| Display characteristics | 122 |
| Key number assignments | 124 |
| Package components | 125 |
| Installation and Configuration | 127 |
| Full Duplex mode | 146 |
| Gratuitous Address Resolution Protocol Protection | 148 |
| Extensible Authentication Protocol | 148 |
| Reinstalling an IP Phone 2002 | 148 |
| Replacing an IP Phone 2002 | 149 |
| Removing an IP Phone 2002 from service | 150 |

Introduction

This section explains how to install and maintain the IP Phone 2002. For information on using the IP Phone 2002, see the *IP Phone 2002 User Guide*.

This section contains the following procedures:

- Procedure 17, “Configuring the IP Phone 2002” on page 128.
- Procedure 18, “Installing the IP Phone 2002 for the first time using manual configuration” on page 132.
- Procedure 19, “Installing an IP Phone 2002 for the first time using DHCP” on page 139.
- Procedure 20, “Enabling Full Duplex mode” on page 146.
- Procedure 21, “Checking Ethernet Statistics” on page 147.
- Procedure 22, “Changing the TN of an existing IP Phone 2002” on page 148.
- Procedure 23, “Replacing an IP Phone 2002” on page 149.
- Procedure 24, “Removing an IP Phone 2002 from service” on page 150.


Note: After an IP Phone has been installed and configured, if power is to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 2002 uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 2002 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2002 network connection, and connection to the Communication Server 1000.

Figure 7 on [page 115](#) shows the IP Phone.

Figure 7
IP Phone 2002

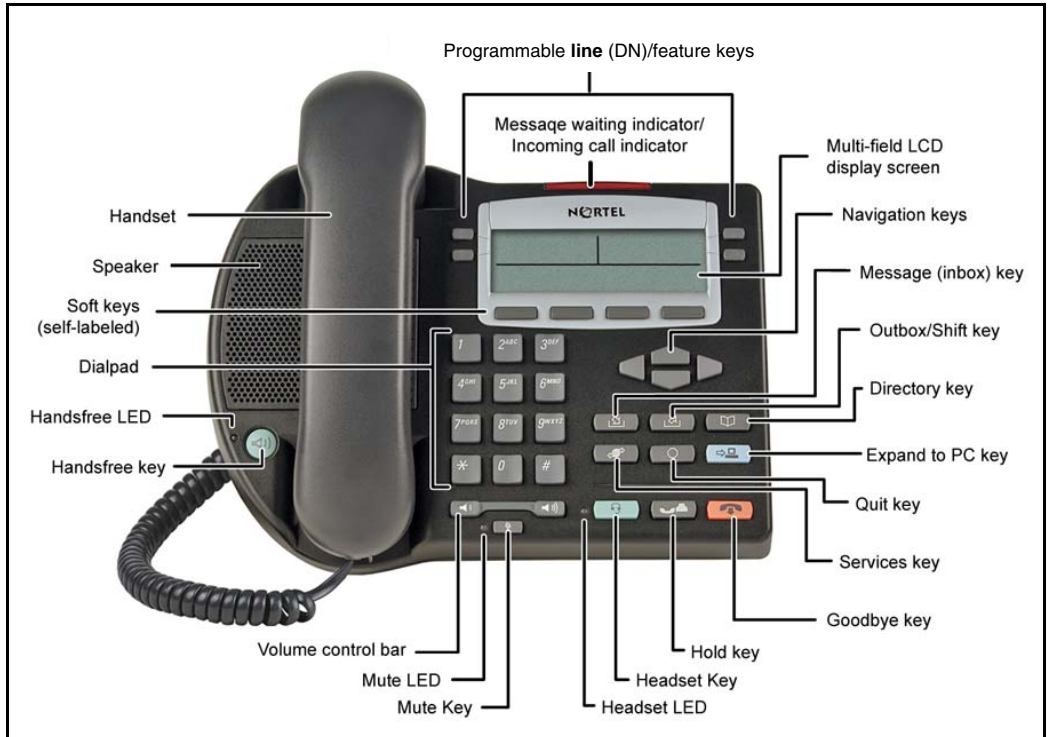

Components and functions

This section describes the following components and functions of the IP Phone 2002:

- Keys and functions
- Services menu

Keys and functions

Table 10 describes the IP Phone 2002 keys and functions.

Table 10
IP Phone 2002 keys and functions (Part 1 of 2)

| Key | Function |
|---|--|
| Speaker | Press the Line key to activate the speaker for on-hook dialing and listening. |
| Programmable line (DN)/ feature keys (self-labeled) | <p>Programmable line (DN)/ feature keys (self-labeled) are configured for various features on the IP Phone. One must be the prime DN key.</p> <p>A steady LCD light beside a line (DN) key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed.</p> |
| Message waiting light/ Incoming call indicator | The Message waiting light turns ON to indicate that a message has been left for the user. This light also flashes when the set ringer is ON. |
| Soft keys (self-labeled) | <p>Soft keys (self-labeled) are located below the display area. The LCD label above the key changes, based on the active feature.</p> <p>Note: A triangle before a key label indicates that the key is active.</p> |
| Navigation keys | Use the navigation keys to scroll through menus and lists in the display area. |
| Message (Inbox) | Press the Message (Inbox) key to access your voicemail box. |
| Outbox/Shift | The Outbox/Shift key is a fixed key that is reserved for future feature development. |
| Directory | Press the Directory key to access Directory services. |
| Quit | <p>Press the Quit key to end an active application.</p> <p>Pressing the Quit key does not affect the status of the calls currently on your IP Phone.</p> |

Table 10
IP Phone 2002 keys and functions (Part 2 of 2)

| Key | Function |
|--------------------|---|
| Expand to PC | The Expand to PC key is used to access external server applications such as External Application Server (XAS). |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Hold | Press the Hold key to put an active call on hold. Press the line (DN) key beside the flashing LCD to return to the caller on hold. |
| Headset | Press the Headset key to answer a call using the headset or to switch a call from the handset or Handsfree to the headset. |
| Mute | <p>Press the Mute key to listen to the receiving party without transmitting.</p> <p>Press the Mute key again to return to a two-way conversation.</p> <p>The Mute key applies to Handsfree, Handset, and Headset microphones.</p> <p>The Mute LED flashes when the Mute option is in use.</p> |
| Volume control bar | <p>Use the volume control bar to adjust the volume of the handset, headset, speaker, ringer, and, Handsfree feature.</p> <p>Press the right side of the rocker bar to increase volume; press the left side to decrease volume.</p> |
| Handsfree key | <p>Press the Handsfree key to activate the Handsfree feature.</p> <p>The LED lights to indicate when handsfree is active.</p> |

Services menu

Table 11 shows the Services menu.

Table 11
Services menu

| | |
|--------------|---|
| Services key | Press the Services key to access the following items: <ul style="list-style-type: none">• Telephone Options:<ul style="list-style-type: none">— Volume Adjustment— Contrast Adjustment— Language— Date/Time Format— Display diagnostics— Local Dialpad Tone— Set Info— Ring type— OnHook Default Path— Change Feature key label— Call Timer• Password Administration• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured) |
|--------------|---|

Table 11
Services menu

Double-press the Services key to access Network diagnostic utilities. For more information on Network diagnostic utilities, see Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

Note 1: If a call is presented while the user is manipulating an option, the IP Phone 2002 rings and the DN key flashes. However, the screen display is not updated with Caller ID information and programming text is not disturbed.

Note 2: The user can originate a call using Autodial or Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or the Caller ID information, and Autodial and Last Number Redial intercept the dialpad.

Supported features

The IP Phone 2002 supports the following telephony features:

- four feature keys
- four soft keys (self-labeled) providing access to a maximum of nine features

Note: Functions for the soft keys are configured in LD 11.

- volume control bar for adjusting ringer, speaker, handset, and headset volume
- six specialized feature keys:
 - Quit
 - Directory
 - Message/Inbox
 - Shift/Outbox
 - Services
 - Copy
- six call-processing fixed keys:
 - Mute

- Handsfree
- Goodbye
- Expand to PC
- Headset
- Hold
- Call Duration Timer
- ability to change the user-defined feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 2002 supports the following data network features:

- integrated switch for shared PC access
 - the LAN Ethernet port supports 10/100BT Mbps Full Duplex mode
 - the PC Ethernet port supports 10/100BT Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 13, “IP Phone 2002 IP parameters,” on page 131.

- 802.1ab Link Layer Discovery Protocol (LLDP)

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, see “Features overview” on page 493.
- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 2
- Gratuitous Address Resolution Protocol Protection (GARP)

The IP Phone 2002 supports the following user interface features:

- External Application Server (XAS)
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, and Turkish
- IP Key Expansion module

Features not currently supported

The following features are not supported on the IP Phone 2002:

- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys


Display characteristics

An IP Phone 2002 has three major display areas:

- user defined feature key label
- information line
- soft key label

Figure 8 on [page 122](#) shows these three display areas.

Figure 8
IP Phone 2002 display areas

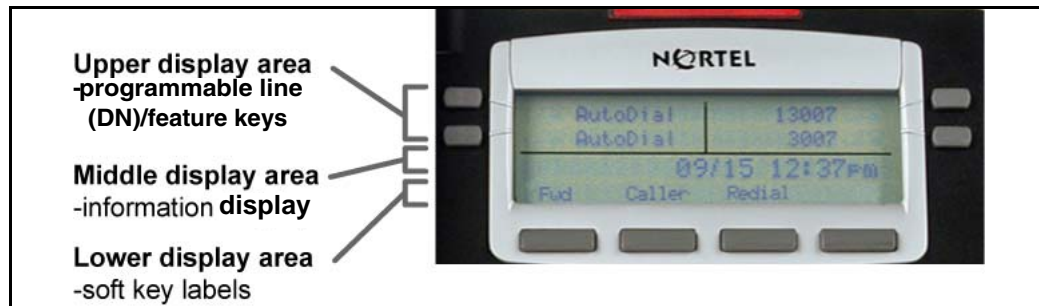

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Programmable line (DN)/feature keys label display

The feature key label area displays a ten-character string for each of the four feature keys. Each feature key includes the key label and an icon. The icon state can be on, off, or flashing. A telephone icon displays the status of the configured DN. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen.

Note: If a label is longer than ten characters, the last ten characters are displayed and the excess characters are deleted from the beginning of the string.

Information line display

An IP Phone 2002 has a single-line information display area with the following information:

- Caller number
- Caller name
- Feature prompt strings
- User-entered digits
- Date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Because the IP Phone 2002 only has a single-line information display area, you are prompted to scroll through any additional lines of information. For example, during an incoming call, only the Directory Number (DN) appears if the caller name is greater than 10 characters. Press the flashing arrow to display the caller name.

Soft key label display

The soft key label has a maximum six characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the More soft key to navigate through the layers of functions. If there are only four functions assigned to the soft keys, the More key does not appear and all four functions are displayed.

Key number assignments

A maximum of nine functions can be assigned to the four soft-labeled, predefined soft keys. Because they are predefined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message key is numbered 16. Key numbers 17 to 31 are the four soft key labels below the display area. See Figure 8 on [page 122](#).

Key numbers 17 to 31 support the features A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RNP, SCC, SCU, SSC, SSU, and TRN. See Appendix Appendix I:: “IP Phone soft keys” on [page 619](#) for a description of these features.

Key number assignments at the Call Server are aligned with that of the IP Phone 2004. The mappings between IP Phone 2002 soft key numbers and PBX CPU key numbers are the same as on the IP Phone 2004.

Package components

The following information applies to Phase II IP Phones. Product codes for Phase II IP Phones are different from previous sets.

See the product code on the back of the phone to confirm whether it is a Phase II IP Phone. The product code for Phase II IP Phones appears as IP Phone 200x. The product code for previous versions of the IP Phone appears with an i in front of the model number (for example, i200x).

The AC power adapter must be ordered separately if local power using the AC adapter is required, because Phase II IP Phones include integrated support for a number of power over LAN options, including support for IEEE 802.3af standard power.

Table 12 lists the IP Phone 2002 package components and product codes.

Table 12
IP Phone 2002 components list (Part 1 of 2)

| | |
|--|---------------------|
| IP Phone 2002 package contents include: | |
| <ul style="list-style-type: none"> • IP Phone 2002 • Handset • Handset cord • Footstand • 7ft Cat5 Ethernet cable • Getting Started card | |
| IP Phone 2002 (Ethergray) with Icon keycaps | NTDU91AA16/A0533404 |
| IP Phone 2002 (Ethergray) with English text label keycaps | NTDU91BA16/A0533405 |
| IP Phone 2002 (Charcoal) with Icon keycaps | NTDU91AA70/A0533406 |
| IP Phone 2002 (Charcoal) with English text label keycaps | NTDU91BA70/A0533407 |
| IP Phone 2002 (Charcoal with Bezell) with Icon keycaps | NTDU91AB70 |
| IP Phone 2002 (Charcoal with Bezell) with Icon keycaps (RoHS) | NTDU91AC70E6 |

Table 12
IP Phone 2002 components list (Part 2 of 2)

| | |
|--|--------------|
| IP Phone 2002 (Charcoal with Bezell) with English text label keycaps | NTDU91BB70 |
| IP Phone 2002 (Charcoal with Bezell) with English text label keycaps (RoHS) | NTDU91BC70E6 |
| Replacement parts | |
| 7 ft. Cat5 Ethernet cable | A0648375 |
| Handset, Ethergray | A0788874 |
| Handset, Charcoal | A0758634 |
| Handset cord, Ethergray | A0897725 |
| Handset cord, Charcoal | N0000763 |
| Footstand, Charcoal (used for Ethergray and Charcoal models) | A0891619 |
| IP Phone 2001/2002/2004 Power Adaptors | |
| Power transformer (117/120 VAC 50/60 Hz) (North America) | A0619627 |
| Power transformer 3-prong AC to AC, direct plug-in, 8W, 240 VAC, 50Hz to 16 VAC at 500 mA (Ireland and UK) | A0656598 |
| Power transformer AC to AC, direct plug-in, 8W, 230 VAC, 50/60 Hz, to 16 VAC at 500 mA (Europe) | A0619635 |
| Power transformer 2-prong wall plug direct plug-in AC to AC, 8W, 240 VAC, 50 Hz, to 16 VAC at 500 mA (Australia and New Zealand) | A0647042 |
| Power transformer AC to AC, direct plug-in, 8W, 100 VAC, 50 Hz, to 16 VAC at 500 mA | A0828858 |

For more information, and for information about previous versions of the IP Phone, contact Nortel.

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 2002 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 2002
- Startup sequence
- Installing the IP Phone 2002

Before you begin

Before installing the IP Phone 2002, complete the following pre-installation checklist:

- Ensure there is one IP Phone 2002 boxed package for each IP Phone 2002 being installed. The package contains:
 - IP Phone 2002
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 2002 being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 12, “IP Phone 2002 components list,” on page 125.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Do not plug your IP Phone 2002 into an ISDN connection. Severe damage can result.

Configuring the IP Phone 2002

Use Procedure 17 on [page 128](#) to configure the IP Phone 2002 for the first time.

Procedure 17

Configuring the IP Phone 2002

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2 Configure the IP Phone 2002 on the Call Server using LD 11.

For more information, see *Software Input/Output: Administration* (553-3001-311).

- 3 Connect the IP Phone 2002 components:

- a. Connect one end of the handset cord to the handset jack on the back of the IP Phone (identified with a handset icon).
- b. Connect the other end of the handset cord to the handset.

- 4 Choose one of the following connections:

- For an IP Phone not sharing LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the network interface located on the back of the IP Phone (identified with a LAN icon, see

Figure 9 on [page 129](#)). The other end of the CAT5 Ethernet cable plugs into the IP network.


- For an IP Phone sharing LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the network interface located on the back of the IP Phone (identified with a LAN icon, see Figure 9 on [page 129](#)) and the other end to the IP network. Insert on end of a second CAT5 Ethernet cable into the PC network interface located on the back of the IP Phone (identified with a PC icon, see Figure 9 on [page 129](#)) and the other end into the computer.

**CAUTION****Damage to Equipment**

Do not plug any device into your IP Phone 2002 Ethernet port other than one PC. The IP Phone 2002 does not support multiple devices connected through the PC Ethernet port.

Figure 9
IP Phone 2002 Ethernet network interface connections

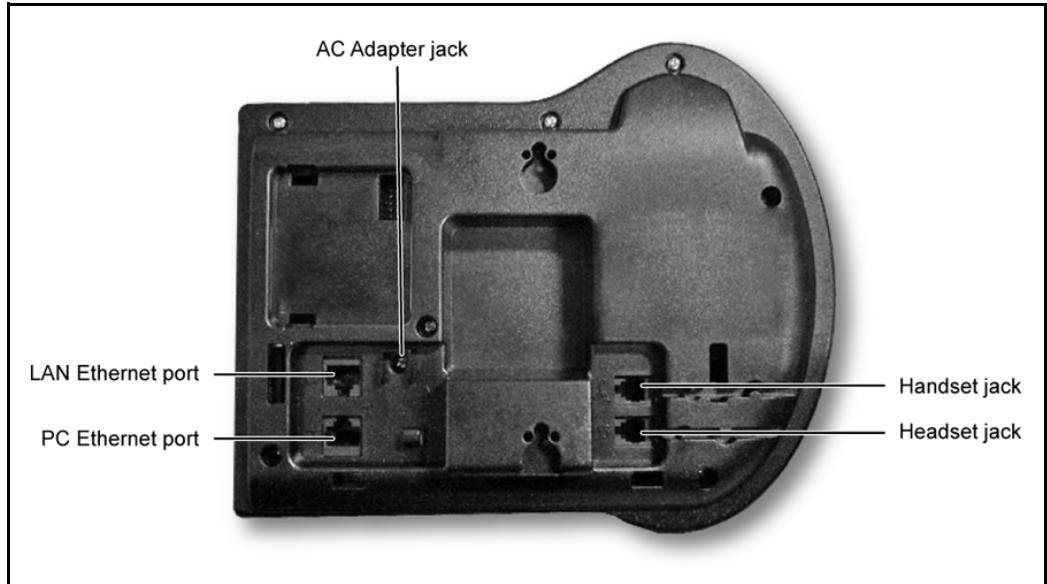

- 5 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable and then thread the adapter cord through the channels in the stand.
- 6 Secure the IP Phone footstand to the base of the IP Phone. Use the angle adjustment grip on the top back of the IP Phone to adjust the position.
- 7 Power the IP Phone 2002 using either the Power over Ethernet or an AC power transformer (local power). If you are using local power, plug the AC power transformer into the nearest power outlet. Make sure you use the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 12, "IP Phone 2002 components list," on page 125.

Note: The IP Phone 2004 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 2. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

- 8 Use Procedure 18 on [page 132](#) to install the IP Phone 2002 for the first time using manual configuration, or use Procedure 19 on [page 139](#) to install the IP Phone 2002 for the first time using DHCP.

Startup sequence

When an IP Phone 2002 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 13 for a summary of the IP parameters and how they are obtained.

Table 13
IP Phone 2002 IP parameters

| Parameter | Method of Acquisition |
|---|---|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Default Gateway Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count — primary and secondary) | Manually entered or automatically retrieved through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Retrieved from local storage on subsequent power cycles. |

Installing the IP Phone 2002

To install the IP Phone 2002 for the first time using manual configuration, use Procedure 18 on [page 132](#). To install the IP Phone 2002 for the first time using DHCP, see Procedure 19 on [page 139](#).

Procedure 18
Installing the IP Phone 2002 for the
first time using manual configuration

IMPORTANT!

Timing information

There are only four seconds (s) between plugging in the IP Phone 2002 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 2002 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

To edit network configuration the following soft keys are available:

- **OK**—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- **BkSpace**—backspace a configuration entry to change it
- **Clear**—clear an entire configuration entry
- **Cancel**—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1** At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **No**, you are not prompted to enter Device ID and Password.

For more information on EAP, see Appendix Appendix C:: "802.1x Port-based network access control" on [page 521](#).

- 2** At the prompt, **LLDP Enable?**, enter **1-Y** (1 for Yes, default), or **0-N** (0 for No).

For more information about LLDP, see Appendix Appendix D:: "802.1ab Link Layer Discovery Protocol" on [page 523](#).

3 At the prompt **DHCP Yes/No?**, enter **0-N** (0 for No).

By default, Full DHCP is configured on the IP Phone 2002. Depending on the configuration requirements, you can change the IP Phone 2002 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

4 Enter the following information:

| Screen prompt | Description |
|---------------|--|
| set IP | A valid IP Phone 2002 IP address. |
| net msk | A subnet mask. |
| def gw | The default Gateway for the IP Phone 2002 on the LAN segment to which it is connected. |

- 5 Enter the information for the primary Connect Server (S1) and the secondary Connect Server (S2):

| Screen prompt | Description |
|----------------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2002. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2002 attempts to connect to the server. Enter 10. |
| S1 PK | <p>Default is ffffffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |

| | |
|--------------------------|---|
| S2 IP | The secondary CS 1000 node IP address for the IP Phone 2002. |
| S2 Port | Same as S1 |
| S2 action | Same as S1 Note: You are not prompted for S2 PK if S2 Action is set to 1. |
| S2 retry count | Same as S1 |
| S2 PK | Default is ffffffff. The Private key of the alternate Secure Media Controller to which the IP Phone is connected. If you are using a Secure Media Controller, do the following: <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| Cfg XAS? (0-No,1-Yes) | Default 0 (for No) Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address. |
| XAS IP: | Enter the IP address of the XAS server. |
| VLAN Cfg? (0-No, 1-Yes) | |
| VLAN Cfg? 0-Auto, 1-Man: | 1-Man Enter the VLAN ID manually. This is a number between 1 and 4094. |

| | |
|--------------------------|---|
| | <p>0-Auto Automatically obtains VLAN ID using DHCP or the 802.1ab data switch.</p> |
| LLDP-MED? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.</p> <p>You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.</p> |
| LLDP VLAN? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>You are not prompted for LLDP VLAN if VLAN is not set to Auto (2- Auto), or if LLDP is not enabled.</p> |
| DHCP (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| PC Port? (1-On, 0-Off) | <p>Default 1 (for On).</p> <p>Select 0 (for Off) to disable the PC port.</p> |

| | |
|---------------------------|---|
| Data VLAN? (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), and if LLDP is enabled, the Data VLAN Cfg prompt appears on the display.</p> <p>This prompt is not displayed if the PC port prompt is set to OFF.</p> |
| Data VLAN Cfg? (0-A, 1-M) | <p>If you select 0 (0 for A), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>This prompt is not displayed if Data VLAN, or LLDP is not enabled.</p> |
| Data VLAN ID: | <p>This prompt is displayed if Data VLAN is enabled but LLDP is not enabled.</p> |
| Duplex? (0-Auto, 1-Full) | <p>Default 0 (for Auto)</p> |
| PSK SRTP? (0-No, 1-Yes) | <p>Default 0 (for No)</p> |
| GARP Ignore? (0-No,1-Yes) | <p>Default 0 (for No)</p> |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2002 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2002 searches for the connect server. When the connection is complete, proceed with step 6.

- 6 Enter the following information:

| Screen prompt | Description |
|---------------|---|
| Password | IP Phone Installer Password You are not prompted to enter the IP Phone Installer Password if it has not been configured in your Call Server. |
| Node | The node ID. |
| TN | The TN or VTN. |

The IP Phone 2002 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When download is complete, the IP Phone 2002 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 7 Check for dial tone and the correct DN above the display.
- 8 (Optional) Customize the feature keys as required. For more information, see *IP Phone 2002 User Guide*.

End of Procedure

Procedure 19
Installing an IP Phone 2002 for the first time
using DHCP

IMPORTANT!

Timing information

There are only 4 s between plugging in the IP Phone 2002 power transformer and the appearance of the Nortel logo in the middle of the display. When you see the logo, you have 1 s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the 1-s response time, the IP Phone 2002 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E: "IP Phone diagnostic utilities" on [page 525](#).

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **No**, you will not be prompted to enter Device ID and Password.

For more information on EAP, see Appendix Appendix C: "802.1x Port-based network access control" on [page 521](#).

- 2 At the prompt, **LLDP Enable?**, enter **1-Y** (1 for Yes, default), or **0-N** (0 for No).

For more information about LLDP, see Appendix Appendix D: "802.1ab Link Layer Discovery Protocol" on [page 523](#).

3 At the prompt **DHCP Yes/No?**, enter **1-Y** (1 for Yes).

By default, Full DHCP is configured on the IP Phone 2002. Depending on the configuration requirements, you can change the IP Phone 2002 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

4 At the prompt, **Cached IP?**, select **0** (0-No, default) to conform to the DHCP standard and to obtain an IP address from the DHCP server. Only select **1** (1 for Yes) to force the IP Phone to start with a cached IP address in the event that the IP Phone cannot connect to the DHCP server and obtain an IP address.

5 Select Partial or Full DHCP.

- a.** If you select Full DHCP, then the following parameters are retrieved from the DHCP server:
- a valid IP Phone 2002 IP address
 - a subnet mask
 - the default Gateway for the IP Phone 2002 on the LAN segment to which it is connected
 - the S1 IP. The primary CS 1000 node IP address of the IP Phone.
 - the S1 action
 - the S1 retry count. This is the number of times the IP Phone attempts to connect to the server.
 - the S2 IP. The secondary CS 1000 node IP address of the IP Phone.
 - the S2 action

- the S2 retry count
- the External Application Server (XAS) IP address

b. If you select Partial DHCP, then you must enter the following parameters:

| Screen prompt | Description |
|----------------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 2002. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 2002 attempts to connect to the server. Enter 10. |

| | |
|----------------|--|
| S1 PK | <p>Default is ffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address for the IP Phone 2002.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> |
| S2 retry count | <p>Same as S1</p> |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |

Cfg XAS? (0-No,1-Yes)

Default 0 (for No).

Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address.

XAS IP:

Enter the IP address of the XAS server.

6 Enter the following parameters:

Screen prompt

Description

VLAN Cfg? (0-No, 1-Yes)

VLAN Cfg? 0-Auto, 1-Man:

1-Man

Enter the VLAN ID manually. This is a number between 1 and 4094.

0-Auto

Automatically obtains VLAN ID using DHCP or the 802.1ab data switch.

LLDP-MED? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.

You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.

LLDP VLAN? (0-No, 1-Yes)

If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.

You are not prompted for LLDP VLAN if VLAN is not set to Auto (2- Auto), or if LLDP is not enabled.

| | |
|---------------------------|--|
| DHCP (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| PC Port? (1-On, 0-Off) | <p>Default 1 (for On).</p> <p>Select 0 (for Off) to disable the PC port.</p> |
| Data VLAN? (0-No, 1-Yes) | <p>If you select 1-Y (1 for Yes), and if LLDP is enabled, the Data VLAN Cfg prompt appears on the display.</p> <p>This prompt is not displayed if the PC port prompt is set to OFF.</p> |
| Data VLAN Cfg? (0-A, 1-M) | <p>If you select 0 (0 for A), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>This prompt is not displayed if Data VLAN, or LLDP is not enabled.</p> |
| Data VLAN ID: | <p>This prompt is displayed if Data VLAN is enabled but LLDP is not enabled.</p> |
| Duplex? (0-Auto, 1-Full) | <p>Default 0 (for Auto)</p> |

PSK SRTP? (0-No, 1-Yes) Default 0 (for No)

GARP Ignore? (0-No,1-Yes) Default 0 (for No)

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Phone 2002 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2002 searches for the connect server. When the connection is complete, proceed to step 7.

7 Enter the following information:

| Screen prompt | Description |
|---------------|--|
| Password | IP Phone Installer Password |
| | You are not prompted to enter the IP Phone Installer Password if it has not been configured in your Call Server. |
| Node | the node ID |
| TN | the TN or VTN |

The IP Phone 2002 registers with the TPS and, if needed, begins the firmware download. This takes several minutes. When complete, the IP Phone 2002 resets.

Note: The Enhanced UNISTim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 8 Check for dial tone and the correct DN above the display.
- 9 (Optional) Customize the feature keys as required. For more information, see *IP Phone 2002 User Guide*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 20 on [page 146](#) to enable Full Duplex mode.

Procedure 20 **Enabling Full Duplex mode**

- 1 Reset the phone by disconnecting and reconnecting power.
- 2 When the Nortel logo appears in the middle of the display, press each of the soft keys in sequence. See Procedure 17 on [page 128](#).

- 3 If no other configuration changes are required, press the **OK** soft key repeatedly until the Duplex network option appears.
- 4 Select 1 to enable Full Duplex mode.
- 5 When the Speed option appears, select one of the following:
 - 0 for 10 Mbps
 - 1 for 100 Mbps (default)
- 6 Select **OK** to confirm the change.
- 7 Restart the IP Phone. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 21 to confirm activation of Full Duplex mode.

Procedure 21
Checking Ethernet Statistics

- 1 Double-click the **Services** key. The Network Diagnostics menu appears.
- 2 Select **Ethernet Statistics**.
 - If Full Duplex mode is active, the following is displayed:
 - Link: UP
 - Duplex: Full
 - Speed: 10 (Mb) or 100(Mb)
 - Auto-Negotiate Capability: N
 - Auto-Negotiate Completed: N

End of Procedure

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 2002 from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim's machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim's machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 17, "Configuring the IP Phone 2002" on page 128 or Procedure 17, "Installing an IP Phone 2002 for the first time using DHCP" on page 139.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: "802.1x Port-based network access control" on [page 521](#).

Reinstalling an IP Phone 2002

You can reinstall an existing previously configured IP Phone 2002 on the same Call Server. For example, the IP Phone 2002 can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 2002.

Procedure 22

Changing the TN of an existing IP Phone 2002

- 1 Repower the IP Phone 2002.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 2002 displays the existing node number for approximately 5 seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |
- 4 Enter the password at the password screen and press **OK**.

A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).
- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 2002

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 2002 that is currently using the TN.

Procedure 23 **Replacing an IP Phone 2002**

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 2002 that you want to replace.

- 3 Follow either Procedure 17 on [page 128](#) or Procedure 19 on [page 139](#) to install and configure the IP Phone 2002.
- 4 Enter the same TN and Node Number as the IP Phone 2002 you replaced. The Call Server associates the new IP Phone 2002 with the existing TN.

End of Procedure

Removing an IP Phone 2002 from service

Procedure 24

Removing an IP Phone 2002 from service

- 1 Disconnect the IP Phone 2002 from the network or turn off the power.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 2002.

If the IP Phone 2002 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 2007

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 152 |
| Description | 152 |
| Components and functions | 153 |
| Supported features | 159 |
| Features not currently supported | 162 |
| Touch panel | 162 |
| Dialpad entry | 162 |
| Cleaning the IP Phone display screen | 164 |
| Display characteristics | 164 |
| Local Tools menu password protection | 168 |
| Key number assignments | 170 |
| Package components | 171 |
| Installation and Configuration | 172 |
| Full Duplex mode | 185 |
| Gratuitous Address Resolution Protocol Protection | 187 |
| Extensible Authentication Protocol | 187 |
| Reinstalling an IP Phone 2007 | 188 |
| Replacing an IP Phone 2007 | 189 |
| Removing an IP Phone 2007 from service | 189 |

Introduction

This section explains how to install and maintain the IP Phone 2007. For information on using the IP Phone 2007, see the *IP Phone 2007 User Guide*.

This section contains the following procedures:

- Procedure 25, “Configuring the IP Phone 2007” on page 173.
- Procedure 25, “Configuring the IP Phone 2007” on page 173.
- Procedure 27, “Enabling Full Duplex mode” on page 186.
- Procedure 28, “Checking Ethernet Statistics” on page 187.
- Procedure 29, “Changing the TN of an existing IP Phone 2007” on page 188.
- Procedure 30, “Replacing an IP Phone 2007” on page 189.
- Procedure 31, “Removing an IP Phone 2007 from service” on page 189.

Note: After an IP Phone has been installed and configured, if power to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 2007 uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 2007 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2007 network connection, and connection to the Communication Server 1000.

Figure 10 on [page 153](#) shows the IP Phone 2007.

Figure 10
IP Phone 2007

Components and functions

This section describes the following components and functions of the IP Phone 2007:

- Keys and functions
- Services menu
- Local Tools menu

Keys and functions

Table 14 lists the keys and functions for the IP Phone 2007.

Table 14
IP Phone 2007 keys and functions (Part 1 of 2)

| Key | Function |
|--|---|
| Hold | Press the Hold key to put an active call on hold. Tap the flashing line (DN) soft key to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Handsfree | Press the Handsfree key to activate handsfree. The LED lights to indicate when the handsfree feature is active. |
| Headset | Press the Headset key to answer a call using the headset or to switch a call from the handset or handsfree to the headset. |
| Mute | Press the Mute key to listen to the receiving party without transmitting. Press the Mute key again to return to a two-way conversation. The Mute key applies to handsfree, handset, and headset microphones. The Mute LED flashes when the Mute option is in use. |
| Volume control bar | Use the Volume control bar to adjust the volume of the ringer, handset, headset, speaker, and the Handsfree feature. Press the right side of the rocker bar to increase volume, the left side to decrease volume. |
| Message waiting light/incoming call indicator | The Message waiting indicator turns ON to indicate that a message has been left for the user. This indicator also flashes when the set ringer is ON. |
| Programmable line (DN)/feature keys (self-labeled) | Programmable line (DN)/feature keys (self-labeled) are located on the touch panel display and are configured for various features on the IP Phones. A steady LCD light beside a programmable line (DN)/feature key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed. |

Table 14
IP Phone 2007 keys and functions (Part 2 of 2)

| Key | Function |
|-----------------------------|---|
| Soft keys (self-labeled) | <p>Soft keys (self-labeled) are located on the touch panel display. The soft key label changes, based on the active feature.</p> <p>Tap the More soft key to access the next layer of soft key functions.</p> |
| Navigation keys | <p>Use the navigation keys to scroll through menus and lists on the LCD display screen. The key rocks for up, down, left, and right movement.</p> |
| Context-sensitive soft keys | <p>The soft key labels are enabled for the keys on either side of the navigation cluster. The labels are context sensitive. When in an edit box, the soft key labels will show as Clear and Backspace. This allows numeric editing without using the soft keyboard. In normal use the soft key labels show Quit and Copy.</p> |

Services menu

Table 15 shows the Services menu.

Table 15
Services menu

| | |
|--------------|---|
| Services key | <p>Tap the Services key to access the following items:</p> <ul style="list-style-type: none">• Telephone Option menu<ul style="list-style-type: none">— Volume adjustment...— Contrast adjustment— Language— Date/Time— Display diagnostics— Local DialPad Tone— Set Info— Diagnostics— Call Log Options— Ring type— Call timer— On hook default path— Change Feature key label— Name Display Format• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured)• Password Admin (if configured) <p>Note: When an option has a sublist, an ellipsis (...) appears after the option.</p> <p>Double-press the Services key to access Network diagnostic utilities. For more information on Network diagnostic utilities, see Appendix Appendix E: "IP Phone diagnostic utilities" on page 525.</p> |
|--------------|---|

Local Tools menu

Tap the Tools icon to access the Local Tools menu. Table 16 shows the options available in the Local Tools menu.

Note: Entering text in the Local Tools menu items is easier with a USB keyboard.

Table 16
Local Tools menu

| | |
|-----------------------|--|
| Network Configuration | <p>Use this menu to configure the IP Phone 2007, or to display the information that was configured when the IP Phone was installed. This menu contains the following items:</p> <ul style="list-style-type: none"> • 802.1x/EAP • DHCP status • IP network settings (IP address, mask, gateway address) • Server 1 and Server 2 IP address, Port, Action, Retry, and PK numbers • Voice VLAN and Filtering • PC port disable • Data VLAN and Filtering • Duplex setting • Ignore GARP protection • Pre-Shared Key (PSK) SRTP • XAS (S4) IP address, graphical, port |
| Local Diagnostics | <p>Displays the Local Diagnostics menu containing the following items:</p> <ul style="list-style-type: none"> • Network Diagnostic Tools • Ethernet Statistics • IP Network Statistics • IP Set&DHCP Information <p>For more information about the IP Phone 2007 Local Diagnostics menu, see Appendix Appendix E:: "IP Phone diagnostic utilities" on page 525.</p> |

Table 16
Local Tools menu

| | |
|-------------------------|--|
| Touch Panel Setup | Use the Touch Panel Setup tool to calibrate the touch panel and stylus. |
| Contrast and Brightness | Use Contrast Brightness tools to alter the display's physical settings. |
| USB Devices | Use USB Devices menu to control the Universal Serial Bus (USB) device plugged into the USB port in the back of the IP Phone. |
| TFTP Upgrade | Use TFTP Upgrade menu to upgrade the firmware in the IP Phone. |
| Preferences | Use the Preferences menu to configure individual user preferences. |
| Lock Menu | Use the Lock menu to prevent unauthorized access to the Local Tools menu. |

Supported features

- twelve programmable line/(DN) feature keys (self-labeled)
 - four context-sensitive soft keys (self-labeled) providing access to a maximum of 9 features
- Note:** Functions for the context-sensitive soft keys are configured in LD 11.
- large, color touch panel display screen
 - volume control bar for adjusting ringer, speaker, handset, and headset volume
 - speaker for on-hook dialing or on-hook listening
 - four call-processing fixed keys:
 - Hold
 - Goodbye
 - Handsfree
 - Mute
 - Call Duration Timer

- ability to change the user-defined feature key labels
Note: Feature keys will support English characters only.
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 2007 supports the following data networking features:

- integrated switch for shared PC access
 - LAN Ethernet port supports 10/100BT Mbps Full Duplex mode
 - PC Ethernet port supports 10/100BT Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 19, “IP Phone 2007 IP parameters,” on page 176.

- 802.1ab Link Layer Discovery Protocol (LLDP)

For more information about LLDP, Appendix Appendix D: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- Secure Real-time Transport Protocol (SRTP) media encryption

For more information about SRTP media encryption, see “Features overview” on page 493.

- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage

- full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
- VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN

For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 3
- Gratuitous Address Resolution Protocol (GARP) Protection

The IP Phone 2007 supports the following user interface features:

- a large, color touch panel display that supports color XML/HTML content through an XAS
- USB port, to support USB devices

Note: Powered downstream 1.1 compliant USB hubs are supported, including USB 2.0 hubs, if they offer USB 1.1 backwards compliance.

- Hearing Aid Compatibility (HAC) as per FCC Part 68
- headset jack with On/Off key
- remote firmware download
- TFTP Server based firmware upgrades
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, and Turkish

- External Application Server (XAS)
- Graphical External Application Server (GXAS)

Features not currently supported

The following features are not supported on the IP Phone 2007:

- Live Dialpad
- Group Listening
- Set-to-Set messaging

Touch panel

You perform point and click operations on your IP Phone 2007 using the touch panel. The touch panel is used with the graphical user interface (GUI) to present soft keys directly on the display. You can activate all Line/DN keys and feature soft keys by using the touch panel.

Calibrate the touch panel

Calibrate the touch panel through the Tools menu, which enables you to fine-tune the touch panel. You are prompted to use the stylus to tap three targets.

For further information, see Procedure 25, “Configuring the IP Phone 2007” on page 173.

Stylus

Operate the touch panel using a stylus or your finger. However, use of a stylus is recommended to avoid damage to the touch panel.

Dialpad entry

Note: For ease of use, Nortel recommends the use of the external USB keyboard.

The following rules apply when you enter text and special characters using the dialpad.

- Press a key from 0 to 9 once to enter the corresponding number.
- Press a key from 2 to 9 repeatedly to cycle through the letters assigned to that key, first in lower case and then in upper case.

For example, if you press the **5** key repeatedly, the following characters are displayed, one at a time:

j -> k -> l -> J -> K -> L -> 5 ->

See Table 17, “Character key mappings,” on page 163 for character key mappings.

- The insertion point remains in the its current position as long as you continue to press the same key.
- The entry is accepted if either a new key is pressed or if two seconds pass with no entry. The insertion point moves one space to the right.

For example, to enter the word “Nortel”, press the following key sequence:

6 [2 second delay] **6 7 8 3 5**

Note: Although special characters are not required, key 1 generates commonly used special characters, such as the period (.), at symbol (@), and underscore (_).

Table 17:Character key mappings

| Key | Generates |
|-----|----------------------|
| 1 | _ - . ! @ \$ % & + 1 |
| 2 | a b c A B C 2 |
| 3 | d e f D E F 3 |
| 4 | g h i G H I 4 |

| Key | Generates |
|-----|-------------------|
| 5 | j k l J K L 5 |
| 6 | m n o M N O 6 |
| 7 | p q r s P Q R S 7 |
| 8 | t u v T U V 8 |
| 9 | w x y z W X Y Z 9 |

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.


Display characteristics

The IP Phone 2007 window-based user interface has two display areas:

- Application area
- Tools/Navigation area

Figure 11 on [page 165](#) shows these two display areas.

Figure 11
IP Phone 2007 display areas

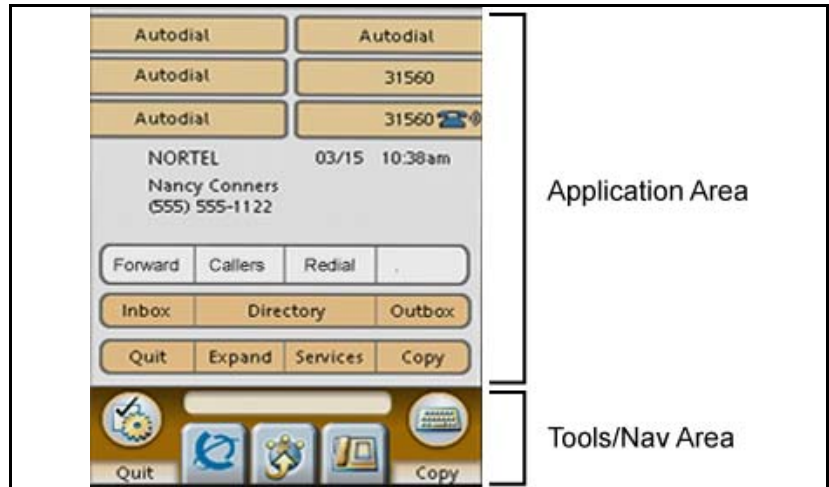

Note: The display may differ from the above example.

To extend the life of the LCD panel, the panel will go dark (“sleep”) after a configured period of time. For further information, see the *IP Phone 2007 User Guide*.

Application area


The Application area provides:

- line and feature key status
- information line display
 - caller number
 - caller name
 - feature prompt strings
 - user-entered digits
 - date and time information or Call Timer (if provisioned in the Telephone options menu)

- set information
- feature keys
- soft keys

Figure 12 shows the Application area.

Figure 12
IP Phone 2007 Application area

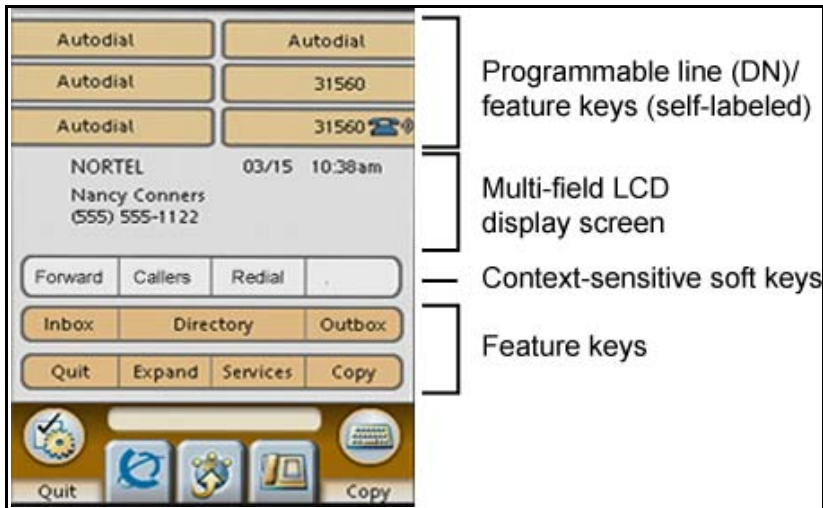

Programmable line (DN)/feature keys label display

The feature key label area displays a ten-character string for each of the twelve programmable line (DN)/feature keys. Each key includes the key label and an icon. The icon state can be on, off, or flashing. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen.

If a label is longer than ten characters, the last ten characters are displayed, and the excess characters are deleted from the beginning of the string.

Context-sensitive soft key label display

The context-sensitive soft key label has a maximum of six characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a soft key is enabled, the icon state changes to on. It remains in the on state until the soft key is pressed again. This cancels the enabled soft key and turns the icon off, returning the soft key label to its original state.

Use the More key to navigate through the layers of functions. If there are only four functions assigned to the soft keys, the More key does not appear and all four functions are displayed.

Note: Soft key labels support different languages.

Feature key label display

The soft key labels may show either text or icons. The text labels are displayed by default and are changed using the **Tools** menu. For further information about the soft keys and their icon equivalents, see the *IP Phone 2007 User Guide*.

Tools/Navigation area

The Tools/Navigation area provides controls for navigating between features and selecting tools.

The following five main elements are presented as touchable keys:

- Tools
- Primary application
- Applications
- Telephone
- Keyboard

Local Tools menu password protection

If the SECUREMENU parameter was set during Full DHCP configuration, the Local Tools menu is locked to prevent accidental or unwanted changes. You are prompted to enter the fixed password 26567*738 (color*set) whenever the Services key is double-pressed, or whenever the Local Diagnostics and Network Configuration sub menus are accessed.

If the PARTSECURE parameter was set during Full DHCP configuration, you are prompted to enter the fixed password whenever you access Local Diagnostics, or Network Configuration menu items from the Local Tools menu. You are always prompted to enter the fixed password whenever you access the Lock Menu sub menu.

There are two ways to control the menu lock:

- DHCP Secure Menu option—the IP Phone processes the secure menu setting retrieved from the Full DHCP response.
- Lock Menu option—double-press the Services key to access the Local Tools menu. Use the up/down navigation keys to scroll and highlight one of the following Lock Menu options:
 - 1. Manual Secure Local Menu—You are prompted to enter the fixed password whenever the Services key is double-pressed.
 - 2. Manual Partial Secure Menu—You are prompted to enter the fixed password whenever you access the Local Diagnostics and the Network Configuration sub menus.
 - 3. Manual Disable Secure Menu—When this option is selected, the Lock Menu is disabled.
 - 4. DHCP Secure Menu—The IP Phone follows the menu lock configuration received from the Full DHCP string:
 - If SECUREMENU is present, you are prompted to enter a password after you double-press the Services key.
 - If PARTSECURE is present, you are prompted to enter a password whenever you select Local Diagnostics and Network Configuration.

- If neither SECUREMENU nor PARTSECURE is present, then the menu is not locked.
- 5. Lock Now—The Lock Now item immediately exits the Tools menu, closes any open Tools menu pages, and locks the Tools menu.

The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

Configuring Secure Local Menu through Full DHCP

Password protection is enabled during Full DHCP configuration if the SECUREMENU parameter, or the PARTSECURE parameter are present at the end of the S4 part of the Full DHCP string. If neither the SECUREMENU parameter, nor the PARTSECURE parameter is present, password protection is not enabled.

The SECUREMENU/PARTSECURE item is an optional parameter. If it is present, then the full S4 string needs to be present, including the action and retries. The S4 string will already be present if the XAS support has been configured through the DHCP. If XAS is not configured, you can still enable

password protection by setting the S4 IP address to 0.0.0.0 and by setting the other fields to 0.

IMPORTANT!

With Full DHCP, the vendor-specific or site-specific options must be configured depending on the customers DHCP server configuration.

For further information on configuring Full DHCP, see *Data Networking for Voice over IP* (553-3001-160).

Accessing the Local Tools menu

Once the password is entered, the Local Tools menu remains active for 5 minutes. You can freely navigate, exit and reenter the Local Tools menu without being prompted to reenter the password. To reset the timer before the 5 minute time expires, double-press the Services key.

You can also press the 5 key to select the Lock Now item from the Lock Menu. The Lock Now item immediately exits the Local Tools menu, closes any open Local Tools menu pages, and locks the Local Tools menu. Alternatively, when time expires, the Local Tools menu and any open submenus are closed. Double-press the Services key to open the password prompt window to reaccess the Local Tools menu.

If you enter an incorrect password, the Local Tools menu will not open. Double-press the Services key to open the password prompt window. Only three incorrect password entries are allowed. Any entry after the three attempts is ignored for 5 minutes. The password prompt window is visible and you can reenter the password but the password is not processed until the 5 minute time expires.

Note: Some text appears dimmed depending on the current state of the menu lock and the configuration of the IP Phone. Only configuration options which are enabled from the current state appear active. Menu options that are not available appear dimmed.

For more information about configuring the Local Tools menu for the IP Phone 2007, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Key number assignments

A maximum of nine functions can be assigned to the four soft-labeled, pre-defined soft keys. Because they are pre-defined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message key is numbered 16. Key numbers 17 to 31 are the four soft key labels below the display area. See Figure 11 on [page 165](#).

Key numbers 17 to 31 support the features A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RNP, SCC, SCU, SSC, SSU, and TRN. See Appendix Appendix I:: “IP Phone soft keys” on [page 619](#) for a description of the IP Phone feature assignment for each of the dedicated keys.

Package components

The IP Phone 2007 includes integrated support for a number of LAN options, including support for IEEE 802.3af Power Classification 3. The Global power adapter must be ordered separately if local power is required.

Table 18 lists the IP Phone 2007 package components and product codes. Contact Nortel for further information.

Table 18
IP Phone 2007 component list (Part 1 of 2)

| | |
|--|------------|
| IP Phone 2007 package contents includes <ul style="list-style-type: none"> • IP Phone 2007 (charcoal with metallic bezel) • Handset • Handset cord • Footstand • 7 ft. (2.1 m) CAT5 Ethernet cable • Getting Started card | NTDU96AB70 |
| Replacement parts | |
| 7 ft. CAT5 Ethernet cable | A0648375 |
| Handset (charcoal) | A0758634 |
| Handset cord (charcoal) | N0000764 |
| Footstand (charcoal) | A0538587 |
| IP Phone 2007 power adapter | |
| Global power adapter | N0014020 |
| IP Phone 2007 power cords | |
| Cord 9.9 ft. NA Power, NEMA, 125Vac 13 ^a NA, M.East, Taiwan, Indonesia, Philippines, Korea, Thailand, Vietnam, Japan | NTTK14AB |

Table 18
IP Phone 2007 component list (Part 2 of 2)

| | |
|---|----------|
| Cord 8 ft., ANA Power AS-3, 240Vac 10A Australia, New Zealand, PRC | NTTK15AA |
| Option 11C Standard European Power Cord 250Vac Other EMEA, Kenya | NTTK16AB |
| Option 11C Swiss Power Cord, 9.9 ft. 125Vac Switzerland | NTTK17AB |
| Option 11C UK Power Cord 240Vac Hong Kong, Ireland, UK, Singapore, Malaysia, India, Bangladesh, Pakistan, Brunei, Sri Lanka | NTTK18AB |
| Option 11C Denmark Power Cord Kit, 9.9 ft. 125Vac Denmark | NTTK22AB |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 2007 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 2007
- Startup sequence
- Installing the IP Phone 2007

Before you begin

Before installing the IP Phone 2007, complete the following pre-installation checklist:

- Ensure there is one IP Phone 2007 boxed package for each IP Phone 2007 being installed. The package contains:
 - IP Phone 2007
 - handset

- handset cord
- 2.1 m (7 ft) CAT5 Ethernet cable
- Getting Started Card
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If you are not using Power over Ethernet (PoE) you must use the Global power adapter or your phone will fail to operate. See Table 18, “IP Phone 2007 component list,” on page 171.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Damage to Equipment

Do not plug your IP Phone 2007 into an ISDN connection. Severe damage can result.

Configuring the IP Phone 2007

Procedure 25

Configuring the IP Phone 2007

- 1** Configure a virtual loop on the system using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2** Configure the IP Phone 2007 on the system using LD 11.

For more information, see *Software Input/Output: Administration* (553-3001-311).

- 3** Connect the IP Phone 2007 components:

- a. Connect one end of the handset cord to the handset jack on the back of the IP Phone (identified with a handset icon).
 - b. Connect the other end of the handset cord to the handset.
- 4 Choose one of the following connections:
 - For an IP Phone not sharing a LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the LAN Ethernet port located on the back of the IP Phone (identified with a LAN icon). Plug the other end of the CAT5 Ethernet cable into the IP network.
 - For an IP Phone sharing a LAN access with a PC:

Connect one end of the CAT5 Ethernet cable to the LAN Ethernet port located on the back of the IP Phone (identified with a LAN icon, see Figure 13 on [page 175](#)) and the other end to the IP network. Insert one end of a second CAT5 Ethernet cable into the PC Ethernet port located on the back of the IP Phone (identified with a PC icon, see Figure 13 on [page 175](#)) and the other end into the computer's Ethernet port.
- 5 Secure the IP Phone footstand to the base of the IP Phone. Use the angle adjustment grip on the top back of the IP Phone to adjust the position.



CAUTION

Damage to Equipment

Do not plug any device into your IP Phone 2007 Ethernet port other than one PC. The IP Phone 2007 does not support multiple devices connected through the PC Ethernet port.

Figure 13
IP Phone 2007 connections



- 6** Power the IP Phone 2007 using either the Power over Ethernet or the Global power adapter (local power).
 - a.** To use local power, plug the Global power adapter into the nearest power outlet. See Table 18, "IP Phone 2007 component list," on page 171.
 - b.** Connect the power jack as shown in Figure 13 on [page 175](#).

Note: The IP Phone 2007 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 2. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

You will hear a tone shortly before the IP Phone is ready to start the Nortel IP telephone application.
- 7** A blue screen appears with Nortel. Once the set application has loaded and started, Nortel Networks will appear in the middle of the screen. Immediately press the following keys in sequence:
 - a.** 0
 - b.** 0

- c. 7
- d. star (*)

Note: If you miss part of the configuration, unplug the phone from the power for a few seconds and redo this step.



WARNING

If you are using local power, you must use the Global power adapter or your phone will fail to operate.

End of Procedure

Startup sequence

When an IP Phone 2007 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 19 for a summary of the IP parameters and how they are obtained.

Table 19
IP Phone 2007 IP parameters (Part 1 of 2)

| Parameter | Method of Acquisition |
|------------|---|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically retrieved through Partial or Full DHCP. |

Table 19
IP Phone 2007 IP parameters (Part 2 of 2)

| Parameter | Method of Acquisition |
|---|---|
| Default Gateway Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count — primary and secondary) | Manually entered or automatically retrieved through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Retrieved from local storage on subsequent power cycles. |

Installing the IP Phone 2007

To install the IP Phone 2007, use Procedure 26 on [page 177](#).

Procedure 26 **Installing the IP Phone 2007**

IMPORTANT!

Timing information

There are only 4 s between plugging in the IP Phone 2007 power adapter and the appearance of Nortel on the display. When Nortel appears in the middle of the screen, you have 1 s to respond by pressing 0, 0, 7, *. If you miss the 1-s response time, the IP Phone 2007 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the Local diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: “IP Phone diagnostic utilities” on [page 525](#).

Note: You can press the **Apply&Reset** soft key at any time to apply the current configuration and reset the phone. You can press the **Exit** soft key to exit the menu without saving any changes and return to the **Network Configuration** menu.

When the Network Configuration menu opens, **Enable 802.1x Auth. (EAP)** is the first option in the list.

- 1 Use the **Right** navigation key to scroll and highlight the **Enable 802.1x Auth. (EAP)**: list box.
- 2 Press the **Down** navigation key to open list box.
- 3 Use the **Up/Down** navigation keys to scroll and highlight **Yes** to enable 802.1x Authentication, or **No** to disable 802.1x Authentication.
- 4 If 802.1x Authentication is enabled, use the dialpad to fill in the following information:
 - Device ID
 - Password
 - Retype the password

Note: Use the dialpad to enter digits only. To enter alpha characters, use either the IP Phone 2007 pop-up keyboard, or a USB keyboard.

For further information about EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Note: If you do not enable 802.1x Authentication, you are not prompted to enter Device ID and Password.

- 5 Use the **Right** navigation key to scroll and highlight **Enable 802.1x (LLDP Enable)**.

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 6 Use the **Up/Down** navigation keys to scroll and highlight **Yes** to enable LLDP, or **No** to disable LLDP.
- 7 Use the **Right** navigation key to scroll and highlight **DHCP** combo box.
- 8 Press the **Down** navigation key to open list box.
- 9 Use the **Up/Down** navigation keys to scroll and highlight one of the following DHCP options:
 - No—disable DHCP support and enter IP network information manually.
 - Partial—IP network information (IP address, network mask, and gateway address) are provided by the DHCP server. Enter Server 1

IP address, Server 2 IP address, Port, Action, Retry, and PK numbers manually.

- Full—IP network information, Server 1 IP address, Server 2 IP address, and XAS information are provided by the DHCP server. All items are dimmed to prevent manual entry.

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 10 Use the **Right** navigation key to scroll and highlight **Set IP**. Use the dialpad to fill in the information.

Set IP—a valid IP Phone 2007 IP address

- 11 Use the **Right** navigation key to scroll and highlight **NET MASK**. Use the dialpad to fill in the information.

Network Mask—a subnet mask

- 12 Use the **Right** navigation key to scroll and highlight **Gateway**. Use the dialpad to fill in the information.

Gateway—the default gateway for the IP Phone 2007 on the LAN segment to which it is connected

- 13 Use the **Right** navigation key to scroll and highlight **S1 IP**. Use the dialpad to fill in the information.

S1 IP—the primary CS 1000 node IP address for IP Phone 2007

- 14 Use the **Right** navigation key to scroll and highlight **Port**. Use the dialpad to fill in the information.

S1 Port—a fixed value of 4100

- 15 Use the **Right** navigation key to scroll and highlight **S1 Action**. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 16 Use the **Right** navigation key to scroll and highlight **Retry**. Use the dialpad to fill in the information.

Retry—the number of times the IP Phone 2007 attempts to connect to the server

- 17 Use the **Right** navigation key to scroll and highlight **S1 PK**. Use the dialpad to fill in the information.

S1 PK—the Private key of the Secure Media Controller to which the IP Phone is connected

- 18 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Enter 6 or 1. This value depends on the S1 Action configuration.
- 19 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffff.

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 20 Use the **Right** navigation key to scroll and highlight **S2 IP**. Use the dialpad to fill in the information.

S2 IP—the secondary CS 1000 node IP address for IP Phone 2007

Note: IP Phone 2007 can support a primary (S1) and secondary (S1) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

- 21 Use the **Right** navigation key to scroll and highlight **Port**. Use the dialpad to fill in the information.

Port—same as S1 port

- 22 Use the **Right** navigation key to scroll and highlight **S2 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 23 Use the **Right** navigation key to scroll and highlight **Retry**. Use the dialpad to fill in the information.

Retry—same as S1

- 24 Use the **Right** navigation key to scroll and highlight **S2 PK**.

S2 PK—the Private key of the alternate Secure Media Controller to which the IP Phone is connected

- 25** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Set the S2 PK to 6 or 1. This value depends on the S2 Action configuration.

Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffff.

- 26** Use the **Right** navigation key to scroll and highlight **VoiceVLAN** combo box. Press the **Down** navigation key to open the list box.

- 27** Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- DHCP—VLAN ID is configured automatically to one of the values received from the DHCP server
- LLDP MED—VLAN ID is configured automatically to the value received from 802.1ab LLDP
- LLDP VLAN Name—VLAN ID is configured automatically to the value received from 802.1ab LLDP
- Manual

Note: If LLDP is disabled, LLDP MED and LLDP VLAN Name modes do not appear in the list. If DHCP is disabled, DHCP does not appear in the list.

- 28** Use the **Right** navigation key to scroll and highlight **VLAN Filter** check box.

If the VLAN Filter is enabled, packets destined for the IP Phone port are filtered on their MAC address and their VLAN tag. Untagged VLAN packets and tagged VLAN packets that differ from the Telephony VLAN ID are prevented from reaching the IP Phone port.

For information about VLAN tagging, Appendix Appendix B: “802.1Q VLAN description” on [page 511](#).

Note: The **VLAN Filter** check box will appear dimmed if you select **No** in the **VoiceVLAN** combo box.

- 29** Use the **Right** navigation key to scroll and highlight **Disable PC Port** check box. Press the **Enter** key to toggle this item on and off.

- 30** Use the **Right** navigation key to scroll and highlight **DataVLAN** combo box. Press the **Down** navigation key to open the list box.

Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- LLDP VLAN Name—VLAN ID is configured automatically to the value received from 802.1ab LLDP
- VLAN ID value—manual selection of VLAN ID between 1 and 4094

Note: If LLDP is disabled, LLDP VLAN Name does not appear in the list.

- 31** Press the **Enter** key.

- 32** Use the **Right** navigation key to scroll and highlight **PC-Port Untag All** check box. Press the **Enter** key to toggle this item on and off.

- 33** If DATA VLAN is enabled, the tag on all traffic destined for the PC port is stripped, by default. To override this action, deselect the PC-Port Untag All check box. If DATA VLAN is disabled, the tag on all traffic destined for the PC port is not stripped. To override this action, select the PC-Port Untag All check box

For more information about PC port tag stripping, see Appendix Appendix B:: "802.1Q VLAN description" on [page 511](#).

- 34** Use the **Right** navigation key to scroll and highlight **Duplex** combo box. Press the **Down** navigation key to open the list box.

Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- Auto—Link speed is auto negotiated with the network device and attached PC
- 10BT Full—Link speed is available for up to 10 Megabit Full Duplex on the network and the PC port.
- 100BT Full—Link speed is available for up to 100 Megabit Full Duplex on the network and the PC port.

For more information about Full Duplex, see "Full Duplex mode" on page 185.

- 35** Use the **Right** navigation key to scroll to **Enable PSK SRTP**: Select **Yes** to enable SRTP media encryption or select **No** to disable SRTP media encryption.

The SRTP media encryption feature provides encrypted media. A preshared secret is embedded in the Nortel IP Phone to generate and to exchange encryption parameters without any Call Server involvement.

For further information about SRTP media encryption feature, see “Features overview” on page 493 and *System Security Management (NN43001-604)*.

- 36** Use the **Right** navigation key to scroll to **Ignore GARP**. Select **Yes** to enable GARP protection, or **No** to disable GARP protection.

The GARP feature protects the IP Phone from a Gratuitous ARP Spoof attack from the network.

For more information about GARP, see “Gratuitous Address Resolution Protocol Protection” on page 187.

- 37** If an External Application Server (XAS) is available in the network, use the **Right** navigation key to scroll and highlight the **XAS IP** combo box. Use the dialpad to enter the XAS IP address.

The XAS delivers business applications to the IP Phone. For more information about XAS, see Nortel Application Gateway 1000 documentation.

- 38** Use the **Right** navigation key to scroll and highlight the **Graphical XAS** check box.

- 39** Use the **Right** navigation key to scroll and highlight the **Port** combo box. Use the dialpad to fill in the information.

- 40** Upgrade the IP Phone 2007 firmware.

The IP Phone 2007 supports remote firmware upgrades through a TFTP process and an automated UFTP process.

The method to upgrade the firmware depends on the following Call Server software:

- For Succession Release 3.0 or CS 1000 Release 4.0, the TFTP Server is required to download the current firmware. Enter the TFTP Server IP address at the prompt.
- For CS 1000 Release 4.5 and later, use either a TFTP Server to upgrade the firmware (at the prompt accept the default entry of 0.0.0.0), or UFTP to download the current firmware.

For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

For Succession Release 3.0 or CS 1000 Release 4.0, the IP Phone 2007 searches for the TFTP Server for firmware upgrade. If the file name specified in i2007.cfg is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone 2007 reboots.

Note: The Enhanced UNISTim firmware download is only supported on CS 1000 Release 4.5 or later. The Enhanced UNISTim firmware download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2007 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 2007 searches for the connect server.

The IP Phone 2007 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When download is complete, the IP Phone 2007 resets.

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 41 Check for dial tone and the correct DN above the display.
- 42 (Optional) Customize the feature keys as required. For more information, see the *IP Phone 2007 User Guide*.
- 43 Tap the **Tools** icon to calibrate the touch panel and stylus.
- 44 Tap the **Touch Panel Setup** soft key.

The screen displays a calibration map, the **Cancel** soft key is displayed, and the following system prompt is displayed:

Touch the center of the red ball.

- 45 Use the stylus and tap each of the red dots, in order, starting with the lower left portion of the screen, and following the sequence as prompted.

After the third dot is tapped, the display changes to indicate the result of calibration.

- If the calibration is successful, the telephone displays the following report:

Data calibration is CORRECT.
Save Data calibration?

YES and **NO** soft keys and calibration statistics are displayed on the screen.

Tap the **YES** soft key to save the calibration settings and exit to the main display or tap the **NO** soft key to abandon the calibration settings and exit to the main display.

- If the calibration is unsuccessful, the telephone displays the following report:

Data calibration is WRONG.
Repeat calibration?

YES and **NO** soft keys and calibration statistics are displayed on the screen.

Tap the **YES** soft key to retry the calibration. Return to step 43 on [page 184](#) to follow the calibration procedure or tap the **NO** soft key to abandon the calibration and return to the main display.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 27 on [page 186](#) to enable Full Duplex mode.

Procedure 27
Enabling Full Duplex mode

- 1 Tap the **Tools** icon.
- 2 Enter the Tools menu password (if Password protection is enabled). For information about Password Protection, see “Local Tools menu password protection” on page 168.
- 3 Tap the **Network Configuration** menu entry.
- 4 Use the **Right** navigation key to scroll and highlight the **Duplex** combo box.
- 5 Press the **Down** navigation key to open list box.
- 6 Use the Up/Down navigation keys to scroll and highlight one of the following options:
 - 10BT Full—10 BT Full Duplex mode
 - 100BT Full—100 BT Full Duplex mode
- 7 Tap the **Apply&Reset** soft key to save the changes and to restart the IP Phone. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 28 to confirm activation of Full Duplex mode.

Procedure 28
Checking Ethernet Statistics

- 1** Tap the **Tools** icon.
- 2** Tap the **Local Diagnostics** soft key.
- 3** Tap the **Ethernet Statistics** soft key.

The following statistics are displayed:

- Link: Up
- Duplex: Full
- Speed: 10 (Mb) or 100 (Mb)
- Auto-Negotiate Capability: N
- Auto-Negotiate Completed: N

End of Procedure

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 2007 from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim's machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim's machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 25, "Configuring the IP Phone 2007" on page 173.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on

802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Reinstalling an IP Phone 2007

You can reinstall an existing, previously-configured IP Phone 2007 on the same system. For example, the IP Phone 2007 can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 2007.

Procedure 29

Changing the TN of an existing IP Phone 2007

- 1 Repower the IP Phone 2007.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 2007 displays the existing node number for approximately five seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |

- 4 Enter the password at the password screen, and press **OK**.
A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Clear** soft key to clear the existing TN.

- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 2007

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 2007 that is currently using the TN.

Procedure 30 **Replacing an IP Phone 2007**

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 2007 that you want to replace.
- 3 Follow Procedure 25 on [page 173](#) to install and configure the IP Phone 2007.

Enter the same TN and Node Number as the IP Phone 2007 you replaced. The system associates the new IP Phone 2007 with the existing TN.

End of Procedure

Removing an IP Phone 2007 from service

Procedure 31 **Removing an IP Phone 2007 from service**

- 1 Disconnect the IP Phone 2007 from the network or turn the power off.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 2007.

If the IP Phone 2007 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

2 In LD 11, enter OUT at the TN prompt

_____ **End of Procedure** _____

IP Phone Key Expansion Module (KEM)

Contents

This section contains information on the following topics.

| | |
|---|-----|
| Description | 191 |
| Features | 192 |
| Display characteristics | 193 |
| Key number assignments | 193 |
| Package components | 193 |
| Configuration | 194 |
| Installation | 198 |
| IP Phone KEM startup initialization | 200 |
| Operating parameters | 201 |

Description

The Nortel IP Phone Key Expansion Module (KEM) is a hardware component that connects to IP Phone 2002 and IP Phone 2004 and provides additional line appearances and feature keys (see Figure 14 on [page 192](#)).

Up to two IP Phone KEMs can be connected to an IP Phone 2002 or IP Phone 2004. With two IP Phone KEMs connected, the IP Phone can have up to 48 additional line/feature keys.

Note: The IP Phone 2004 can also have up to 48 additional line/feature keys using the **Shift** key functionality and one IP Phone KEM. With two IP Phone KEMs connected, the **Shift** key functionality does not affect the IP Phone KEMs since the maximum number of line/feature keys is already available. The IP Phone 2002 does not support **Shift** key functionality.

Figure 14
IP Phone 2002 with one IP Phone KEM attached



Features

The IP Phone KEM has the following features:

- 12 keys on each side of an LCD provide up to 24 additional self-labeled line/feature keys. Using the **Shift** key functionality, an IP Phone 2004 can have up to 48 additional logical line/feature keys.

- A desk-mount bracket and structural baseplate connect the IP Phone KEM to an IP Phone 2002 or IP Phone 2004, or to another IP Phone KEM.
- A wall-mount bracket installs the IP Phone KEM alongside a wall-mounted IP Phone 2002 or IP Phone 2004.

Display characteristics

The IP Phone KEM has one LCD between the two rows of 12 Line/feature keys (see Figure 14 on [page 192](#)). Each of the 24 physical keys on the IP Phone KEM has a 10-character display label. This label is set automatically, however, the user can edit the label using the controls on the IP Phone.

To alter the display and contrast on the IP Phone KEM, use the **Contrast Adjustment** option under the **Telephone Options** menu on the IP Phone. Any contrast changes you make on the IP Phone affect the IP Phone KEM. The IP Phone KEM and IP Phone do not have separate contrast adjustments.

Key number assignments

Since the IP Phone 2002 and IP Phone 2004 have key number assignments from 0 to 31, the IP Phone KEM key number assignments begin at 32. Therefore, the first IP Phone KEM has key number assignments from 32 to 55, and the second IP Phone KEM has key number assignments from 56 to 79.

Package components

Table 20 lists the IP Phone KEM package components.

Table 20
IP Phone KEM components list (Part 1 of 2)

| Components | Order code |
|--------------------------|---------------------|
| IP Phone KEM (Ethergray) | NTEX00DA16/A0540989 |
| IP Phone KEM (Charcoal) | NTEX00DA70/A0540990 |

Table 20
IP Phone KEM components list (Part 2 of 2)

| | |
|--|--------------|
| IP Phone KEM (Charcoal) RoHS | NTEX00DA70E6 |
| IP Phone KEM wall mount kit - Charcoal | A0555218 |

Configuration

The IP Phone KEM must be configured in LD 11 before it can be used.

LD 11 – Configure the IP Phone KEM (Part 1 of 5)

| Prompt | Response | Description |
|--------|----------|--|
| REQ: | NEW | Add new data. |
| | CHG | Change existing data. |
| TYPE: | i2002 | IP Phone 2002 |
| | i2004 | IP Phone 2004 |
| ... | | ... |
| ZONE | 0 – 255 | Zone number to which the IP Phone 2002 or IP Phone 2004 belongs |
| KEM | (0) – 2 | Number of attached IP Phone KEMs |
| | | Note: Up to two IP Phone KEMs can be attached to an IP Phone. Pressing <CR> without entering a number leaves the value unchanged. |
| | | |

LD 11 – Configure the IP Phone KEM (Part 2 of 5)

| Prompt | Response | Description |
|--------|-------------------------------------|---|
| KEY | xx aaa yyyy (cccc or D) zz.z | <p>Telephone function key assignments</p> <p>The following key assignments determine calling options and features available to an IP Phone. Note that KEY is prompted until a carriage return <CR> is entered.</p> <p>Where:</p> <p>xx = key number aaa = key name or function yyy = additional information required for the key zz.z = additional information required for the key aaa.</p> <p>The cccc or D entry deals specifically with the Calling Line Identification feature, where:</p> <p>cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.</p> <p>D = the character “D”. When the character “D” is entered, the system searches the DN keys from key 0 and up, to find a DN key with a CLID table entry. The CLID associated with the found DN key will then be used.</p> <p>Note: The position of the (cccc or D) field varies depending on the key name or function.</p> <p>You may enter a CLID table entry if aaa = ACD, HOT d, HOT L, MCN, MCR, PVN, PVR, SCN, or SCR.</p> <p>Some data ports require specific key assignments. See the <i>Meridian Data Services</i> for information regarding these requirements.</p> <p>Type xx NUL to remove a key function or feature.</p> |

LD 11 – Configure the IP Phone KEM (Part 3 of 5)

| Prompt | Response | Description |
|--------|----------|---|
| | | <p>Key number limits that can be assigned are as follows:</p> <ul style="list-style-type: none"> 0-7 for Meridian Communications Adapter (MCA) 0-5 for M2006 0-7 for M2008 0-59 for M2616, varies with number of add-on modules 0-79 for i2002, varies with value of KEM 0-79 for i2004, varies with value of KEM <p>Note: The first IP Phone KEM is assigned keys 32-55, and the second IP Phone KEM is assigned keys 56-79.</p> <p>If either the Meridian Programmable Data Adapter (MPDA) or the Display Module is equipped, then key 7 on sets M2008, M2216, and M2616 and key 5 on set M2006 will become Program keys which cannot be used as function keys.</p> <p>Any printout of the TN block will not show key 7 because it is a local function key.</p> <p>On the M2616, if CLS = HFA, key 15 on the voice TN defaults to the Handsfree key. No other feature assignment is accepted.</p> <p>Primary and secondary data DNs must be unique.</p> <p>A station SCR, SCN, MCR, or MCN DN must be removed as a member from all Group Hunt lists before the DN can be modified.</p> |

LD 11 – Configure the IP Phone KEM (Part 4 of 5)

| Prompt | Response | Description |
|----------|-----------------------|--|
| PAGEOFST | <Page> <KeyOffset> | <p>On the M3903, keys 4-15 are blocked. No feature assignment is accepted for keys 2-15.</p> <p>On the M3903, M3904, and M3905, keys 29-31 are reserved. No feature assignment is accepted for keys 29-31 other than NUL.</p> <p>On M3904, no feature assignment is accepted for keys 12-15.</p> <p>On M3905, the craftsperson can assign NUL or a server application on key 5. On key 6, the craftsperson can assign NUL or a local application.</p> <p>On M3905, the craftsperson can assign NUL or the program key on key 7.</p> <p>On M3905, the craftsperson can assign AAG, AMG, ASP, DWC, EMR, MSB, or NRD on keys 8-11. Other features are blocked.</p> <p>Automatically calculates the IP Phone KEM key based on the entered values. This prompt enables the system administrator to enter a Page number of 0 or 1 and a Key Offset number from 0-23. Once entered, the KEY prompt is prompted with the appropriate KEY value filled in.</p> <p>Enter <CR> to terminate data entry.</p> <p>Note 1: Applies to an IP Phone 2004 with KEM = 1, and where <CR> was entered at the KEY prompt.</p> <p>Note 2: Does not apply to an IP Phone 2002.</p> <p>When values are entered for Page and KeyOffset, the KEY xx prompt displays, followed by PAGEOFST prompt. This loop continues until no values (<CR> only) are entered at the PAGEOFST prompt.</p> |

LD 11 – Configure the IP Phone KEM (Part 5 of 5)

| Prompt | Response | Description |
|---------|--|---|
| KEY xx | | <p>Edit the IP Phone KEM key number specified by PAGEOFST, where: xx = the number of the key (for example, KEY 36)</p> <p>Enter <CR> to keep the current setting.</p> |
| KEMOFST | <p><KEM> <KeyOffset></p> | <p>Automatically calculates the IP Phone KEM key based on the entered values. This prompt enables the system administrator to enter a KEM number of 1 or 2 and a Key Offset number from 0-23. Once entered, the KEY prompt is prompted with the appropriate KEY value filled in.</p> <p>Enter <CR> to terminate data entry.</p> <p>When values are entered for KEM and KeyOffset, the KEY xx prompt displays, followed by KEMOFST prompt. This loop continues until no values (<CR> only) are entered at the KEMOFST prompt.</p> <p>Note 1: Applies to an IP Phone 2002 if <CR> was entered at the KEY prompt.</p> <p>Note 2: Applies to an IP Phone 2004 with KEM = 2, and where <CR> was entered at the KEY prompt.</p> |
| KEY xx | | <p>Edit the IP Phone KEM key number specified by KEMOFST, where: xx = the number of the key (for example, KEY 36)</p> <p>Enter <CR> to keep the current setting.</p> |

Installation

The IP Phone KEM mounts on the right side of an IP Phone 2002 or IP Phone 2004. The IP Phone KEM snaps into the receptacle on the back of the IP Phone using the desk-mount bracket and structural baseplate supplied with the IP Phone KEM (see Figure 15).

The IP Phone KEM connects to the IP Phone 2002 or IP Phone 2004 using the Accessory Expansion Module (AEM) port on the IP Phone.

Figure 15
IP Phone KEM attached to an IP Phone 2002



Procedure 32
Connecting the IP Phone KEM to an IP Phone 2002
or IP Phone 2004

Use the following instructions to install an IP Phone KEM:

- 1 Remove the IP Phone from the stand by pressing the IP Phone tilt handle, and pulling the IP Phone away from the stand.

Note: For the IP Phone 2004, you can also adjust the stand angle to maximum, instead of removing the stand.

- 2 Place the connecting arm of the IP Phone KEM behind the IP Phone and align the IP Phone KEM connection plug to the AEM port on the back of the IP Phone.

Note: The IP Phones 2002 with the product codes: NTDU76AB34, NTDU76BB34, NTDU76AB70, and NTDU76BB70 have shorter connector pins than the other IP Phone 2002. Therefore, the ribbon cable connector of the IP Phone KEM must be detached from the retaining clip and pressed manually into the header connector before attaching the IP Phone KEM.

3 Press the IP Phone KEM and IP Phone firmly together until the IP Phone KEM locks into place.

4 If connecting a second IP Phone KEM, repeat steps 1-3.

Note: The second IP Phone KEM is attached to the right side of the first IP Phone KEM.

5 Attach the IP Phone stand and the IP Phone KEM stand, if removed. Adjust each IP Phone KEM stand to the same angle as the IP Phone.

The IP Phone KEM powers up.

Note: The IP Phone KEM uses the electrical connection of the IP Phone 2002 or IP Phone 2004 for power. It does not have its own power source.

End of Procedure

IP Phone KEM startup initialization

Once the IP Phone KEM has been installed and powered up on your IP Phone 2002 or IP Phone 2004, the IP Phone KEM initializes (see Table 21).

Table 21
Startup initialization process for the IP Phone KEM

| Phase | Description |
|------------------------------------|--|
| 1. IP Phone KEM performs self-test | <p>The self-test confirms the operation of the IP Phone KEM's local memory, CPU, and other circuitry. While undergoing this self-test, the IP Phone KEM display lights up.</p> <p>Note: If the IP Phone KEM display does not light up, or lights up and then goes blank, or fails to begin flashing, check that the IP Phone KEM is correctly installed and configured.</p> |

Table 21
Startup initialization process for the IP Phone KEM

| Phase | Description |
|--|--|
| 2. IP Phone KEM establishes communication with the IP Phone | The IP Phone KEM display flashes until it establishes communication with the IP Phone. If the IP Phone KEM display does not stop flashing, communication has not been established with the IP Phone. Check that the IP Phone KEM is correctly installed and configured. |
| 3. IP Phone KEM downloads keymaps | The key labels download to the IP Phone KEM. During the download, the display is blank. |

When the three phases complete successfully, you are ready to use the additional line/feature keys on your IP Phone KEM.

Note: If you have a second IP Phone KEM installed on your IP Phone, the one to the immediate right of the IP Phone must be functional for the subsequent IP Phone KEM to work. This is because the second IP Phone KEM receives its power, and communicates with the IP Phone, through the first IP Phone KEM.

Operating parameters

General

If an IP Phone KEM is not responding, and lines or features are configured on keys 32–79, calls can be directed to those keys which the user cannot access. This means the IP Phone 2002 or IP Phone 2004 rings but the call cannot be answered. In such cases, the incoming call receives Call Forward No Answer (CFNA) treatment.

IP Phone 2002

If only one IP Phone KEM is configured in LD 11, but two IP Phone KEMs are detected on an IP Phone 2002, the second IP Phone KEM is ignored. An

error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If two IP Phone KEMs are configured in LD 11, but only one IP Phone KEM is responding, the keys on the second IP Phone KEM are available for call processing but are not accessible to the user. This means that lines and features on keys 56-79 can cause the IP Phone 2002 to ring, but there is no way to answer it. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

IP Phone 2004

If only one IP Phone KEM is configured in LD 11, but two IP Phone KEMs are detected on an IP Phone 2004, the Terminal Proxy Server (TPS) assigns keys 56–79 to the second IP Phone KEM. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If two IP Phone KEMs are configured in LD 11 but only one IP Phone KEM is responding, the TPS assigns keys 32–79 to the single IP Phone KEM (using the **Shift** key functionality). An error message displays to alert the administrator that the hardware configuration does not match the administered configuration. When a second IP Phone KEM is detected, the TPS changes the key assignments to display across both IP Phone KEMs, as expected.

Virtual Office

When a Virtual Office (VO) login occurs from an IP Phone 2002 or IP Phone 2004 that does not have the same number of IP Phone KEMs responding as configured on the IP Phone used to log in, call processing may terminate on a key that is not physically available. In other words, the IP Phone rings but the call cannot be answered.

During the VO login process, the existence of any IP Phone KEM is verified. If a mismatch is detected, the login proceeds normally; however, an error message is generated to alert the administrator of the mismatch.

Firmware

The IP Phone KEM firmware is not downloadable. In the event that the IP Phone KEM firmware must be upgraded or changed, the IP Phone KEM must be replaced with a new IP Phone KEM containing the updated firmware.

Nortel IP Softphone 2050

Contents

This section contains information on the following topics:

| | |
|--|-----|
| Introduction | 205 |
| Description | 206 |
| Supported features | 208 |
| Operation | 214 |
| Key number assignments | 222 |
| Operating parameters | 224 |
| System components | 225 |
| Before you begin | 226 |
| First-time installation | 226 |
| Installing or upgrading the IP Softphone 2050 | 228 |
| Running the IP Softphone 2050 for the first time | 232 |
| Changing the TN of an existing IP Softphone 2050 | 233 |
| Removing an IP Softphone 2050 from service | 234 |

Introduction

This section explains how to install and maintain the IP Softphone 2050. For information about using the IP Softphone, see the CS 1000 *Nortel Networks IP Softphone 2050 User Guide*.

This section contains the following procedures:

- Procedure 34, “Installing an IP Softphone 2050 for the first time” on page 227.
- Procedure 35, “Installing the IP Softphone 2050 on the PC (new installation)” on page 229.
- Procedure 36, “Upgrading the IP Softphone 2050 on your PC” on page 230.
- Procedure 37, “Uninstalling the IP Softphone 2050 (Version 1)” on page 230.
- Procedure 38, “Uninstalling the IP Softphone 2050 (Version 2)” on page 231.
- Procedure 41, “Changing the TN of an existing IP Softphone 2050” on page 233.
- Procedure 42, “Removing an IP Softphone 2050 from service” on page 234.

Description

The IP Softphone 2050 is a Windows-based application that provides voice services for Personal Computers (PC). The IP Softphone 2050 operates on PCs that run Windows 2000 Professional, Windows XP Pro, and Windows XP Home.

Designed to work with IP-based phone systems, the IP Softphone 2050 provides Voice Over IP (VoIP) services using a telephony server and an enterprise Local Area Network (LAN). The VoIP application is comprised of the following components:

- Settings—used to configure the IP Softphone
- IP Softphone 2050—the IP Softphone user interface
- IP Softphone 2050 QoS

The IP Softphone 2050 supports the following features:

- 12 user-defined feature keys: six programmable line (DN)/feature keys and six lines/features accessed by pressing the Shift key

- four soft keys providing access to a maximum of 10 features
- four-line display
- directory capabilities stored locally on the PC or linked to external directories, such as LDAP, Microsoft Outlook, and Windows Address Book Directory
- one-click direct dialing from various windows and applications
- seven specialized feature keys:
 - Directory
 - Inbox/Message
 - Shift/Outbox
 - Services
 - Quit
 - Copy
 - Expand
- dedicated call processing keys
 - Hold
 - Goodbye
 - Answer
 - Mute
 - Navigation
 - Message Waiting
- user-selected ringer lets the PC speakers or the headset ring for incoming calls
- choice of two window skins, as well as an Accessibility Interface option for the visually-impaired

The Accessibility Interface operates with screen reading software, such as JAWS® for Windows from Freedom Scientific, which enables visually-impaired users to access the full range of IP Softphone 2050 features. Visually-impaired users can follow Procedure 39 on [page 231](#)

to install the Accessibility Interface from the IP Softphone 2050 CD ROM.

- programmable hot keys allow single-key access to user-definable features
- three input modes: Digit, Alpha, and Native
- macro functions available for programming long dialing patterns
- support for G.711, G.729A, and G.729AB codecs for operation at a variety of network connection speeds

Supported features

The IP Softphone 2050 supports the following additional features:

- Call Duration Timer
- ability to change the feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual office
- Branch Office
- Call Recording
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, and Turkish

Language support

The IP Softphone 2050 is affected by the following three language controls:

- Operating system language

- IP Softphone 2050 language selection—sets the language displayed in the help screens and in the menus (select the IP Softphone 2050 language from the Application menu or during installation)
- TPS language selection—sets the language in the display area (the language in the display areas is selected from the Language menu)

Note: In normal operation, the language chosen from the IP Softphone 2050 language setup matches the language chosen from the Language menu. Otherwise, the soft key labels and feature prompts will appear in a different language than the help text and menu items on the IP Softphone 2050 application. The user must ensure that the appropriate language is chosen.

Components

The IP Softphone 2050 supports the following main components:

- Call Control window
- Local Directory window
- Settings window
- System tray icon and menu
- third-party supported applications
- i2050.exe application

Call Control window

You can use the 1140 Call Control Window (see Figure 16 on [page 210](#)), or the Compact skin Call Control window (see Figure 17 on [page 210](#)) to make and manage telephone calls.

Figure 16
1140 Call Control window

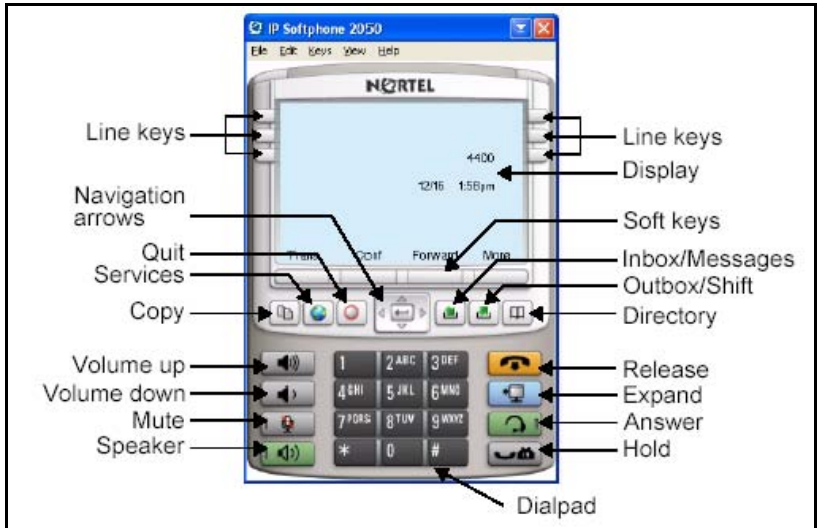


Figure 17
Compact skin Call Control window

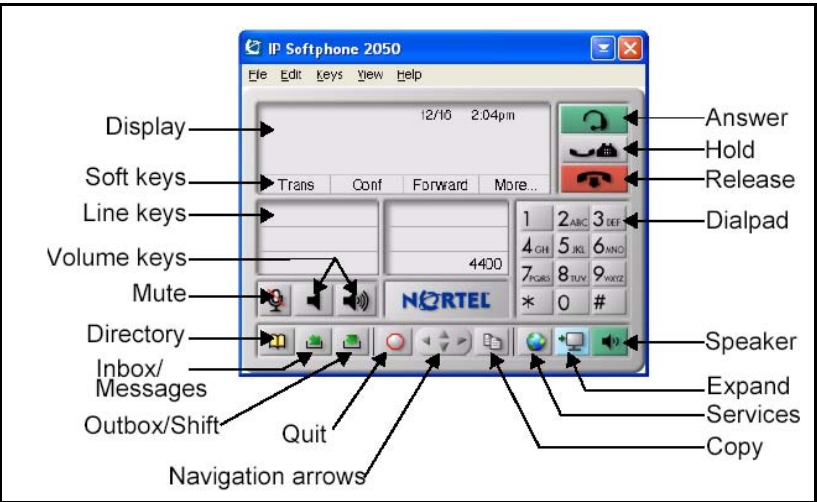


Table 22 lists the elements and functions of the Call Control window.

Table 22
Call Control window elements and functions (Part 1 of 3)






 
| Element | | Function |
|-----------------|--|--|
| Primary display | | The primary display area provides call information (for example, Caller ID) and instructions for using certain soft key features. In the idle state, only the date and time are displayed. |
| Soft keys | | Four additional soft-labeled keys on the IP Softphone 2050 support a specific subset of the key features. |
| Answer |  | Click the Answer key to answer and make calls. |
| Hold |  | Click the Hold key to place an active call on hold. The feature key label for the line placed on hold displays a flashing icon. Click the Line key to return to the call. |
| Release |  | Click the Release key to end an active call. |
| Line keys | | Six programmable line keys represent line appearances, DNIs, or features. |
| Volume |  increase  decrease | Use the volume keys to increase or decrease the headset volume. |
| Mute |  | Click the Mute key to listen to the receiving party without transmitting. Click the Mute key to return to a two-way conversation. The Mute key mutes the headset microphone. |

Table 22
Call Control window elements and functions (Part 2 of 3)




 






| Element | | Function |
|-------------------|---|--|
| Directory |  | Click the Directory key to access the Network Directory. |
| Inbox/Message |  | Click the Inbox/Message key to access messages or return a call. |
| Shift/Outbox |  | Press the Shift key to shift between two feature key pages when a second feature key page exists. |
| Copy |  | Click the Copy key to copy a network service, feature, or folder. |
| Quit |  | Click the Quit key to quit a network service or feature. |
| Navigation arrows |  | Use the navigation arrows to scroll through menus and lists in the display area. |
| Send/Enter |  | Press the Send/Enter key, at the center of the Navigation key cluster, to confirm menu selections. Note: The Send/Enter key is only available on the 1140E Call Control window. |
| Dialpad | | Click numbers on the dialpad to dial a number. |

Table 22
Call Control window elements and functions (Part 3 of 3)

| Element | Function |
|--|--|
| Speaker  | Click the Speaker key to answer and make calls using the handsfree speaker. |
| Expand  | The Expand key is reserved for future implementation. |
| Services  | Press the Services key access the following items: <ul style="list-style-type: none"> • Language • Date/Time • Set Info • Call Log Options • Ring type • Call Timer • Change Feature Key Label • Name Display Format • Virtual Office Login and Virtual Office Logout (if Virtual Office is configured) • Test Local Mode and Resume Local Mode (if Branch Office is configured) • Password Admin: <ul style="list-style-type: none"> — Station Control Password |

Operation

Display characteristics

The IP Softphone 2050 has the following display areas:

- information display
- soft key label display
- keypad dialing keys display
- feature keys display

Information display area

The information display area can contain four lines of text, up to a maximum of twenty four characters for each line. The display area consists of 2 areas: Info line and Info window.

Info line

The Info Line is the first (top) line of display text. The left ten-character area shows the Call Server type. The right part of the Info Line shows the current time and date.

Info window

The Info Window display area that shows prompts and information about calls. During a call the information area is used to display dialed digits, calling line ID, called party name, application-specific information, and various messages such as “Release and Try Again”.

When the information exceeds 3 x 24 characters, a scroll icon tells the user to press the scroll keys to view the second line of the display.

Soft key label display

A maximum of ten functions can be assigned to the soft keys. Functions are assigned to the soft keys in layers in LD 11.

Use the **More** soft key to navigate through the layers of functions. If only 4 functions are assigned to the soft keys, the **More** key does not appear and all four functions are displayed.

The soft key label has a maximum of 7 characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a flashing icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last, or rightmost, character is truncated.) If a feature is enabled, the icon state turns to ON. It remains in the ON state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

System Tray

The System Tray provides fast access to most of the IP Softphone 2050 functionality. The user can make, answer, and manage a call, as well as access macros and features from the System Tray without opening the Call Control window.

Nortel USB Audio Kit

The USB Audio Kit enables the user to speak and hear callers. To ensure proper IP Softphone 2050 operation, use only Nortel-supported USB audio kits. The USB Audio Kit includes the following:

- USB Headset Adapter (desktop or mobile)
- Installation Guide
- USB cord

The following USB adapters are supported on the IP Softphone 2050:

- Nortel Enhanced USB Adapter (desktop)
- Nortel Mobile USB Adapter (mobile)

The Algo Analog Terminal Adapter (ATA) is a USB adapter that lets you use analog terminals instead of headsets. With an Algo ATA users can, for example, use a cordless headset with their IP Softphone 2050.

The IP Softphone 2050 is compatible with the Algo ATA. For support, see www.algosolutions.com.

USB Headset Adapter

The USB Headset Adapter provides a controlled high-quality audio environment, including:

- absolute and predictable loss and level plan implementation that is necessary to meet TIA-810, FCC part 68 and its international equivalents, as well as the ADA requirements for the hearing impaired
- compliance with version 1.1 of the USB Device Specification and Windows Plug & Play specifications
- simple installation using standard Windows drivers (requires no additional software or drivers)
- support on Windows 2000 Professional, Windows XP Pro, and Windows XP Home

See the *IP Softphone 2050 User Guide* for specific operation system information.

- in-use lamp connector with in-use control provided by polarity insensitive isolated contact closure
- red Message Waiting light, located at the top of the USB Headset Adapter, that flashes when you have voicemail messages
- IP Softphone 2050 Smart Functions button enables the IP Softphone 2050 Smart Functions menu that provides quick access to IP Softphone 2050 features
- Mute light that indicates a call is on mute

The USB Headset Adapter auto-configures in the supported Windows operating system. No additional software is required.

Registration

When you add an IP Softphone 2050 to the network, depending on configuration, the IP Softphone 2050 can connect to a predefined IP address or can request an IP address from a DHCP server. The IP Softphone 2050 then contacts the Connect Server, which instructs the IP Softphone 2050 to display a message on its display screen requesting the customer's node number and TN.

After the customer enters this information, the IP Softphone 2050 contacts the Node Master, which selects a TPS with sufficient capacity to register the IP Softphone 2050. The IP Softphone 2050 contacts the chosen TPS and, if the IP Softphone 2050 is valid, registers it with the system. The registration information is then saved to the IP Softphone 2050.

Loss plan

The USB Headset Adapter provides the IP Softphone 2050 with a fixed loss plan compliant with the TIA-810A specification. If other headsets or audio devices are used, the loss plan is unknown and undefined. Nortel supports the resolution of audio problems only for the USB Headset Adapter.

Echo cancellation

Echo can be generated electrically when there is an impedance mismatch, or generated acoustically by feedback from a speaker or ear piece to a microphone. Any echo that is ultimately returned to the IP Phone is more noticeable to the listener because of the additional delay introduced by the IP connection.

The Voice Gateway Media Card has echo cancelers included as part of its function that cancels echo generated on the TDM side of the Media Gateway. When audio goes through the Voice Gateway Media Card, the echo cancellers are enabled.

The IP Softphone 2050 has no echo canceller, so a slight echo from acoustic coupling on the headset can occur in some call situations.

Clock synchronization

Buffer underruns and overruns can occur since there is no sample clock at the receiving end of an IP audio stream synchronized to the transmitting clock. The buffer overruns and underruns are corrected by two mechanisms, both of which apply to the IP Phones and the DSPs on the Voice Gateway Media Card.

Jitter buffer

Use the default value sent from the TPS (the value configured in TM– [Nortel recommends that you use the default value]) to configure the IP Softphone 2050 jitter buffer.

The jitter buffer has a desired size and a maximum allowable size. If the jitter buffer exceeds its maximum allowable size, sufficient frames are discarded to reduce the contents of the jitter buffer to the desired setting. If the jitter buffer underruns, frames are held in the jitter buffer until it fills to the desired level. Both underrun and overrun result in a discontinuity in the audio.

For codecs that support silence suppression, the jitter buffer is resynchronized at the beginning of each talk spurt.

Quality of Service

A combination of codec selection, jitter buffer and packet time, and the use of the DiffServ Code Point (DSCP) of the network contributes to the end-to-end Quality of Service (QoS).

However, the IP Softphone 2050 is an application within the context of the PC operating system, so the operating system has an effect on the end-to-end QoS for the IP Softphone 2050. Functionality, which is commonly handled in DSP hardware (such as, the codec packetization implementation from within the Voice Gateway Media Card) is implemented in software for the IP Softphone 2050. It runs as part of the application code on the PC CPU. If the CPU is busy with other tasks, voice quality can be negatively affected.

The number of buffers used to buffer audio data between the application and PC audio hardware device driver is adjustable from the Settings > Sound Devices window. Using fewer buffers reduces the audio path delay but increases the chances of dropouts and choppy speech, depending on the speed and utilization of the PC CPU.

This system-wide registry key setting affects other applications and operating system components but is only effective if Windows QoS Packet Scheduler is installed. For more information about Windows QoS Packet Scheduler, see “Windows QoS Packet Scheduler” on page 232.

For Windows 2000 the Windows QoS Packet Scheduler is not installed by default and the EnablePriorityBoost registry setting is not created.

For Windows XP the Windows QoS Packet Scheduler is installed by default and the EnablePriorityBoost registry setting is created. The default setting is 1 (enable QoS).

Windows 2000 and Windows XP require a system-wide registry key to enable QoS capabilities. You must have Administrator privileges to create or modify the following value:

HKEY_LOCAL_MACHINE/SYSTEM/CurrentControlSet/Services/Qossp/EnablePriorityBoost

Value 0—do not enable QoS

Value 1—enable QoS

Trace utilities can be used to verify QoS settings. See “Ethereal traces” on page 221.

QoS settings

The IP Softphone Version 1 includes a QoS tab in the Configuration utility. You can enable or disable 802.1Q/p settings. The QoS tab provides the following settings:

- Enable—sends 802.1Q/p whether it is supported by the network or not
- Disable—does not send 802.1Q/p whether it is supported by the network or not
- Automatic Detection—sends 802.1Q/p packet, which requires a response from the TPS. If the TPS replies, 802.1Q.p is used. If the TPS does not reply, the same packet is sent without 802.1Q/p. If the TPS replies, then 802.1Q/p is not used.

To prevent improper assignment of these settings, this tab is removed in IP Softphone Version 2. The 802.1Q p settings are automatically detected.

QoS is otherwise supported in IP Softphone 2050 Version 2 as it was in IP Softphone 2050 Version 1.

i2050QoSSvc.exe

i2050QoSSvc.exe provides QoS tagging to outgoing 2050 IP packets. When the IP Softphone 2050 application opens a socket, the i2050QoSSvc software monitors traffic destined for the specified IP address and port. i2050QoSSvc software sets DiffServ QoS priority bits.

802.1p priority bits in the 802.1Q header can be set. 802.1Q headers must be enabled by the Network Interface Card (NIC) or NIC driver. The i2050QoSSvc does not fill in other fields in the 802.1Q header (for example, no values are assigned to the VLAN ID field).

VLAN ID

The default VLAN ID value in Windows is 0. This can be overwritten for Network Interface Cards (NIC) that support 802.1Q. The i2050 processes do not assign values to the VLAN ID field. This setting is documented with the NIC or the NIC driver.

The VLAN ID for an application must match the VLAN ID for the PC because the PC has only one IP stack for each NIC. A second IP stack is required to assign a specific VLAN ID tag for an application which is different than the PC tag.

You can use two different IP cards, each with different VLAN ID values on a single PC; however, this can cause security gaps on the voice VLAN, which is normally a more secure network than the data VLAN.

DiffServ

The IP Softphone 2050 uses DSCP settings assigned by the TPS. The IP Softphone 2050 supports DSCP on Windows 2000 Professional, Windows XP Pro, and Windows XP Home. For information about configuring DiffServ values, see *IP Line: Description, Installation, and Operation* (553-3001-365).

802.1p

For information about configuring 802.1p values, see *IP Line: Description, Installation, and Operation* (553-3001-365).

Ethereal traces

Current versions of Ethereal show 802.1Q headers, if they are present. 802.1Q must be enabled on the NIC for the headers, which includes 802.1p to be captured.

Application thread priorities

Priorities are determined by thread priorities. The i2050QosSvc.exe application consists of threads, which run the Graphical User Interface (GUI) and audio threads. Thread priorities increase from the base priority of the process, as needed. The audio threads boost to high priority, as recommended by Microsoft, while the GUI maintains a normal priority. Increasing the process priority implies that the operating system may not perform properly. This concern restrains the IP Softphone 2050 to use Windows recommended priorities to avoid an unpredictable degradation in general OS performance.

Codec

The IP Softphone 2050 provides the following codecs:

- G.711 provides the highest quality (if the network facilities can handle the packet flow) because there is no compression.
- G.729A is ranked best; it has 8:1 compression but no voice activity detection.
- G.729AB is the same as G.729A but includes voice activity detection; while this provides the lowest average network bandwidth utilization, in some call environments the speech quality suffers due to clipping of the beginning of words.

Frame size

The IP Softphone 2050 supports the following range of frame sizes:

- G.711-64 A-law and μ law: 10-960—10 ms increments
- G.729A: 10-960—10 ms frames
- G.729AB: 10-960—10 ms frames

Key number assignments

The IP Softphone 2050 has 6 keys that present 12 feature keys, with 6 on each feature key page. The keys are numbered from 0 to 11. The Shift key is used to change between two feature pages, 0 to 5 and 6 to 11.

Note: If a feature requires a feature package that is not present for the Call Server installation, that feature does not appear within the default configuration for the IP Softphone 2050.

The Message key is numbered 16. If Message Waiting is not configured, then key16 must be NUL.

Key numbers between 17 to 31 are assigned to the four soft label keys immediately below the display area. The supported features are: A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RPN, SCU, SCC, SSU, SSC, and TRN.

Table 23 describes the IP Phone feature assignment for each of the soft keys. Use LD 11 to program keys 16 to 26 on the IP Softphone 2050.

Note: If you attempt to configure anything other than the permitted response, the Call Server generates an error code.

Table 23
IP Softphone 2050 soft keys (Part 1 of 2)

| Prompt | Response | Description |
|--------|----------|--------------------------------------|
| Key 16 | MWK | Message Waiting key |
| | NUL | Removes function or feature from key |
| Key 17 | TRN | Call Transfer key |
| | NUL | Removes function or feature from key |
| Key 18 | A03 | three-party conference key |
| | A06 | six-party conference key |
| | NUL | Removes function or feature from key |

Table 23
IP Softphone 2050 soft keys (Part 2 of 2)

| Prompt | Response | Description |
|--------------|----------|--------------------------------------|
| Key 19 | CFW | Call Forward key |
| | NUL | Removes function or feature from key |
| Key 20 | RGA | Ring Again key |
| | NUL | Removes function or feature from key |
| Key 21 | PRK | Call Park key |
| | NUL | Removes function or feature from key |
| Key 22 | RNP | Ringing Number pickup key |
| | NUL | Removes function or feature from key |
| Key 23 | SCU | Speed Call User |
| | SSU | System Speed Call User |
| | SCC | Speed Call Controller |
| | SSC | System Speed Call Controller |
| | NUL | Removes function or feature from key |
| Key 24 | PRS | Privacy Release key |
| | NUL | Removes function or feature from key |
| Key 25 | CHG | Charge Account key |
| | NUL | Removes function or feature from key |
| Key 26 | CPN | Calling Party Number key |
| | NUL | Removes function or feature from key |
| Keys 27 - 31 | | Reserved |

Operating parameters

The operating parameters for the IP Softphone 2050 are as follows:

- The minimum recommended system hardware for the IP Softphone 2050 application is:
 - Pentium-compatible CPU (200 megahertz [MHz] or higher)
 - 128 megabytes (MB) RAM or higher for Microsoft Windows 2000
 - 256 MB RAM or higher for Windows XP
 - 55 MB free hard drive space (all languages)
 - 800 by 600 resolution monitor (16-bit color)
 - Universal Serial Bus (USB) port (version 1.1 or 2.0)
 - USB Audio Kit

For information about supported operating systems, see the *IP Softphone 2050 User Guide*.

- Perform the software version upgrade for IP Softphone 2050 manually. The technician must do this at the PC. The Voice Gateway Media Card does not download any software to the IP Softphone 2050. The `isetShow` command on the Voice Gateway Media Card displays the current version of any registered IP Softphone 2050.
- The IP Softphone 2050 does not have an ACD Supervisor headset jack. Agent walkaway is supported with the Enhanced USB Keypad Adapter.
- An IP Softphone 2050 does not register against a TN configured for any other type of IP Phone.
- Soundcard audio is supported only for incoming call notification. Nortel supports USB Headset Adapter for the speech path.
- 5 menu options available on the IP Phone 2004, not required on the IP Softphone 2050, are:
 - Volume adjustment
 - Contrast adjustment
 - Display diagnostics

- Key click
- On-hook default path

System components

The IP Softphone 2050 is comprised of an external Universal Serial Bus headset adapter (Nortel Enhanced USB Adapter [desktop]) and a software application installed on the user PC. The IP Softphone 2050 also supports a mobile adapter (Nortel Mobile USB Adapter).

IMPORTANT!

Use your IP Softphone 2050 with the approved Nortel Enhanced USB adapter (desktop) or Nortel Mobile USB Adapter only.

Table 24 lists the IP Softphone 2050 package components.

Table 24
IP Softphone 2050 package components

| Component | Code |
|--|------------|
| Nortel Mobile USB Adapter: | |
| Nortel Mobile USB Adapter kit includes: | NTEX14MD |
| • IP Softphone 2050 application software CD/ROM | NTDW83BA |
| • Nortel Mobile USB Headset Adapter with Monaural Headset (Non-RoHS) | NTEX14MB |
| Nortel Mobile USB Headset Adapter (no headset) | NTEX14MA |
| Nortel Mobile USB Headset Adapter (no headset) (RoHS) | NTEX14MAE6 |
| Nortel Mobile USB Headset Adapter with Monaural Headset (RoHS) | NTEX14MBE6 |
| Nortel Enhanced USB Adapter (desktop): | |
| Nortel Enhanced USB Audio (desktop) kit | NTEX14AA |
| Nortel Enhanced USB Audio Adapter (no headset) | NTEX14AB |

Table 24
IP Softphone 2050 package components

| Component | Code |
|---|------------|
| USB Audio Kit with GNN DuraPlus Monaural Headset (Non-RoHS) | NTEX14AC |
| USB Audio kit with GNN DuraPlus Monaural Headset (RoHS) | NTEX14ACE6 |
| Nortel Handset cord (Charcoal) for use with the Nortel Enhanced USB Audio Adapter Kit | NTEX14BA |

Before you begin

The following section provides a step-by-step guide through the IP Softphone 2050 installation process. Before installing the IP Phone, complete the following pre-installation checklist.

Procedure 33 **Preinstallation checklist**

- 1 Ensure you have the IP Softphone 2050 application software CD.
- 2 To install and configure an IP Softphone 2050, the host Call Server must be equipped with the Voice Gateway Media Card.
- 3 Understand the three configuration modes from which you can choose from as you proceed through the installation of the IP Softphone 2050. The 2 configuration modes are:
 - Static IP address—see “Static IP address assignment”
 - Partial DHCP—see “Dynamic IP address assignment—Partial DHCP”
- 4 A DHCP server and DHCP relay agents, if required, must also be installed, configured, and running.

First-time installation

During the first-time installation, the two IP address parameters entered either manually- or automatically, depending on the installation configuration. They are as follows:

- Static IP address assignment

- Partial DHCP

Static IP address assignment

During the installation, enter the IP Softphone 2050 parameters manually using the dialpad.

Enter the IP address, subnet mask, and default Gateway address. You must also enter the Connect Server parameters including IP address, port number, action, and retry count.

Dynamic IP address assignment—Partial DHCP

For a partial DHCP installation, you must provide, through the IP Phone dialpad, the Connect Server parameters including: IP address, port number, action, and retry count. Other parameters (IP Phone IP address, subnet mask, and default Gateway) are obtained from the DHCP server.

Enter the IP Phone password, node ID, and TN manually, using the dialpad.

For more information about DHCP servers, see *Data Networking for Voice over IP* (553-3001-160).

Use Procedure 34 to install an IP Softphone 2050 for the first time.

Procedure 34

Installing an IP Softphone 2050 for the first time

- 1 Install the Voice Gateway Media Card. For more information, see *IP Line: Description, Installation, and Operation* (553-3001-365).
- 2 Configure a virtual loop on the Call Server, using LD 97.

For more information, see *Software Input/Output: Administration* (553-3001-311).
- 3 Configure the IP Softphone 2050 in LD 11. At the prompt, enter the following:

REQ: chg
TYPE: i2050
- 4 Install the USB Headset Adapter. If you are using the mobile adapter, connect the headset to the adapter. If you are using the desktop adapter, you must:

- a. Connect the coiled lower cord to the headset cord with the Quick Disconnect connector. Ensure the Quick Disconnect connector is securely fastened.
 - b. Connect the headset cord to the RJ9 jack on the adapter.
- 5 Connect the USB cable to the headset adapter and to one of the USB jacks on the back of your PC or USB hub.

The first time the headset adapter is plugged in, a delay occurs while Windows configures the device and locates the appropriate driver software. During the installation, you are prompted to supply the original Windows CD-ROM so Windows can locate the required drivers.
- 6 Install the IP Softphone 2050.
- 7 Configure the IP Softphone 2050 parameters. Click the **Server** tab in the Settings window and choose one of the following:
 - To manually configure the IP Softphone 2050 parameters, enter the IP address of the Call Server, Server type, port number, and retries.
 - For DHCP, select the check box beside Automatic (DHCP). The IP address, Server type, port number, and retries are automatically retrieved from the DHCP Server.

Note: For more information about using partial DHCP, see Procedure 11, “Installing an IP Phone 2004 for the first time using DHCP” on page 100.
- 8 Click **Apply**.

End of Procedure

Installing or upgrading the IP Softphone 2050

Use the following options to obtain the latest version of the IP Softphone 2050:

- new installation—installing the IP Softphone 2050 for the first time
- upgrade—upgrading the IP Softphone 2050 to the latest version

IP Softphone (Version 1) and IP Softphone (Version 2) can coexist on a PC, although both versions cannot run at the same time.

Note: Before performing a new installation or an upgrade, check the version of IP Softphone 2050 software.

IMPORTANT!

Before you upgrade an IP Softphone 2050, record the information found in the **Server** window. This information may be required in the future.

Use Procedure 35 on [page 229](#) for a new installation of the IP Softphone 2050.

Procedure 35
Installing the IP Softphone 2050 on the PC
(new installation)

- 1 Insert the CD-ROM disk into the CD-ROM drive of your PC.

Note: Installation should proceed automatically. If it does not, then continue with step 2, otherwise go to step 5.

- 2 Double-click the **My Computer** icon.
- 3 Double-click the **CD** icon.
- 4 Double-click the **Setup** icon.
- 5 Follow the instructions on-screen to complete the installation.
- 6 Select **Start > Programs > Nortel > IP Softphone 2050** to start the IP Softphone 2050 application.
- 7 Select **Settings** to assign a server address, select sound devices, and select a server type.

Note: If you are installing the IP Softphone 2050 on a Windows XP or Windows 2000 platform, you must install the Windows QoS Packet Scheduler. See Procedure 40 on page 232.

End of Procedure

Use Procedure 36 on [page 230](#) to upgrade the IP Softphone 2050 on the PC.

Procedure 36

Upgrading the IP Softphone 2050 on your PC

- 1 Download the IP Softphone 2050 upgrade file from the Nortel web site and extract all files to a working directory.

Note: See either the *CS 1000 Release 4.5 Product Bulletin* or the IP Line 4.5 *Read Me First* about download instructions.

- 2 Double-click the **My Computer** icon and navigate to the working directory.
- 3 Double-click the **Setup** icon.
- 4 Follow the instructions on-screen to complete the installation.

Note: Compare the values currently in the configuration utility to the values recorded prior to the upgrade. These should be identical.

- 5 Select **Start > Programs > Nortel > IP Softphone 2050** to start the IP Softphone 2050 application.
- 6 Select **Settings** to assign a server address, select sound devices, and select a server type.

End of Procedure

Use Procedure 37 to uninstall IP Softphone 2050 (Version 1).

Procedure 37

Uninstalling the IP Softphone 2050 (Version 1)

- 1 Select **Start > Settings > Control Panel > Add/Remove Programs**.
- 2 Choose **Nortel Networks i2050 Software Phone**.
- 3 Select **Remove**.
- 4 Select **Yes** to confirm.

End of Procedure

Procedure 38**Uninstalling the IP Softphone 2050 (Version 2)**

- 1 Select **Start > Settings > Control Panel > Add/Remove Programs**.
- 2 Choose **Nortel Sofphone 2050**.
- 3 Select **Remove**.
- 4 Select **Yes** to confirm.

End of Procedure

Visually impaired users can follow Procedure 39 to install the Accessibility Interface from the IP Softphone 2050 CD-ROM.

Procedure 39**Installing the Accessibility Interface**

- 1 Press and hold **Shift**.
- 2 Insert the IP Softphone 2050 installation CD into your CD-ROM drive.
- 3 Press and hold **Shift** for several seconds to prevent Autorun from starting.
- 4 If the Installation Wizard starts:
 - a. Wait until the **Welcome to the Install Shield Wizard for the Nortel IP Softphone 2050** screen appears.
 - b. Press **Tab** to select **Cancel**.
 - c. Press **Return**.
 - d. Click **Yes** to confirm that you want to cancel the installation.
 - e. Click **Finish**.
- 5 From Windows Explorer, select your CD-ROM.
- 6 Select **Accessibility.bat**.

The file Accessibility.bat executes the command line "setup /s /vqb/vUI508=1". This installs the application and sets the user interface to the Accessibility Interface.

End of Procedure

Windows QoS Packet Scheduler

For Windows XP, the Windows QoS Packet Scheduler is installed and selected by default.

For Windows 2000, you must install the Windows QoS Packet Scheduler.

Use Procedure 40 to install the Windows QoS Packet Scheduler for Windows 2000.

Procedure 40

Installing the Windows QoS Packet Scheduler for Windows 2000

- 1 Select **Start > Control Panel**.
- 2 Select **Network and Dialup Connections**.
- 3 Right-click **Local Area Connection**.
- 4 Select **Properties**.
- 5 Click **Install**.

The **Select Network Component Type** window opens.

- 6 Click **Add**.

The **Select Network Service** window opens.

- 7 Select **QoS Packet Scheduler**.
- 8 Click **OK**.

End of Procedure

To verify Windows QoS Packet Scheduler is installed, go to Control Panel > Network Connections (Windows XP) or Network and Dialup Connections (Windows 2000) > Local Area Connection > Properties > QoS Packet Scheduler.

Running the IP Softphone 2050 for the first time

Start the IP Softphone 2050 in one of the following ways:

- Select **Start > Programs > Nortel > IP Softphone 2050**.

- Click the desktop shortcut (if one was created during the installation).
- Click **Automatic startup sequence**.

Note: If you want the IP Softphone 2050 to start automatically when the PC starts, create a shortcut to the application in the Startup folder.

When an IP Softphone 2050 is started for the first time and connects to the network, the IP Softphone executes the following start-up sequence:

- 1 Obtain the IP parameters.
- 2 Find a Media Gateway server and authenticate the user.

As the IP Softphone 2050 registers with the Voice Gateway Media Card, one of the following occurs:

- If a non-null node password is enabled, you are prompted to enter the node number and password. Use the keyboard or numeric keypad to enter the prompts for a node number and password. After the password is verified, enter the TN of the IP Softphone 2050. See *IP Line: Description, Installation, and Operation* (553-3001-365) for further information about the password feature.
- If the null node password is configured and enabled, these screens are skipped and no option is provided to change the password.
- If the node password is disabled or not configured, it prompts for a node number and TN. Enter the node number and TN using the keyboard or numeric keypad.

The IP Softphone 2050 is now configured and can be used.

Changing the TN of an existing IP Softphone 2050

This procedure is required for a new user of the IP Softphone 2050 application.

Procedure 41

Changing the TN of an existing IP Softphone 2050

- 1 Exit the IP Softphone 2050 application.
- 2 Restart the IP Softphone 2050 application.

If the node password is not configured, or is configured but disabled, go to Step 3.

If the node password is configured and enabled for the node, go to Step 4.

- 3 During startup, the IP Softphone 2050 registers again with the TPS, and the IP Softphone 2050 displays the existing node number and TN for approximately five seconds.

- 4 If the password is configured and enabled for the node, the node number and password prompt displays for approximately 5 seconds; enter the correct password within this 5-second period.

If the user activates the **Clear** soft key during the 5-second period, the existing node and TN are cleared and the user is prompted for new parameters.

End of Procedure

Removing an IP Softphone 2050 from service

Procedure 42

Removing an IP Softphone 2050 from service

- 1 Exit the IP Softphone 2050 application.
- 2 Uninstall the IP Softphone 2050 application from the PC using the Windows Add/Remove Programs.
- 3 In LD 11, enter OUT for the TN prompt.

End of Procedure

Nortel Mobile Voice Client 2050

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 235 |
| Description | 236 |
| Supported features | 237 |
| MVC 2050 components | 238 |
| MVC 2050 Call Handling screen | 240 |
| Operation | 248 |
| MVC 2050 installation | 249 |
| MVC 2050 removal | 251 |
| Configuration | 251 |
| 802.1p and DiffServ | 261 |
| MVC 2050 and WLAN | 261 |

Introduction

This section describes how to install, configure, and remove the Nortel Mobile Voice Client 2050. For information on using the MVC 2050, see the *Nortel Networks IP Softphone 2050 and Mobile Voice Client 2050 User Guide*.

This section contains the following procedures:

- Procedure 43, “ Starting MVC 2050” on page 248.

- Procedure 44, “ Synchronizing a PDA with a desktop PC using ActiveSync” on page 249.
- Procedure 45, “ Installing MVC 2050” on page 250.
- Procedure 46, “ Removing MVC 2050 from your PDA” on page 251.
- Procedure 47, “ Enabling Auto-Create” on page 253.

Description

Mobile Voice Client (MVC) 2050 adds wireless IP Phone services to the convenience of Personal Digital Assistants (PDAs). MVC 2050 functions like an IP Softphone 2050. However, MVC 2050 cannot be used as an Agent or Supervisor in Call Center Portal applications.

MVC 2050 is UNISTim-based software providing real-time voice communication, over a WLAN, to PDAs.

MVC 2050 operates on PDAs running the following operating systems:

- Pocket PC 2003
- Windows Mobile 5.0

WLAN 802.11b can interwork with various enterprise communication servers. MVC 2050 can also interwork with WLAN Access Points (WAP) and can use the WSS 2250 WLAN Security Switch. MVC 2050 can coexist with a secure Virtual Private Network (VPN) client on the same PDA.

MVC 2050 requires access to an enterprise or public WLAN Access Point (WAP).

System requirements

MVC 2050 requires PDAs to meet the following minimum specifications:

- 240x320 screen size
- 624MHz CPU speed
- 64 MB RAM

Supported features

MVC 2050 supports the following telephony features:

- six programmable line/feature keys
- four soft keys (self-labeled)
- six specialized feature keys:
 - Messages
 - Directory
 - Shift
 - Copy
 - Quit
 - Services
- call-processing keys:
 - Hold
 - Goodbye
 - Mute
 - Answer
 - Expand
- volume UP/Down keys
- navigation keys
- online help
- 12-button dialpad
- multifield display
- audible notification of connection or disconnection to the server
- macro functions available for programming lengthy dialing patterns

Note: Pause is available to build into the macro to introduce a delay which may be required to access some Interactive Voice Response (IVR) applications and voicemail systems.

- Redial List
- Callers List
- profiles
- skins
- connection to user-supplied headsets for the speech path features and services provided by the network (such as call features and voicemail)
- run-in-background application (MVC 2050 interface is closed but the application runs in the background to allow incoming calls)
- 802.11b WLAN interface
- automatic network configuration through DHCP
- G.711 codec for operation without compression

Application software

MVC 2050 is a software application that enables voice communications over a WLAN from a PDA.

The MVC 2050 software application is comprised of the following components:

- MVC 2050 software
- NetEQ software (included in MVC 2050 software)

ClearType

MVC 2050 uses a special screen font which requires that Microsoft ClearType® be enabled on your PDA. ClearType software improves the appearance and readability of text on liquid crystal display (LCD), pocket PC screens, and flat panel monitors.

MVC 2050 components

MVC 2050 includes the following components:

- MVC 2050 application software, including Global IP Sound NetEQ™ software

- user-supplied compatible PDA
- user-supplied headset

Compatible PDAs

Because the PDA industry evolves at a rapid pace, go to www.nortel.com to determine the latest PDA models tested and supported, along with any known issues.

Alternatively, follow the links on www.nortel.com to Products > Phones, Clients, and Accessories > IP Phones and Clients > Mobile Voice Client 2050 > Technical Specifications.

For Nortel Technical Support, go to www.nortel.com/support.

Headsets

A headset is required in order to send and receive telephone calls using the MVC 2050 and your PDA. The headset is an important part of audio quality.

PDAs that support stereo headphones with microphones are recommended.

The Dell specific headset with a button on the wire, when used with the X51v, enables you to answer or release an incoming call by pressing the button.

Note: Bluetooth and 802.11b operate on the same frequency band and use the same WLAN hardware on the PDA. Therefore, the use of Bluetooth accessories with MVC 2050 can lead to poor call quality.

Contact your PDA vendor to obtain headset recommendations.

Automatic Gain Control and feedback

Because MVC 2050 requires a headset to operate properly, disable Automatic Gain Control. Refer to your PDA documentation to disable Automatic Gain Control.

When the PDA is used in handsfree mode, without a headset, the PDA microphone picks up sounds from the speaker, which creates a feedback loop. Automatic Gain Control is used in this instance to avoid feedback.

Note: When the PDA is used in handsfree mode, without a headset, the PDA microphone picks up sounds from the speaker, creating a feedback loop.

Audio quality

MVC 2050 provides a high-quality audio environment, which includes:

- NetEQ software (included with the software package)
- interworking with G.711 codec providing high audio quality without compression; MVC 2050 supports G.711-64 A-law and U-law
- Audio selection tab providing a user-selectable quality slider
- Advanced Audio tab for expert users

MVC 2050 Call Handling screen

You can access and operate most MVC 2050 features from the Call Handling screen. Select Answer from the Keys menu or use the Headset/Answer icon to answer calls or obtain a dial tone.

The Call Handling screen contains the telephone dialpad. The appearance of the Call Handling screen differs with each available skin. Use the Settings > Skin dialog box to determine the current skin. All skins share common components.

Note: You can use the up, down, left, and right cursor control arrow keys on your PDA as navigation buttons to navigate around the skin and move through the menu items.

Display

The display is located in the central area of the skin. View messages and text on the display.

Dialpad

The twelve-button dialpad is located on the left side of the skin.

Soft keys (self-labeled)

Four soft keys (self-labeled) are located in the bottom row of the display. The labels on these keys depend on the call server.

Programmable line/feature keys

Six programmable line/feature keys are located on the right side of the skin. They are aligned vertically and are the same color as the display. The number of features available depends on the call server.

Menus

MVC 2050 provides the following menus:

- File
- Keys
- Help

File

The File menu provides the following items:

- Run in background
- Paste
- Contacts
- Settings
- Exit

Run-in-background

Select Run-in-background to close MVC 2050 but allow it to keep running in the background so that incoming calls can ring on your PDA.

After you have completed your call, press the X in the upper right-hand corner of the PDA display to close the MVC 2050 application and return it to the background.

Paste

Select Paste to paste a telephone number into your PDA from another application rather than entering an existing telephone number through your Call Handling screen dialpad.

Contacts

Select Contacts to launch the Contacts dialog box. The Contacts application reads a list of contacts from the PDA Contacts list or from a list which you synchronized onto your PDA from Microsoft Outlook.

Settings

Select Settings to provide access to the Settings submenu. The Settings menu provides windows for Personal settings, System settings, and Connections settings.

The System settings window provides access to settings for memory, power, remove programs, screen and regional settings, iTask settings, and self test.

Note: You must restart MVC 2050 for changes to Profiles, Hardware ID, Sounds, Servers, and Listener IP to take effect.

Exit

Select Exit to close MVC 2050. Calls cannot be received until the application restarts.

Select Exit to free up PDA-processing resources.

Keys

The Keys menu provides the following items:

- Headset
- Answer
- Goodbye

- Hold
- Features
- Macros

Headset

Select Headset to answer an incoming call or to obtain a dial tone. You can also use the Headset/Answer icon located at the top center of the Call Handling screen.

Answer

Select Answer to answer an incoming call or to obtain dial tone to place a call. You can also use the Headset/Answer icon located at the top center of the Call Handling screen.

Goodbye

Select Goodbye to end a call. You can also use the Goodbye icon located at the top right of the screen.

Hold

Select Hold to place a call on hold. You can also use the Hold icon located at the top left of the screen.

Features

Select Features from the Keys menu to access a menu of interface keys.

To re-arrange items in the Features list, open the Settings menu and select the Features tab. Items in the Features list cannot be added or removed.

Macros

Select Macros from the Keys > Features submenu to access macros (also available through the Settings > Macros dialog box). Macros can be used to make speed-dials, access voicemail, and other routine functions faster and easier. For more information about macros see “Macros” on page 260.

Help

Select Help to access the MVC 2050 PDA-specific version of Help. The Help menu provides the following items:

- Contents
- Diagnostics
- About MVC 2050

Contents

Select the Contents menu item to access the Help system.

Diagnostics

Select Diagnostics to access to a list of methods to determine server connection state.

Diagnostic methods are as follows:

- Ping
- TraceRoute
- RUDP Ping

See “Profiles” on page 255 for information on importing and exporting profiles to assist in troubleshooting.

About MVC 2050

About MVC 2050 identifies the MVC 2050 application. Select About MVC 2050 to view configuration information for your MVC 2050 (such as system product name, version number, copyright indication, manufacturer name and logo, and Global IP Sound name and logo). MVC 2050 uses packet loss concealment provided by Global IP Sound NetEQ software.

MVC 2050 graphical interface (skins) components

MVC 2050 provides alternative graphical images known as skins. The dialpad, menu, and icon buttons are located on the skin. Skins are available in several colors and arrangements.

All skins share the following common components:

- programmable line/feature keys
- soft keys (self-labeled)
- dialpad
- display
- Call Handling icons
- Toolbar icons
- Menu Bar icons
- retractable toolbar
- Message Waiting light
- System Input Panel icon

Icons

The MVC 2050 Call Handling screen presents icon equivalents for menu items.

Icons are divided into three types:

- Call Handling icons
- Toolbar icons
- Menu Bar icons

Call Handling icons

The following three Call Handling icons appear across the top of the Call Handling screen:

- Hold

- Headset/Answer
- Release

Menu Bar icons

MVC 2050 provides the following icons, which can be used instead of text menu equivalents:

- Paste
- Contacts
- Settings
- Toolbar toggle
- System Input icon

Toolbar icons

The retractable toolbar contains icons, which are not present on the remainder of the display. The icons are located at the bottom of the skin and are visible when the Toolbar is retracted. Use the Toolbar Toggle icon at the bottom of the screen to retract the Toolbar.

The following are the icons visible on the Toolbar:

- Mute
- Volume Down
- Volume Up

The following icons are visible when the Toolbar is retracted:

- Mute
- Volume Down
- Volume Up
- Directory
- Messages
- Shift
- Services

- Expand
- Copy
- Quit

System Input Panel

To access the System Input Panel from MVC 2050, tap the System Input Panel icon on the Menu Bar on the bottom right-hand corner of the PDA. Consult the PDA documentation for a description of the System Input Panel.

You can use the System Input Panel to enter data for MVC 2050 and other applications. Use the keyboard to enter data.

The default System Input Panels are as follows:

- Block Recognizer
- Keyboard
- Letter Recognizer

The MVC 2050 application enables the keyboard to act like a dialpad, interpreting the alphabetical keys as numbers. For example, J, K, or L, are interpreted as the number five (5). Keys, which are not alphanumeric are ignored.

Operation

Use Procedure 47 to start MVC 2050.

Procedure 43 **Starting MVC 2050**

- 1 From the **Main Application** screen, select **Programs**.
- 2 Select **Start**.
- 3 Select **Mobile Voice Client 2050**. The Call Handling screen appears.

End of Procedure



CAUTION

PDA processor models, speed, and amount of memory vary. To maintain audio quality, do not overload the processor with intensive tasks while using MVC 2050. For example, Nortel does not recommend using your PDA version of Internet Explorer while using MVC 2050.

PDA processor speed can have adverse effects on MVC 2050 performance.

IMPORTANT!

Set the PDA processor speed to the highest setting or to auto, which changes the processor speed according to system status. To set the PDA processor speed. Refer to the PDA user guide.

IMPORTANT!

If the Wireless Fidelity (WiFi) application goes down while your PDA is set to Standby mode, you cannot receive incoming calls on your device. To keep the WiFi application running and receive incoming calls, disable the power settings for Standby mode. Go to the Settings option on your PDA.

PDA battery life can affect the MVC 2050 call duration and the call volume.

IMPORTANT!

PDA vendors offer two types of rechargeable battery: standard and extended-life. The extended-life battery is recommended. It provides longer call duration and increased call volume than the standard-life battery.

MVC 2050 installation

If an older version of MCV 2050 is installed on the PDA, remove it prior to installing a newer version. See “MVC 2050 removal” on page 251.

To install MVC 2050 on the PDA:

- 1 Place the PDA in its cradle.
- 2 Synchronize the PDA with a desktop PC running Microsoft® ActiveSync®. See Procedure 44.
- 3 Install the MVC 2050 from a Desktop. See Procedure 45 on [page 250](#).

MVC 2050 installation method

MVC 2050 supports installation from a docked PDA with a Microsoft ActiveSync connection to a desktop PC.

Synchronizing a PDA with a desktop PC

Use Procedure 44 to synchronize your PDA with your desktop PC.

Procedure 44**Synchronizing a PDA with a desktop PC using ActiveSync**

- 1 Place the PDA in its cradle.
- 2 Ensure that ActiveSync is running.

- 3 Wait for the PDA and the PC to synchronize.

End of Procedure

For details about synchronizing a PDA with a desktop PC, see the PDA Users Manual.

Installing MVC 2050 from a Desktop PC using ActiveSync

Use the following procedure to install MVC 2050 using the product CD.

Procedure 45 Installing MVC 2050

- 1 Synchronize the PC and PDA. See Procedure 44 on [page 249](#).
- 2 Insert the MVC 2050 CD into the CD-ROM drive of your desktop PC.
- 3 Go to your desktop and double-click My Computer. The PC files and folders menu appears.
- 4 Select the CD Drive.
- 5 Select **Setup**.
- 6 Follow the instructions on the screen until the Install Wizard asks you if you want to modify, install, or remove MVC 2050.
- 7 Select **Install**. The Install Wizard installs MVC 2050. When installation finishes, *Attend to your device (PDA)* message displays on the PC and *Do you want to perform a soft restart?* message displays on the PDA.
- 8 Select **Yes** to restart your PDA.

End of Procedure

MVC 2050 removal

Use the following procedure to remove MVC 2050 from your PDA.

Procedure 46

Removing MVC 2050 from your PDA

- 1 Select **Start**. A drop-down menu appears.
- 2 Select **Settings**. A Windows folder opens.

The Windows folder contains programs, usually shown as icons with names and a row of tabs across the bottom.
- 3 Select the **System** tab. Another Windows program folder opens.
- 4 Select **Remove Programs**. A list of programs opens.
- 5 Select **Nortel MVC 2050**.
- 6 Select **Remove**. A confirmation dialog box opens.
- 7 Select **Yes**. There is a brief pause during removal of MVC 2050. After the pause, a confirmation dialog box opens.
- 8 Select **Yes**. Your PDA restarts and MVC 2050 is removed.

End of Procedure

Configuration

MVC 2050 supports a flexible interface, which enables users to customize configurations for various connections.

Settings

For information about Settings, see “Settings” on page 242.

Server

The Server tab, accessible from the Settings screen, contains all the settings necessary for MVC 2050 to contact a server. On the Server tab, you can perform the following:

- change the settings on the Server tab to access a different server
- implement the profile containing the desired server

For more information about Profiles, see “Profiles” on page 255.

Connection history

Connection history writes connection and disconnection indication messages to the registry key *HKCU\Software\Nortel\MVC2050\Log*. This is a circular queue of 29 entries. Each time a connection or disconnection event occurs, a log entry containing a date, time, and a description of the connection or disconnection event is written.

The descriptions of the connection and disconnection events are as follows:

- Soft reset, server *n*
- Server connected
- Recovering: Server unreachable
- Hard reset

Soft reset, server *n*

Server *n* indicates that the server has instructed MVC 2050 to reset and connect to a server *n* where *n* and its value are determined, and possibly written, by the server. This message maps directly to a UNISTim message.

Server connected

Server connected indicates that MVC 2050 has successfully connected to the server. MVC 2050 received the *Assign TerminalID* UNISTim message, which is the last message received by MVC 2050 before a normal session is started.

Recovering: Server unreachable

The Recovering: Server unreachable message generates after MVC 2050 loses connection with the server. It indicates that the UNISTim watchdog timer has expired and indicates loss of network connection.

Hard Reset

The Hard Reset message indicates that the server has instructed MVC 2050 to reset and clear its UNISTim-related memory. This message maps directly to a UNISTim message.

Hardware ID

The Hardware ID screen is used to select the MAC address that MVC 2050 reports to the communication server. The MAC address can be reset.

View the Hardware ID in the MVC 2050 Settings on the Hardware ID tab.

Hardware IDs are generated by reading MAC addresses from the PDA Network Interface Card (NIC). When MVC 2050 is used with most server types, the Hardware ID must be unique.

Some software, such as VPN client software, creates artificial network interfaces with MAC addresses, which are not unique. Without a unique MAC address, the following conflicts can occur:

- MVC 2050 cannot connect to a server
- MVC 2050 connects to the server but another device with the same Hardware ID is disconnected from the server
- MVC 2050 disconnects from the server then automatically attempts to reconnect

To prevent conflicts with other devices, enable Auto-Create. Auto-Create fabricates a MAC address with a random value that is unlikely to be repeated by another device.

Use Procedure 47 to enable Auto-Create.

Procedure 47 Enabling Auto-Create

- 1** Select **Settings**.
- 2** Select **Hardware ID**.
- 3** Select **Auto-Create**.

End of Procedure

Table 25 provides information about the Hardware ID screen.

Table 25
Hardware ID screen

| Selection | Description |
|------------------|---|
| Hardware ID | This box contains the MAC address for the Ethernet hardware installed in your device. MVC 2050 uses the MAC address of the Ethernet hardware as its hardware ID. You may have to change this value if there is more than one MAC address, or if the device is using an extranet client that hides the true MAC address. For example, the Nortel Contivity Extranet Switch uses a single MAC address for all clients. This might cause connection problems with your communication server. |
| Auto-create | This changes the MAC address that appears in the Hardware ID box. If your device has more than one MAC address, tap the Auto-Create button to cycle through the set of MAC addresses on your computer. Auto-Create also provides random hardware IDs in case the Ethernet hardware addresses are not unique to the communication server. |
| Firmware Version | Shows the build number of MVC 2050 installed on your device. This value is the version number of the application last reported by the server. |

Dialing formats

Dialing Locations settings set the dialing rules applied to properly route a call when a user dials a number. The dialing rules establish prefixes to access local and long-distance numbers using the location of the user's server. To

establish the dialing rules and dialing patterns, see *Nortel Networks IP Softphone 2050 and Mobile Voice Client 2050 User Guide*.

Profiles

Each profile is a named file, which contains a combination of servers and other attributes that control connection, behavior, and appearance of the MVC 2050.

A number of profiles can be created and saved to allow easy switching among different servers, feature programming, and audio programming.

Profiles can be created, selected, modified, or deleted. When you select profile you can change the name, modify it, or delete it.

When a profile is selected, all other Settings tabs see the selected profile. The name of the selected profile is shown in the lower right corner on each tab.

From the Profiles screen you can do the following:

- create profiles
- delete profiles
- modify a profile name
- change the profile used by the application
- export profiles
- import profiles

When a new profile is created and selected, the values on all of the other tabs are set to the defaults for this profile. Any value modified on any of the other tabs are associated with this profile until another profile is selected. To change settings on other tabs for this profile, select the tab you wish to change. For example, go to the Server tab to modify the server settings.

Sounds

MVC 2050 can make sounds to indicate server connection or disconnection.

Sound files and sound settings are not saved when Profiles are saved, so the user must program the sounds. Up to three sounds can be programmed for use with audible notification of server connection or disconnection.

Descriptions of the events for which the sounds are used are as follows:

- Server unreachable
- Server unresponsive
- Server connected

Server unreachable

The sound you select for this event plays when MVC 2050 loses contact with the server. The message *Server unreachable* displays on the PDA screen.

Server unresponsive

The sound you select for this event plays if MVC 2050 fails to connect to the server. The message *Server unresponsive* displays on the PDA screen.

Server connected

The sound you select for this event plays when MVC 2050 connects to a server.

Audio quality

Audio quality is controlled from the following screens:

- Audio quality slider tab
- Advanced Audio

Audio quality slider tab

To control audio quality, use the slider tab to reduce audio delay and increase audio clarity. control audio quality. This slider controls the number of audio buffers the PDA uses to smooth out incoming audio streams.

If you experience audio delay, use the slider on the Audio screen to decrease the number of buffers.

If you experience broken or choppy speech at either end of the call, or the dial tone sounds choppy, use the volume controls on the MVC 2050 toolbar to adjust volume while using the MVC 2050.

If you experience reduced audio clarity in the receive audio stream, increase the Audio clarity setting. This increases the number of audio buffers used to process incoming audio. If the delay is too large, you can decrease the Audio clarity setting.

Advanced Audio

Global IP Sound NetEQ software provides loss concealment and compensation.

NetEQ is the default setting and MVC 2050 Advanced Audio settings cannot be adjusted.

Table 26 provides information about the Advanced Audio screen.

Table 26
Advanced Audio screen (Part 1 of 2)

| Selection | Description |
|-------------------------|--|
| NetEQ (Global IP Sound) | NetEQ packet loss concealment software is the default mode of operation. |
| Jitter Buffer | A Jitter Buffer is used to minimize a change in rate for arriving voice frames. The Jitter Buffer sends voice frames to your PDA sound system at a fixed rate. The rate of arrival of voice frames is variable. The value of "jitter" is the normal number of voice frames the application should have in its jitter buffer. |

Table 26
Advanced Audio screen (Part 2 of 2)

| Selection | Description |
|-------------------------------------|---|
| Highwater Mark | Highwater Mark indicates the maximum number of voice frames the application should have in its jitter buffer before it starts discarding packets. This value should be at least 2.5 times the value of jitter. If a smaller value is assigned, MVC 2050 regards it as an error and corrects it. |
| Early Packet and Late Packet Resync | Early Packet Resync and Late Packet Resync indicate the points at which MVC 2050 discards and restarts the jitter buffer contents. This value should be at least five times the Highwater Mark. |

Echo cancellation

MVC 2050 can use the Voice Gateway Media Card for echo cancellation.

Jitter Buffer

Global IP Sound NetEQ, bundled with MVC 2050 software, provides loss concealment and compensation for up to 30% packet loss.

NetEQ is an advanced jitter buffer and packet loss concealment unit that delivers improvements in sound quality, while minimizing latency, for IP telephone systems. It is a one-sided, embedded solution that enables high-quality voice over networks. NetEQ reduces jitter buffer delay 30-80 ms and automatically provides a solution to clock drift present in VoIP hardware. NetEQ is codec independent.

The jitter buffer is used to minimize a change in rate for arriving voice frames. The jitter buffer sends voice frames to the PDA sound system at a fixed rate.

The rate of arrival of voice frames is variable. The value of jitter is the normal number of voice frames the application should have in its jitter buffer.

Codec

MVC 2050 supports G.711 which provides higher audio quality with no compression.

Frame Size

MVC 2050 supports G.711-64 A-law and U-law with 10 ms to 960 ms frame sizes in 10 ms increments. Optimum and recommended payload is established as 30 ms frame size.

Listener IP

Use the Listener IP screen to override the port assignments when there is a conflicting application on the PDA.

See Table 27 for information about selections available on the Listener IP screen.

Table 27
Listener IP screen

| Selection | Description |
|------------------------|---|
| Use a specific address | MVC 2050 normally listens to all IP addresses on the device for communication server-to-terminal (UNISim) messaging on all the network interface cards on the device. This is the default mode of operation. To override this behavior, select the check box and enter a specific IP address. |
| Use a specific port | MVC 2050 listens to IP port 5000 on the device for communication server-to-terminal (UNISim) messaging. |

Macros

The Mobile Voice Client (MVC) 2050 Macros tab enables you to record and use macros. A macro is a recorded sequence of steps that saves you keystrokes.

For example, you can create macros that select a particular line and then dials the telephone number automatically, or program voicemail access numbers and codes for faster access.

Macro screen

To enter a new macro name, or to select an existing macro to modify or delete, select the New icon to the right of the list box.

To select an existing macro, tap the down arrow in the Macro list box and make your selection.

To delete a selected macro, tap the Delete icon (the button to the right of the list box).

Keys

Once you have selected a macro name, tap the down arrow in the Keys drop-down list to select a key to add to the macro. Press the Add button to add the key.

Use the Pause key to insert a short pause in the macro. A pause introduces a delay which may be required to access some Interactive Voice Response (IVR) applications and the voicemail systems.

Contents

A list of the macro contents appears in the Contents list box. Once there are two or more entries in this box, use the up and down buttons, which appear on the right of the box to move around the keystrokes.

To remove keystrokes from the Contents box, select the keystroke and press the Remove button.

Preview

To preview your macro in a single view, view the read-only field under the Contents box.

Dialpad

To enter numbers into your macro, select the Keys list box, press the Add button, or use the numbers on the dialpad.

802.1p and DiffServ

MVC 2050 does not support 802.1p and DiffServ.

Global Packet Loss Concealment algorithm

The Global Packet Loss Concealment (GIPS) algorithm searches for missing incoming packets. When one is found, GIPS algorithm stretches the previous packet to conceal the loss and to remove noises associated with the audio system starting and stopping at volume. Part of this concealment alters the pitch of the sound to make it appear more natural. It assumes that human is the type of sound, which permits better pitch changes. For more information, see www.globalipsound.com.

MVC 2050 and WLAN

802.11b wireless ethernet networking

MVC 2050 uses an 802.11b WLAN interface.

Audio quality is affected by the distance from the AP and enclosed spaces. Audio quality is also affected by using Bluetooth accessories while on a voice call due to interference and contention.

QoS

Due to device constraints, 802.11 p/q is not supported.

Wireless Fidelity

ActiveSync of a PDA with a PC can be accomplished using Wireless Fidelity (WiFi).



CAUTION

When you return the PDA to its cradle, if you want to maintain the MVC 2050 connection to the server, deactivate ActiveSync. Otherwise the connection is lost because ActiveSync uses Point-to-Point Protocol (PPP). This will cause the PDA connection to the voice network to be dropped and connected to the PC.

Roaming and handover

If you experience slight gaps and pauses in transmission and reception during calls, MVC 2050 may be experiencing roaming/handover difficulties attributable to the wireless network.

Nortel WLAN Handset 2210, WLAN Handset 2211, and WLAN Handset 2212

For information about WLAN Handset 2210, WLAN Handset 2211, and WLAN Handset 2212, see *Nortel Networks WLAN IP Telephony: Installation and Configuration* (553-3001-304).

Nortel IP Audio Conference Phone 2033

Contents

| | |
|---|-----|
| Introduction | 266 |
| Description | 266 |
| Extension microphones | 268 |
| Components and functions | 268 |
| Supported features | 271 |
| Display characteristics | 273 |
| Key number assignments | 276 |
| Package components | 277 |
| Installation and Configuration | 280 |
| Full Duplex mode | 297 |
| Extensible Authentication Protocol | 298 |
| Reinstalling an IP Audio Conference Phone 2033 | 298 |
| Replacing an IP Audio Conference Phone 2033 | 300 |
| Removing an IP Audio Conference Phone 2033 from service | 300 |
| Connecting an extension microphone | 301 |

Introduction

This section explains how to install and maintain the IP Audio Conference Phone 2033. For information on using the IP Audio Conference Phone 2033, see the *IP Audio Conference Phone 2033 User Guide*.

This section contains the following procedures:

- Procedure 48, “Configuring the IP Audio Conference Phone 2033” on page 281
- Procedure 48, “Configuring the IP Audio Conference Phone 2033” on page 281
- Procedure 50, “Installing an IP Audio Conference Phone 2033 for the first time using DHCP” on page 291
- Procedure 51, “Enable Full Duplex mode” on page 297
- Procedure 52, “Checking Ethernet Statistics” on page 298
- Procedure 53, “Changing the TN of an existing IP Audio Conference Phone 2033” on page 299
- Procedure 54, “Replacing an IP Audio Conference Phone 2033” on page 300
- Procedure 55, “Removing an IP Audio Conference Phone 2033 from service” on page 300

Note: After an IP Phone has been installed and configured, if power to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.


Description

The IP Audio Conference Phone 2033 uses the customer IP data network to communicate with the Communication Server 1000. The IP Audio Conference Phone 2033 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Audio Conference

Phone 2033 network connection, and connection to the Communication Server 1000.

Figure 18 shows the IP Audio Conference Phone 2033.

Figure 18
IP Audio Conference Phone 2033

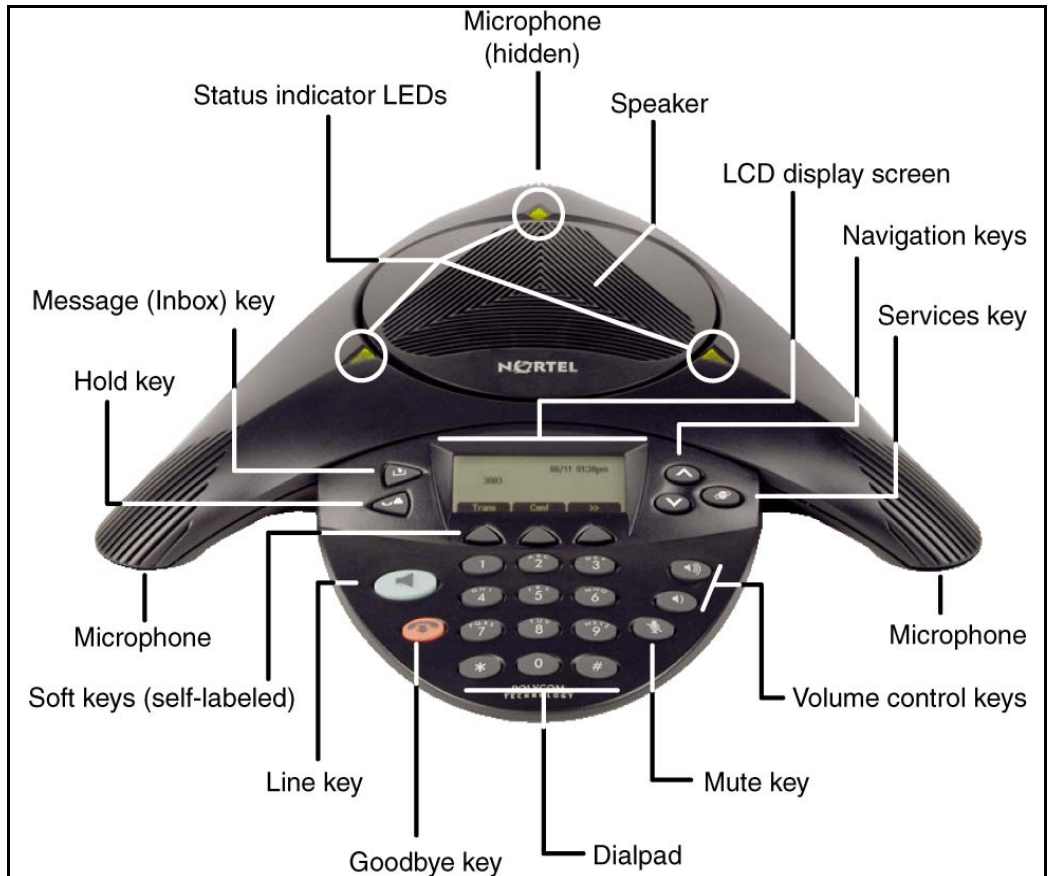


Extension microphones

The IP Audio Conference Phone 2033 supports up to two extension microphones that extend the microphone range in large rooms. Each extension microphone has a Mute button and an LED indicator to indicate the current mute state.

Figure 19 on [page 268](#) shows an extension microphone.

Figure 19
Extension microphone

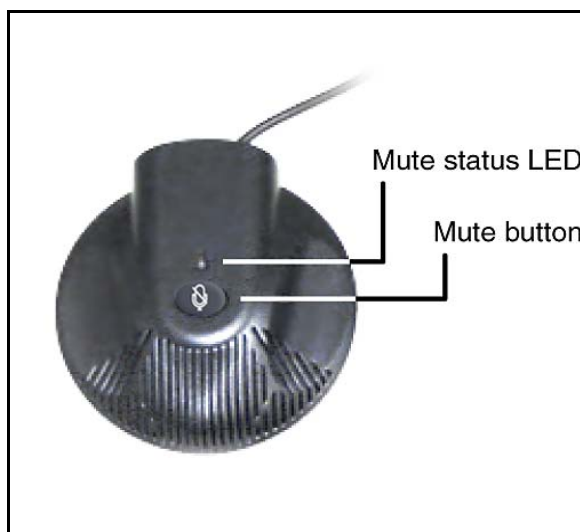

Components and functions

This section describes the following components and functions of the IP Audio Conference Phone 2033:

- Keys and functions
- Services menu

Keys and functions

Table 28 describes the IP Audio Conference Phone 2033 keys and functions.

Table 28
IP Audio Conference Phone 2033 keys and functions

| Key | Function |
|------------------------|---|
| Line key | Use the Line key to access the single line and activate on-hook dialing. |
| Volume control buttons | Use the Volume control buttons to adjust the volume of the ringer and speaker. |
| Mute button | Use the Mute button on the main unit or any extension microphone to mute the speaker. Note: Pressing the Mute button on the extension microphone toggles the mute state of the entire IP Phone, not just the microphone. |
| Goodbye key | Use the Goodbye key to terminate an active call. |
| Hold key | Press the Hold key to put an active call on hold. Press the Line (DN) key to return to the caller on hold. |
| Message (Inbox) key | Press the Message (Inbox) key to access your voice mailbox. |
| Navigation keys | Use the Navigation keys to scroll through menus and lists appearing on the LCD display screen. Arrows appear on the left side of display screen to indicate there is more information to be displayed. |
| Soft keys | Soft keys (self-labeled) are located below the LCD screen display. The LCD screen display above the key changes, based on the active feature. See “Soft key label display” on page 275 for further information. Press the Shift soft key labelled >> to access the second row of soft keys. Note: When a triangle appears before a key label, the feature is active. |

Services menu

Table 29 shows the Services menu.

Table 29
Services menu (Part 1 of 2)

| | |
|--------------|--|
| Services key | <div> <div>Press the Services key to access the following items:</div> <ul style="list-style-type: none"> <div>Telephone Options (see Notes 1 and 2):</div> <ul style="list-style-type: none"> Volume adjustment Contrast adjustment Language Date/Time Local DialPad Tone Set Info Diagnostics Ring type Call Timer Password Admin: <ul style="list-style-type: none"> Station Control Password Virtual Office Login and Virtual Office Logout (if Virtual Office is configured) Test Local Mode and Resume Local Mode (if Media Gateway 1000B is configured) <div>Press the Services key to exit from any menu or menu item.</div> </div> |
|--------------|--|

Table 29
Services menu (Part 2 of 2)

Double-press the **Services** key to access Network diagnostic utilities. For more information on Network diagnostic utilities, see Appendix Appendix E:: “IP Phone diagnostic utilities” on [page 525](#).

Note: Network diagnostic utilities is available in Remote Mode only.

Note 1: If a call is presented while the user is manipulating information, the phone rings. However, the screen display is not updated with Caller ID and the programming text is not disturbed.

Note 2: The user can originate a call using Last Number Redial while manipulating an option.

Supported features

The Nortel IP Audio Conference Phone 2033 supports the following telephony features:

- three soft keys providing access to a maximum of nine features

Note: Functions for the soft keys are configured in LD 11.

- volume control keys for adjusting ringer, speaker volume
- two specialized feature keys:
 - Message/Inbox
 - Services
- three call processing keys
 - Mute
 - Goodbye
 - Hold
- Virtual Office
- Enhanced UNISTim Firmware Download
- IP Call Recording
- UNISTim encryption

- DTMF Tones

The IP Audio Conference Phone 2033 supports the following data network features:

- 10/100 Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 33, “IP Audio Conference Phone 2033 IP parameters,” on page 284.

- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN

For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 0

The IP Audio Conference Phone 2033 supports the following languages:

English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Japanese, Russian, Latvian, Turkish

Features not currently supported

- External three-port switch to support sharing LAN access with a PC or other data device is not provided. However, the IP Audio Conference Phone 2033 does provide 100 Mbps full-duplex support.

- Integrated switch
- Personal Directory, Call Log and Redial List are not supported. However, if the primary DN on an IP Audio Conference Phone 2033 is an MADN of an IP Phone 2001, IP Phone 2002, IP Phone 2004, or IP Softphone 2050, Preferred Name Match and Idle Set Display (new call indication) are supported.
- Corporate Directory
- Callers List
- Redial List
- Personal Directory
- Automatic Call Distribution
- IP Key Expansion Modules
- Support of accessory modules
- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys
- Headset support
- External Applications Server

Display characteristics

The IP Audio Conference Phone 2033 has two display areas:

- information line display
- soft key label display

Figure 20 on page 274 shows the two display areas.

Figure 20
IP Audio Conference Phone 2033 display areas



Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Information line display

The IP Audio Conference Phone 2033 has a one-line information display area with the following information:

- Caller number
- Caller name
- Feature prompt strings
- User-entered digits

- Date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)
- Set information

The information in the display area changes, according to the call processing state and active features.

Soft key label display

The soft key label has a maximum of seven characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a soft key is enabled, the icon state changes to on. It remains in the on state until the soft key is pressed again. This cancels the enabled soft key and turns the icon off, returning the soft key label to its original state.

Use the Shift (>>) key to navigate through the layers of functions. If there are only three functions assigned to the soft keys, the Shift (>>) key does not appear and all three functions are displayed.

Figure 21 shows the soft keys on the display area.

Figure 21
Soft keys



Key number assignments

A maximum of nine functions can be assigned to the three soft-labeled, pre-defined soft keys. Because they are pre-defined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message Indication key is assigned to key 16. Keys numbered 17 to 31 are the soft keys below the display area.

Key numbers 17 to 31 support A03, A06, CFW, CHG, CPN, PRK, PRS, RGA, RNP, SCC, SCU, SSC, SSU, and TRN. See Appendix Appendix I: “IP Phone soft keys” on [page 619](#) for a description of the IP Phone feature assignment for each of the dedicated keys.

Package components

Table 30 lists the components for the IP Audio Conference Phone 2033 for the Americas, Asia Pacific, and Greater China region.

Table 30
Components list for US, CA, CALA, AP, and GC

| | |
|---|------------|
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power Interface Module (PIM) with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card Universal power supply | NTEX11AA70 |
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) Module with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card • 2 Extension microphones (charcoal) Universal power supply | NTEX11BA70 |
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) module with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card Universal power supply | NTEX11EA70 |
| Accessories | |
| Power accessory kit (PIM, Universal power supply, cabling) | NTEX11CA |

Table 30
Components list for US, CA, CALA, AP, and GC

| | |
|---------------------------------------|------------|
| Power over Ethernet module | NTEX11GAE6 |
| Extension microphone with 7 ft. cable | NTEX11DA70 |

Table 31 lists the components for Europe, Middle East and Africa (EMEA) regions.

Table 31
Components list for EMEA

| | |
|---|--------------|
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) module with 25 ft. console cable IP Audio Conference Phone 2033 Quick Reference Card | NTEX11AA70E6 |
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) module with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card 2 Extension microphones (charcoal) | NTEX11BA70E6 |
| IP Audio Conference Phone 2033 package contents include: <ul style="list-style-type: none"> • IP Audio Conference Phone 2033 (charcoal) • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) module with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card • Universal Power Supply | NTEX11EA70E6 |

Table 31
Components list for EMEA

| | |
|--|--------------|
| IP Audio Conference Phone 2033 package contents include: IP Audio Conference Phone 2033 (charcoal) <ul style="list-style-type: none"> • 7 ft. CAT5 Ethernet cable • Power over Ethernet (PoE) module with 25 ft. console cable • IP Audio Conference Phone 2033 Quick Reference Card • 2 Extension microphones (charcoal) with cables • Universal Power Supply | NTEX11FA70E6 |
| Accessories | |
| • Universal Power Supply (order power cord separately) | NTEX11CAE6 |
| • Power over Ethernet module | NTEX11GAE6 |
| • Extension microphones (charcoal) with cables | NTEX11DA70E6 |

Table 32
Power cords

| IP Phone IP Audio Conference Phone 2033 Power cords | |
|--|----------|
| NA NEMA 5-15P, 125V 13A (10ft.) | NTTK14AB |
| Euro CEE (7) VII, 250V, 10A (2.5m) | NTTK16AB |
| ANZ AS3112, 250V 10A (2.5m) | NTTK15AA |
| Swiss SEV 1011, 250V 10A (8ft.) | NTTK17AB |
| UK/Ireland BS1363, 240V 10A (8ft.) | NTTK18AB |
| Denmark AFSNIT, 250V 10A (2.5m) | NTTK22AB |
| Argentina IRAM 2073, 250V 10A (8ft.) | A0814961 |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Audio Conference Phone 2033 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Audio Conference Phone 2033
- Startup sequence
- Installing the IP Audio Conference Phone 2033

Before you begin

Before installing the IP Audio Conference Phone 2033, complete the following pre-installation checklist:

- Ensure there is one IP Audio Conference Phone 2033 boxed package for each IP Audio Conference Phone 2033 being installed. See Table 30, “Components list for US, CA, CALA, AP, and GC,” on page 277 or Table 31, “Components list for EMEA,” on page 278 for a list of package contents.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 30, “Components list for US, CA, CALA, AP, and GC,” on page 277 or Table 31, “Components list for EMEA,” on page 278.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server*:

Installation and Configuration (553-3001-212), or IP Line: Description, Installation, and Operation (553-3001-365)

**CAUTION — Service Interruption**

Do not plug your IP Audio Conference Phone 2033 into an ISDN connection. Severe damage can result.

Configuring the IP Audio Conference Phone 2033

Use Procedure 48 to configure the IP Phone 2001 for the first time

Procedure 48**Configuring the IP Audio Conference Phone 2033**

- 1 Configure a virtual loop on the system using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation (553-3001-365)*, and *Software Input/Output: Administration (553-3001-311)*.

- 2 Configure the IP Audio Conference Phone 2033 on the system using LD 11. At the prompts, enter the following:

```
REQ:chg  
TYPE:i2001  
TN cc uu  
ECHG yes  
ITEM cls  
ITEM
```

For more information, see *Software Input/Output: Administration (553-3001-311)*.

- 3 Connect one end of the CAT5 Ethernet cable to the network interface located on the back of the Power over Ethernet (PoE) module. See Figure 22. Plug the other end of the CAT5 Ethernet cable into your IP network interface.
- 4 Connect the CAT5 Ethernet cable attached to the PoE module to the IP Phone. Thread the CAT5 Ethernet cable through the channel on the bottom of the IP Phone and plug it into the PoE module port on the IP Phone.

- 5 Connect the AC power adapter (optional) to the power supply port located on the back of the PoE module, leaving the AC power adapter unplugged from the power outlet. Thread the cord through the channel on the bottom of the PoE module then plug the other end into the AC power source. Ensure the correct AC power transformer is used. The voltage rating of the transformer must match the wall outlet voltage. See Table 30, "Components list for US, CA, CALA, AP, and GC," on page 277 or Table 31, "Components list for EMEA," on page 278.

Figure 22 on [page 282](#) shows the Power over Ethernet (POE) module.

Figure 22
POE module




Note: Red LEDs on the IP Audio Conference Phone 2033 indicate power. Messages indicating system start up, such as Loading, Initializing network, and Loading boot parameters appear after a short delay.

Figure 23 on [page 283](#) shows the bottom view of the IP Audio Conference Phone 2033.

Note: The IP Audio Conference Phone 2033 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 0. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

Figure 23
Bottom view of IP Audio Conference Phone 2033

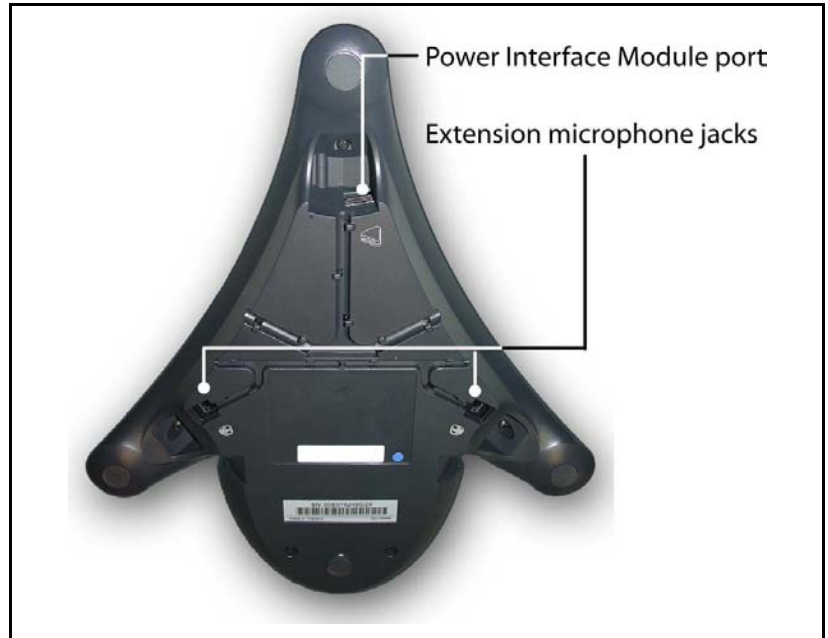

End of Procedure

Startup sequence

When an IP Audio Conference Phone 2033 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 33 for a summary of the IP parameters and how they are obtained.

Table 33
IP Audio Conference Phone 2033 IP parameters

| Parameter | Method of Acquisition |
|---|---|
| VLAN ID | Manually entered or automatically obtained through DHCP. |
| IP Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Default Address | Manually entered or automatically retrieved through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count — primary and secondary) | Manually entered or automatically retrieved through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Retrieved from local storage on subsequent power cycles. |

Installing the IP Audio Conference Phone 2033

To install the IP Audio Conference Phone 2033, use Procedure 49, “Installing the IP Audio Conference Phone 2033 for the first time using manual configuration” on page 285, or Procedure 50, “Installing an IP Audio Conference Phone 2033 for the first time using DHCP” on page 291.

Procedure 49
Installing the IP Audio Conference Phone 2033
for the first time using manual configuration

IMPORTANT!

Timing information

When you see the text Nortel, you have 1 s to respond by pressing the three soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the 1-s response time, the IP Audio Conference Phone 2033 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the network diagnostic utilities to access the IP Phone settings. See Appendix Appendix E: "IP Phone diagnostic utilities" on [page 525](#).

You will hear a tone shortly before the IP Phone is ready to start the Nortel IP Phone application. Once the application has loaded and started, you will see the Nortel logo and Starting DHCP will appear at the bottom of the screen.

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1** To enter the configuration menu, press the three soft keys at the bottom of the display in sequence from left to right.
- 2** At the prompt, DHCP Yes/NO?, enter 0 (0 for **No**).

By default, Full DHCP is configured on the IP Audio Conference Phone 2033. Depending on the configuration requirements, you can change the IP Audio Conference Phone 2033 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

3 Enter the following information:

| Screen prompt | Description |
|---------------|---|
| set IP | a valid IP Audio Conference Phone 2033 IP address |
| net msk | a subnet mask |
| def gw | the default Gateway for the IP Audio Conference Phone 2033 on the LAN segment to which it is connected. |

4 Enter the information for the primary Connect Server (S1) and the secondary Connect Server (S2):

| Screen prompt | Description |
|---------------|--|
| S1 IP | The primary CS 1000 node IP address of the IP Audio Conference Phone 2033. |
| S1 Port | This is a fixed value: 4100 |

| | |
|----------------|---|
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none"> • for TPS only, enter 1 • for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | <p>The number of times the IP Audio Conference Phone 2033 attempts to connect to the server. Enter 10.</p> |
| S1 PK | <p>Default is ffffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none"> • Set to 6 or 1. • Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address of the IP Audio Conference Phone 2033.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> |

| | |
|--------------------------|---|
| S2 retry count | Same as S1 |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| TFTP Server IP 0.0.0.0. | the TFTP Server IP address |
| VLAN? (0-No, 1-Ma, 2-Au) | <p>Default 0-No 802.1Q VLAN remains off and initialization continues.</p> <p>1-MA Enter a VLAN ID manually, then press OK. The following VLAN ID displays: Manual Cfg VLAN: 1234</p> <p>Note: The VLAN ID is entered as a decimal. The VLAN ID is a 12-bit value between 1 and 4094.</p> <p>The IP Audio Conference Phone 2033 is configured with 802.1Q VLAN enabled, priority = 6, and the VLAN ID set to the entered value.</p> |

| | |
|---------------------------|--|
| | <p>2-Au</p> <p>Enter a VLAN ID automatically. This prompt exists to support future implementation of DHCP.</p> <p>VLANFILTER (0-No, 1-Yes)</p> <p>Default 0 (for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
| Cfg XAS? (0-No,1-Yes) | <p>Enter 0 (for No), since External Application Server is not supported on the IP Audio Conference Phone 2033.</p> <p>This prompt exists to support future implementation of External Application Server.</p> |
| EAP Enable? (0-No, 1-Yes) | <p>Default 0 (for No)</p> <p>You are not prompted to enter Device ID and Password if you select 1 for Yes.</p> <p>For more information on EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on page 521.</p> |
| Cfg PK (0-No, 1-Yes):0 | Default 0 (for No) |
| Duplex (0-Auto, 1-Full):0 | Default 0 (for Auto) |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current

firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

The IP Audio Conference Phone 2033 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Audio Conference Phone 2033 searches for the connect server. When the connection is complete, proceed with Step 5.

5 Enter the following information:

| Screen prompt | Description |
|---------------|--|
| Password | IP Phone Installer Password You are not prompted to enter the IP Phone Installer Password if it has not been configured in your system. |
| Node | The node ID. |
| TN | The TN or VTN. |

Note: Select the **Shift** soft key labeled (>>) and press **Clear** to edit the TN field. The IP Audio Conference Phone 2033 by default will place you in the units field of the TN. You can not use backspace to move to the loop, shelf or card fields.

The IP Audio Conference Phone 2033 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Audio Conference Phone 2033 resets.

Note: The Enhanced UNISim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

6 Check for dial tone and the correct DN above the display.

- 7 (Optional) Customize the soft keys as required. For more information, see *Software Input/Output: Administration* (553-3001-311) and *IP Audio Conference Phone 2033 User Guide*.

End of Procedure

Procedure 50**Installing an IP Audio Conference Phone 2033
for the first time using DHCP**

You will hear a tone shortly before the IP Phone is ready to start the Nortel IP Phone application. Once the application has loaded and started, you will see the Nortel logo and **Starting DHCP** will appear at the bottom of the screen.

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 To enter the configuration menu, press the three soft keys at the bottom of the display in sequence from left to right.
- 2 At the prompt DHCP *Yes/No?*, enter 1 (1 for **Yes**).

By default, Full DHCP is configured on the IP Audio Conference Phone 2033. Depending on the configuration requirements, you can change the IP Audio Conference Phone 2033 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 3
- At the prompt, **Cached IP?**, select 0 (0-No, default) to conform to the DHCP standard and to obtain an IP address from the DHCP server. Only select 1 (1 for Yes) to force the IP Phone to start with a cached IP address in the event that the IP Phone cannot connect to the DHCP server and obtain an IP address.
- 4
- Select Partial or Full DHCP.
- a.
- If you select Full DHCP, then the following parameters are retrieved from the DHCP server:
-
- a valid IP Audio Conference Phone 2033 IP address
-
- a subnet mask
-
- the default Gateway for the IP Audio Conference Phone 2033 on the LAN segment to which it is connected
-
- the S1IP. The primary CS 1000 node IP address of the IP Phone.
-
- the S1 action
-
- the S1 retry count. This is the number of times the IP Audio Conference Phone 2033 attempts to connect to the server
-
- the S2 IP. The secondary CS 1000 node IP address of the IP Phone.
-
- the S2 action
-
- the S2 retry count

- b.
- If you select Partial DHCP, then you must enter the following parameters

| Screen prompt | Description |
|---------------|--|
| S1 IP | The primary CS 1000 node IP address of the IP Audio Conference Phone 2033. |
| S1 Port | this is a fixed value: 4100 |

| | |
|----------------|--|
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | <p>the number of times the IP Audio Conference Phone 2033 attempts to connect to the server; enter 10</p> |
| S1 PK | <p>Default is ffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using an Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address of the IP Audio Conference Phone 2033.</p> |
| S2 Port | <p>same as S1</p> |
| S2 action | <p>same as S1</p> <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> |

| | |
|--------------------------|---|
| S2 retry count | same as S1 |
| S2 PK | <p>Default is ffffffffffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using an Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| TFTP Server IP 0.0.0.0. | the TFTP Server IP address |
| VLAN? (0-No, 1-Ma, 2-Au) | <p>Default 0 for No 802.1Q VLAN remains off and initialization continues.</p> <p>1-MA Enter a VLAN ID manually, then press OK. The following VLAN ID displays: Manual Cfg VLAN: 1234</p> <p>Note: The VLAN ID is entered as a decimal. The VLAN ID is a 12-bit value between 1 and 4094.</p> <p>The IP Audio Conference Phone 2033 is configured with 802.1Q VLAN enabled, priority = 6, and the VLAN ID set to the entered value.</p> <p>2-Au Enter a VLAN ID automatically. This prompt exists to support future implementation of DHCP.</p> |

| | |
|--------------------------|--|
| | VLANFILTER (0-No, 1-Yes) Default 0 (for No) You are not prompted for VLANFILTER if VLAN is not enabled. |
| Cfg XAS? (0-No,1-Yes) | Enter 0 (for No), since External Application Server is not supported on the IP Audio Conference Phone 2033. This prompt exists to support future implementation of External Application Server. |
| EAP Enable?(0-No, 1-Yes) | Default 0 (for No) You are not prompted to enter Device ID and Password if you select 1 for Yes. For more information on EAP, see Appendix Appendix C:: "802.1x Port-based network access control" on page 521 . |
| Cfg PK (0-No, 1-Yes):0 | Default 0 (for No) |
| Duplex (0-Auto, 1-Full) | Default 0 (for Auto) |

Note: You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware. For CS 1000 Release 4.5, accept the default value of 0.0.0.0. For Succession Release 3.0 or CS 1000 Release 4.0, enter the TFTP Server IP address. The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: "TFTP Server" on [page 605](#).

The IP Audio Conference Phone 2033 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see “Enhanced Redundancy for IP Line Nodes” in *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Audio Conference Phone 2033 searches for the connect server. When the connection is complete, proceed to Step 5.

5 Enter the following information:

| Screen prompt | Description |
|---------------|---|
| Password | IP Phone Installer Password |
| | You are not prompted to enter the IP Phone Installer Password if it has not been configured in your system. |
| Node | The node ID. |
| TN | The TN or VTN. |

Note: Select the **Shift** soft key labeled (>>) and press **Clear** to edit the TN field. The IP Audio Conference Phone 2033 by default will place you in the units field of the TN. You can not use backspace to move to the loop, shelf or card fields.

The IP Audio Conference Phone 2033 registers with the TPS and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Audio Conference Phone 2033 resets.

Note: The Enhanced UNISim Firmware Download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

6 Check for dial tone and the correct DN above the display.

7 (Optional) Customize the soft keys as required. For more information, see *Software Input/Output: Administration* (553-3001-311), and *IP Audio Conference Phone 2033 User Guide*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 51 to enable Full Duplex mode.

Procedure 51 **Enable Full Duplex mode**

- 1 Reset the IP Phone by disconnecting and re-connecting power.
- 2 When the Nortel logo appears, press each of the soft keys in sequence. See Procedure 50 on [page 291](#).
- 3 If no other configuration changes are required, press the **OK** soft key repeatedly until the Duplex network option appears.
- 4 Select 1 to enable Full Duplex mode.
- 5 When the Speed option appears, select one of the following:
 - 0 for 10 Mbps
 - 1 for 100 Mbps (default)
- 6 Select **OK** to confirm the change.

- 7 Restart the IP Phone. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 52 to confirm activation of Full Duplex mode.

Procedure 52
Checking Ethernet Statistics

- 1 Click the **Services** key. The Network Diagnostics menu appears.
- 2 Select **Telephone Op > Diagnostics > Ether Stats**.
 - If Full Duplex mode is active, the following is displayed:
 - Duplex: Full
 - Speed: 10 (Mb) or 100(Mb)
 - Auto-Negotiate Capability: N
 - Auto-Negotiate Completed: N

End of Procedure

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Reinstalling an IP Audio Conference Phone 2033

You can reinstall an existing previously configured IP Audio Conference Phone 2033 on the same system. For example, the IP Audio Conference Phone 2033 can be assigned to a new user (new TN) or to an existing user

who moved to a new subnet by changing the TN of the IP Audio Conference Phone 2033.

Procedure 53
Changing the TN of an existing
IP Audio Conference Phone 2033

- 1 Repower the IP Audio Conference Phone 2033.

Note: During the reboot sequence of a previously configured the IP Audio Conference Phone 2033 displays the existing node number for approximately five seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

If

Then

the node password is enabled and is not NULL

a password screen displays. Go to step 4.

the node password is disabled

a TN screen displays. Go to step 5.

- 4 Enter the password at the password screen, and press **OK**.

A TN screen displays.

To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Shift** soft key labeled (>>) and press **Clear** to edit the TN field. The IP Audio Conference Phone 2033 by default will place you in the units field of the TN. You cannot use backspace to move to the loop, shelf or card fields.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Audio Conference Phone 2033

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Audio Conference Phone 2033 that is currently using the TN.

Procedure 54

Replacing an IP Audio Conference Phone 2033

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Audio Conference Phone 2033 that you want to replace.
- 3 Follow either Procedure 48 on [page 281](#) or Procedure 50 on [page 291](#) to install and configure the IP Audio Conference Phone 2033.
- 4 Enter the same TN and Node Number as the IP Audio Conference Phone 2033 you replaced. The system associates the new IP Audio Conference Phone 2033 with the existing TN.

End of Procedure

Removing an IP Audio Conference Phone 2033 from service

Procedure 55

Removing an IP Audio Conference Phone 2033 from service

- 1 Disconnect the IP Audio Conference Phone 2033 from the network or turn off the power.

If the IP Audio Conference Phone 2033 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.
- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Connecting an extension microphone

Procedure 56

Connecting an extension microphone to the IP Audio Conference Phone 2033

- 1 Thread the microphone cord through the channels on the bottom of the IP Phone.

Note: A maximum of two microphone jacks are supported on the IP Audio Conference Phone 2033.

- 2 Connect the microphone cord to one of the microphone jacks on the bottom of the IP Phone.

End of Procedure

Nortel IP Phone 1110

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 304 |
| Description | 304 |
| Components and functions | 305 |
| Features not supported | 311 |
| Display characteristics. | 311 |
| Local Tools menu password protection | 313 |
| Key number assignments | 315 |
| Package components | 316 |
| Installation and Configuration. | 318 |
| Full Duplex mode | 340 |
| TFTP firmware upgrade | 342 |
| Gratuitous Address Resolution Protocol Protection | 342 |
| Extensible Authentication Protocol. | 342 |
| Redeploying an IP Phone 1110. | 343 |
| Replacing an IP Phone 1110 | 344 |
| Removing an IP Phone 1110 from service | 344 |

Introduction

This section explains how to install and maintain the IP Phone 1110. For information on using the IP Phone 1110, see the *IP Phone 1110 User Guide*.

This section contains the following procedures:

- Procedure 57, “Configuring the IP Phone 1110” on page 319.
- Procedure 58, “Installing the IP Phone 1110 for the first time using manual configuration” on page 327.
- Procedure 59, “Installing an IP Phone 1110 for the first time using DHCP” on page 334”.
- Procedure 60, “Enabling Full Duplex” on page 341.
- Procedure 61, “Checking Ethernet Statistics” on page 341.
- Procedure 62, “Changing the TN of an existing IP Phone 1110” on page 343.
- Procedure 63, “Replacing an IP Phone 1110” on page 344.
- Procedure 64, “Removing an IP Phone 1110 from service” on page 344.


Note: After an IP Phone has been installed and configured, if power to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 1110 uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 1110 translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 1110 network connection, and connection to the Communication Server 1000.

Figure 24 on [page 305](#) shows the IP Phone 1110.

Figure 24
IP Phone 1110

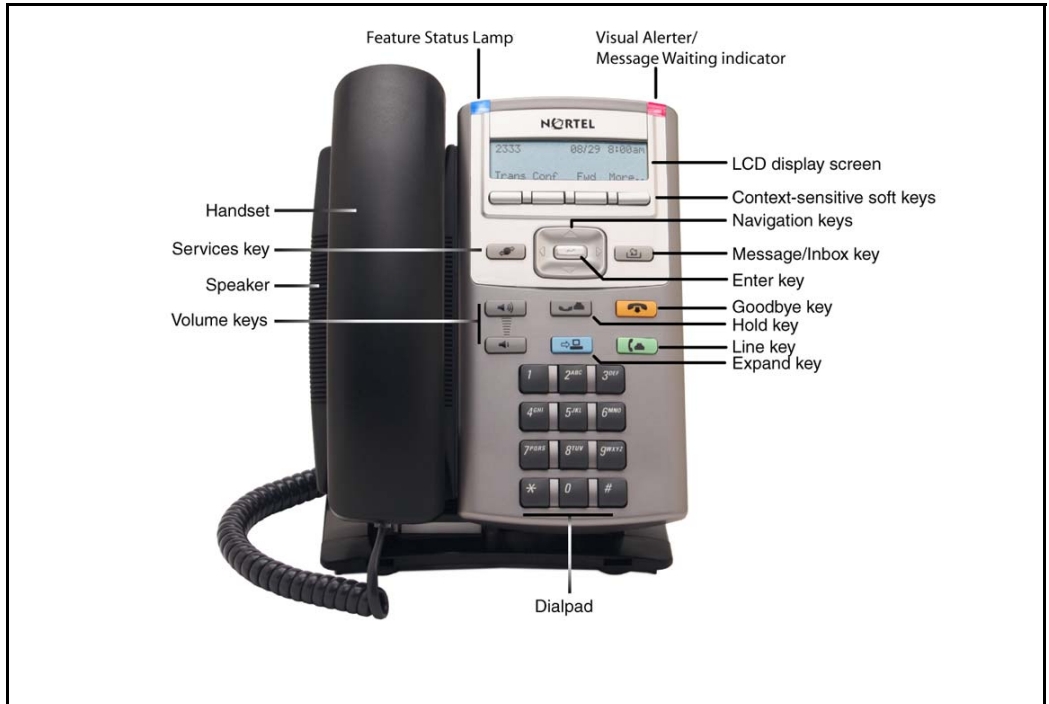

Components and functions

This section describes the following components and functions of the IP Phone 1110:

- Keys and functions
- Services menu

Keys and functions

Table 34 describes the IP Phone 1110 keys and functions.

Table 34
IP Phone 1110 keys and functions (Part 1 of 2)

| Key | Function |
|---|---|
| Line key | Press the Line key to access the single DN and make a call. |
| Hold | Press the Hold key to put an active call on hold. Press the green Line (DN) key to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Visual Alerter/ Message Waiting indicator | When a message is waiting, the red Visual Alerter/Message Waiting indicator flashes. Also, when the phone rings, the indicator flashes. |
| Feature status lamp | When your IP Phone 1110 firmware is updating, the blue Feature Status Lamp flashes. |
| Context-sensitive soft keys | Context-sensitive soft keys are located below the display area. The LCD label above the key changes, based on the active feature. A triangle before a key label indicates that the key is active. Note: Context-sensitive soft keys are Call Server dependent and are further enhanced in CS 1000 Release 5.0. |
| Expand | The Expand key is used to access an External Application Server such as, Nortel Application Server. The Expand key is reserved for future feature development. |
| Navigation keys | Use the Navigation keys to scroll through menus and lists appearing on the LCD display screen. The outer part of this key cluster rocks for up, down, left, and right movements. Use Up and Down keys to scroll up and down in lists, and the Left and Right keys to position the cursor. You can also use the Left and Right keys to select editable fields that appear on the phone. Press the Right key to select the field below the current position, or press the Left key to select the field above the current position. |

Table 34
IP Phone 1110 keys and functions (Part 2 of 2)

| Key | Function |
|---------------------|---|
| Enter | Press the Enter key, at the center of the Navigation key cluster, to confirm menu selections. In many cases, you can also use the Enter key like the Select soft key. |
| Message/Inbox | Press the Message/Inbox key to access your voicemail box. |
| Volume control keys | Press the volume control keys to adjust the volume of the handset, listen-only speaker, and ringer. |

Services menu

Table 35 shows the Services menu.

Table 35
Services menu (Part 1 of 2)

| | |
|--------------|---|
| Services key | Press the Services key to access the following items: <ul style="list-style-type: none">• Telephone Options (see Note):<ul style="list-style-type: none">— Volume Adjustment— Contrast Adjustment— Language— Date/Time— Display diagnostics— Local Dialpad Tone— Set Info— Diagnostics— Call Log Options— Ring type— Call Timer |
|--------------|---|

Table 35
Services menu (Part 2 of 2)

- Password Admin
- Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)
- Test Local Mode and Resume Local Mode (if Branch Office is configured)

Note: The user can originate a call using Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or the Caller ID information, and Autodial and Last Number Redial intercept the dialpad.

Local Tools menu

Table 36 shows the Local Tools menu.

Table 36
Local Tools menu

Press the Services key twice to access the Local Tools menu. The following items appear in the Local Tools menu:

- 1. Preferences
- 2. Local Diagnostics
- 3. Network Configuration
- 4. Lock Menu

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see “Local Tools menu password protection” on page 313.

To make a selection, press the number associated with the menu item, or use the navigation keys to scroll through the menu items.

Press the Services key to exit from any menu or menu item.

Supported features

The IP Phone 1110 supports the following telephony features:

- four context-sensitive soft keys

Note: Functions for the context-sensitive soft keys are configured in LD 11.
- volume control keys for adjusting ringer, listen-only speaker, and handset volume
- two specialized feature keys:
 - Message/Inbox
 - Services
- four call-processing fixed keys:
 - Line key
 - Goodbye
 - Expand—reserved for future feature development
 - Hold
- Call Duration Timer
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 1110 supports the following data network features:

- integrated 10/100BT Ethernet switch for shared PC access
 - the LAN Ethernet port supports 10/100BT Mbps Full Duplex mode
 - the PC Ethernet port supports 10/100BT Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 38, “IP Phone 1110 IP parameters,” on page 326.

- 802.1ab Link Layer Discovery Protocol (LLDP)
For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).
- Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, see “Features overview” on page 493.
- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone for VLAN and priority tagging for PC and IP Phone traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 2
- Gratuitous Address Resolution Protocol (GARP) Protection

The IP Phone 1110 supports the following user interface features:

- Hearing Aid Compatibility (HAC) as per FCC Part 68
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Russian, Latvian, Turkish, and Katakana

Note: In the case of the prompts locally generated by the phone for the Local Tools menu and in all local features, the language is controlled locally by the phone. Thus the two language selection mechanisms on the phone are: one for local features, which is selected in the Local Tools menu, and another for Terminal Proxy Server (TPS) features, which is selected in the Telephone Options menu. For information about selecting the languages for local features and TPS features, see the *IP Phone 1110 User Guide*.

Features not supported

The following features are not supported on the IP Phone 1110:

- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Headset
- Callers List
- Redial List
- Personal Directory
- Corporate Directory
- Expansion Module for IP Phone 1100 Series
- Call status indicator


Display characteristics

An IP Phone 1110 has two major display areas:

- context-sensitive soft key label
- information line

Figure 25 on page 312 shows the two display areas.

Figure 25
IP Phone 1110 display area

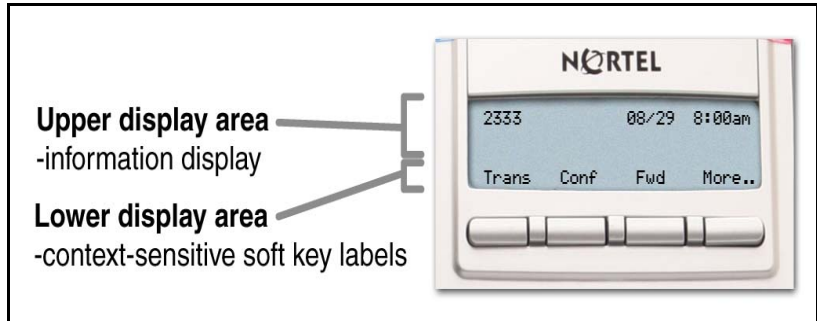

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Context-sensitive soft key label display

The context-sensitive soft key label has a maximum of seven characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the More soft key to navigate through the layers of functions. If only four functions are assigned to the soft keys, the More key does not appear and all four functions are displayed.

Information line display

An IP Phone 1110 has a one-line information display area with the following information:

- Caller number
- Caller name
- Feature prompt strings
- User-entered digits
- Date and time information (if the IP Phone is in an idle state), or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Local Tools menu password protection

If the SECUREMENU parameter was set during Full DHCP configuration, the Local Tools menu is locked to prevent accidental or unwanted changes. You are prompted to enter the fixed password 26567*738 (color*set) whenever the **Services** key is double-pressed, or whenever the Local Diagnostics and Network Configuration sub menus are accessed.

If the PARTSECURE parameter was set during Full DHCP configuration, you are prompted to enter the fixed password whenever you access 2. Local Diagnostics, or 3. Network Configuration menu items from the Local Tools menu. You are always prompted to enter the fixed password whenever you access the 4. Lock Menu sub menu.

Two ways to control the menu lock are as follows:

- DHCP Secure Menu option—the IP Phone processes the secure menu setting retrieved from the Full DHCP response.
- Lock Menu option—double-press the Services key to access the Local Tools menu. Press **4** on the dialpad to access the Lock Menu items, or use the up/down navigation keys to scroll and highlight one of the following Lock Menu options:

- 1. Manual Secure Local Menu
- 2. Manual Partial Secure Menu
- 3. Manual Disable Secure Menu
- 4. DHCP Secure Menu
- 5. Lock Now

The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

For more information about 4. Lock Menu manual user settings, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Configuring Secure Local Menu through Full DHCP

Password protection is enabled during Full DHCP configuration if the SECUREMENU parameter, or the PARTSECURE parameter are present at the end of the S4 part of the Full DHCP string. If neither the SECUREMENU parameter, nor the PARTSECURE parameter is present, password protection is not enabled.

The SECUREMENU/PARTSECURE item is an optional parameter. If it is present, then the full S4 string needs to be present, including the action and retries. The S4 string will already be present if the XAS support has been configured through the DHCP. If XAS is not configured, you can still enable password protection by setting the S4 IP address to 0.0.0.0 and by setting the other fields to 0.

IMPORTANT!

With Full DHCP, the vendor-specific or site-specific options must be configured depending on the customers DHCP server configuration.

For further information on configuring Full DHCP, see *Data Networking for Voice over IP* (553-3001-160).

Accessing the Local Tools menu

Once the password is entered, the Local Tools menu remains active for 5 minutes. You can freely navigate, exit and reenter the Local Tools menu without being prompted to reenter the password. To reset the timer before the 5 minute time expires, double-press the Services key.

You can also press the 5 key to select the Lock Now item from the Lock Menu. The Lock Now item immediately exits the Local Tools menu, closes any open Local Tools menu pages, and locks the Local Tools menu. Alternatively, when time expires, the Local Tools menu and any open submenus are closed. Double-press the Services key to open the password prompt window to reaccess the Local Tools menu.

If you enter an incorrect password, the Local Tools menu will not open. Double-press the Services key to open the password prompt window. Only three incorrect password entries are allowed. Any entry after the three attempts is ignored for 5 minutes. The password prompt window is visible and you can reenter the password but the password is not processed until the 5 minute time expires.

Note: Depending on the current state of the menu lock and the configuration of the IP Phone, some items appear with a black box at the beginning of the menu item. Only configuration options which are enabled from the current state appear active. Menu options that are not available appear with a black box.

For more information about configuring the Local Tools menu for the IP Phone 1110, see Appendix Appendix F: “Configuring the Local Tools menu” on [page 579](#).

Key number assignments

You can assign a maximum of nine functions to the four soft-labeled, predefined context-sensitive soft keys. Because the context-sensitive soft keys are predefined, the user cannot change the key number assignment. Functions are assigned to the context-sensitive soft keys in layers in LD 11.

The Message Waiting key is numbered 16.

Functions mapped to key numbers 17 to 26 are assigned to the four context-sensitive soft keys. Labels for the context-sensitive soft keys appear in the display area. For further information, see “Context-sensitive soft key label display” on page 312. Figure 25 on [page 312](#) shows the IP Phone 1110 display area.

Key number mappings at the Call Server are aligned with that of the IP Phone 2001.

For a description of the IP Phone function assignment for each of the context-sensitive soft keys, see Appendix Appendix I:: “IP Phone soft keys” on [page 619](#).

Package components

The IP Phone 1110 includes integrated support for a number of Power over Ethernet options, including support for IEEE 802.3af Power Classification 2.

Table 37 lists the IP Phone 1110 package components and product codes.

Table 37
IP Phone 1110 components list (Part 1 of 3)

| | |
|--|------------|
| IP Phone 1110 package contents include: <ul style="list-style-type: none">• IP Phone 1110• Handset• Handset cord• 2.1 m (7 ft.) CAT5 Ethernet cable• Number plate and lens• Getting Started Card | |
| IP Phone 1110 with icon key caps, without power supply (RoHS) | NTYS02AAE6 |
| IP Phone 1110 with English key caps, without power supply (RoHS) | NTYS02BAE6 |
| Replacement parts | |
| Handset, Charcoal | NTYS09AA70 |

Table 37
IP Phone 1110 components list (Part 2 of 3)

| | | |
|--|-------------|-----------------|
| Handset cord, Charcoal | | NTYS10AA70 |
| Footstand kit, Charcoal (includes the stand and stand cover) | | NTYS11AA70 |
| Phone number label and lens kit | | NTYS12AA |
| 2.1 m (7 ft) CAT5 Ethernet cable | | NTYS13AA |
| Power adapter | | |
| Global power supply (for local power) | | N0089601 |
| IEC cables | RoHS | Non-RoHS |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 North America Note: Nortel recommends you use the thinner cord (NTYS14AA) as an alternative to NTKK14AB. | NTYS14AAE6 | NTYS14AA |
| 3 m (9.9 ft), 125 VAC 13 amp, NA power cord, NEMA North America, Middle East, Taiwan, Philippines, Thailand, and Japan | NTTK14ABE6 | NTTK14AB |
| 2.4 m (8 ft), 240 VAC 10 amp, ANZ power cord AS-3, Australia, New Zealand | N/A | NTTK15AA |
| 250 VAC, Option 11C Standard European power cord, Other EMEA, Kenya, Korea, Thailand, Indonesia, Vietnam, India, Pakistan | NTTK16ABE6 | NTTK16AB |
| 3 m (9.9 ft) 125 VAC, Option 11C Swiss power cord Switzerland | NTTK17ABE6 | NTTK17AB |
| 240 VAC, Option 11C UK power cord Hong Kong, Ireland, United Kingdom, Singapore, Malaysia, Bangladesh, Brunei, Sri Lanka | NTTK18ABE6 | NTTK18AB |
| 3 m (9.9 ft), 125 VAC, Option 11C Denmark power cord Denmark | NTTK22ABE6 | NTTK22AB |

Table 37
IP Phone 1110 components list (Part 3 of 3)

| | | |
|---|------------|----------|
| Argentina | N/A | A0814961 |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 Japan | NTTK26AAE6 | N/A |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 1110 installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 1110
- Startup sequence
- Installing the IP Phone 1110

Before you begin

Before installing the IP Phone 1110, complete the following pre-installation checklist:

- Ensure there is one IP Phone 1110 boxed package for each IP Phone 1110 being installed. The package contains:
 - IP Phone 1110
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - number plate and lens
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 1110 being installed.

- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the approved Nortel AC adapter (model # N0089601) is used. See Table 37, “IP Phone 1110 components list,” on page 316.

First-time installation

You must first install an IP telephony node with the Communication Server. For information about installing an IP telephony node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Damage to Equipment

Do not plug your IP Phone 1110 into an ISDN connection. Severe damage can result.

Configuring the IP Phone 1110

You must configure the IP Phone 1110 before you can use it. Use Procedure 57 to configure the IP Phone 1110 for the first time.

Procedure 57

Configuring the IP Phone 1110

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2 Configure the IP Phone 1110 on the Call Server as IP Phone 2001 using LD 11. At the prompt, enter the following:

```
REQ:chg  
TYPE:2001
```


For more information, see *Software Input/Output: Administration* (553-3001-311).



CAUTION


The IP Phone 1110 is shipped with the stand and stand cover locked in position. To avoid damaging the IP Phone, press the wall-mount lever, as indicated in Figure 26 on [page 320](#), to release the stand and tilt the phone away from the base using the Tilt lever. To release the stand cover, see step 3 on [page 321](#) and Figure 27 on [page 321](#).

Figure 26
Release the IP Phone 1110 from the stand

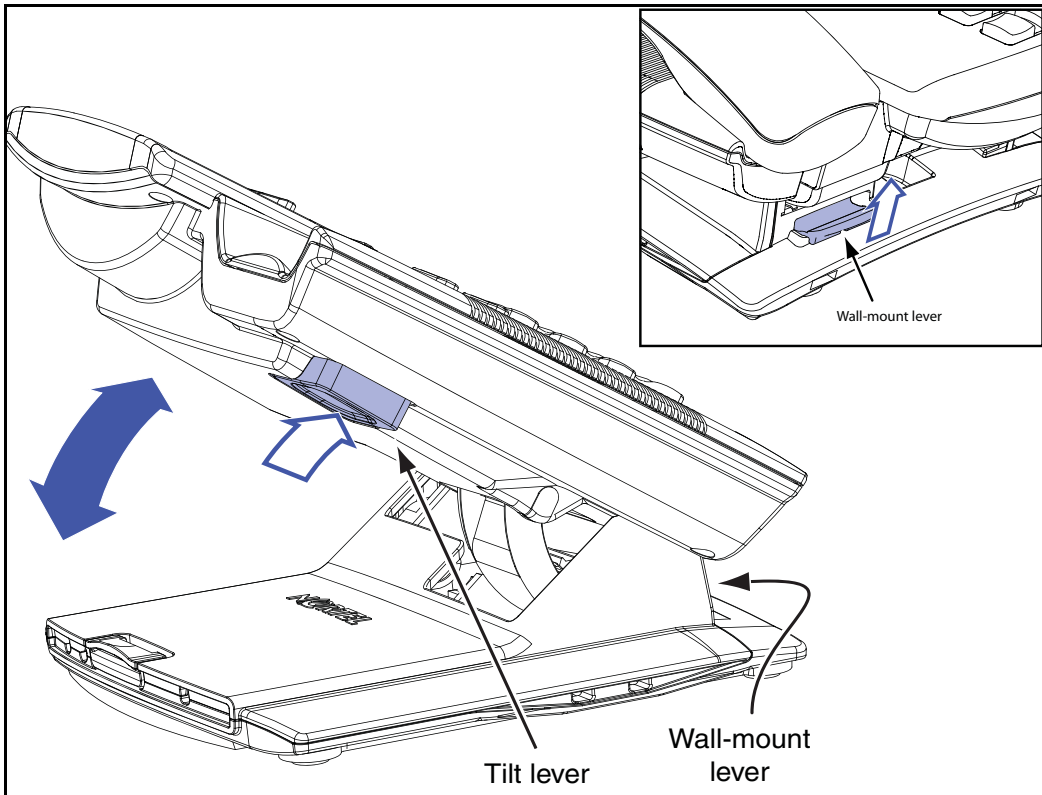

- 3 Pull upward on the center catch and remove the stand cover, as indicated in Figure 27 on [page 321](#). The cable routing tracks are now accessible.

Figure 27
Stand cover removed

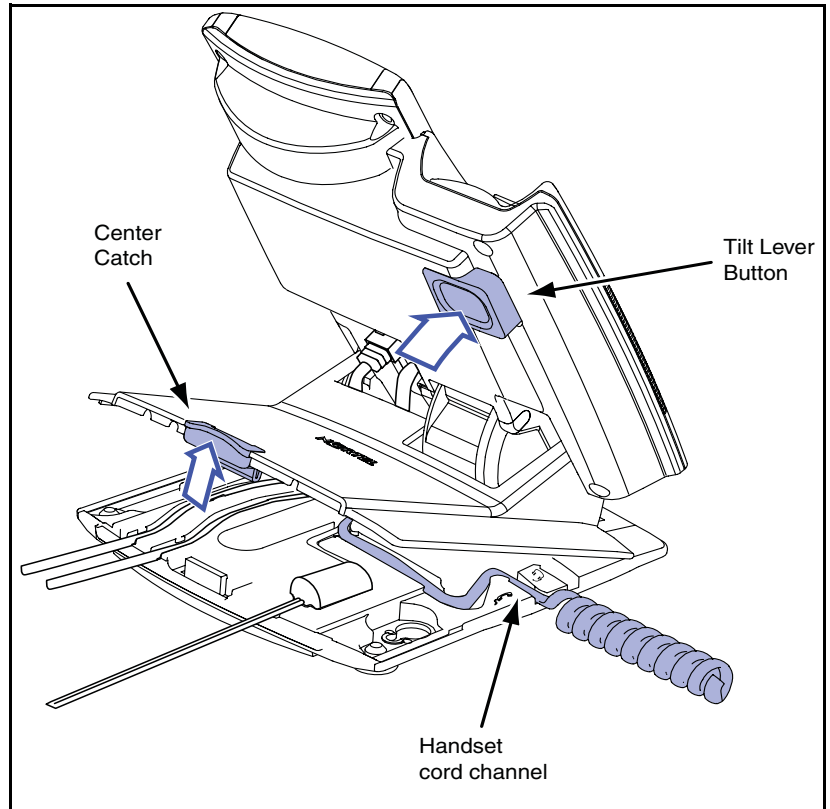

- 4 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable, and then thread the adapter cord through the channels in the stand.


WARNING

If using local power, use your IP Phone 1110 with the approved Nortel AC adapter (model # N0089601).

Note: The IP Phone 1110 supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 2. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

Figure 28 on [page 323](#) shows the IP Phone 1110 connections.


Figure 28
IP Phone 1110 connections

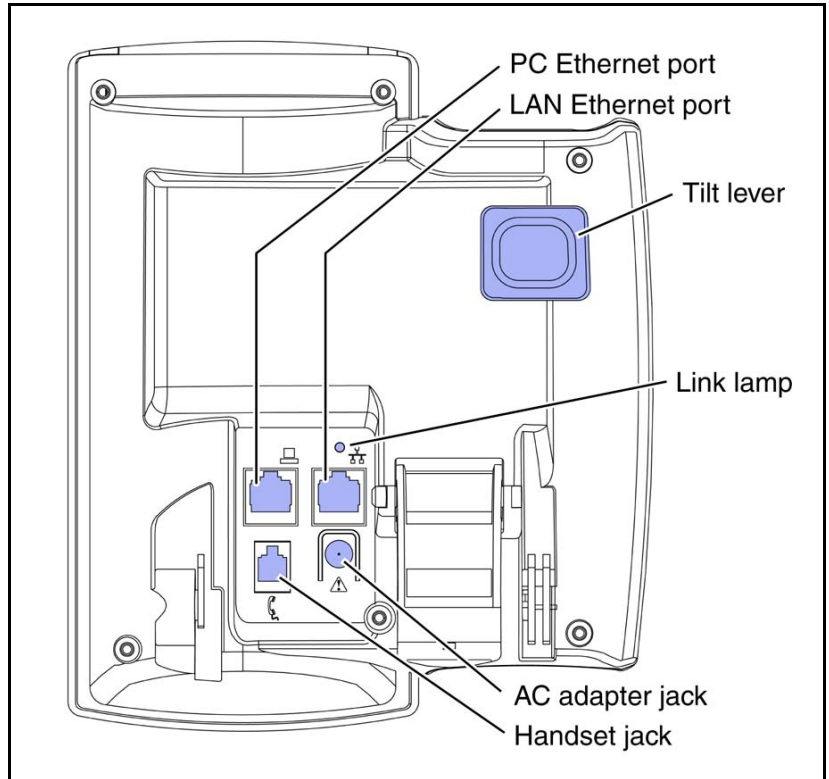

- 5** Install the handset. Connect the end of the handset cable with the short straight section into the handset. Connect the end of the handset cable with the long straight section to the jack marked with the symbol +. Form a small bend in the cable, and then thread the handset cord through the channels in the stand so that it exits behind the handset through the handset cord channel. The handset cord channel in the stand is marked with the symbol +. See Figure 28.

Note: Although a headset cord channel appears on the base of the IP Phone 1110, the IP Phone 1110 does not support a headset port.

Figure 29
Cable routing tracks

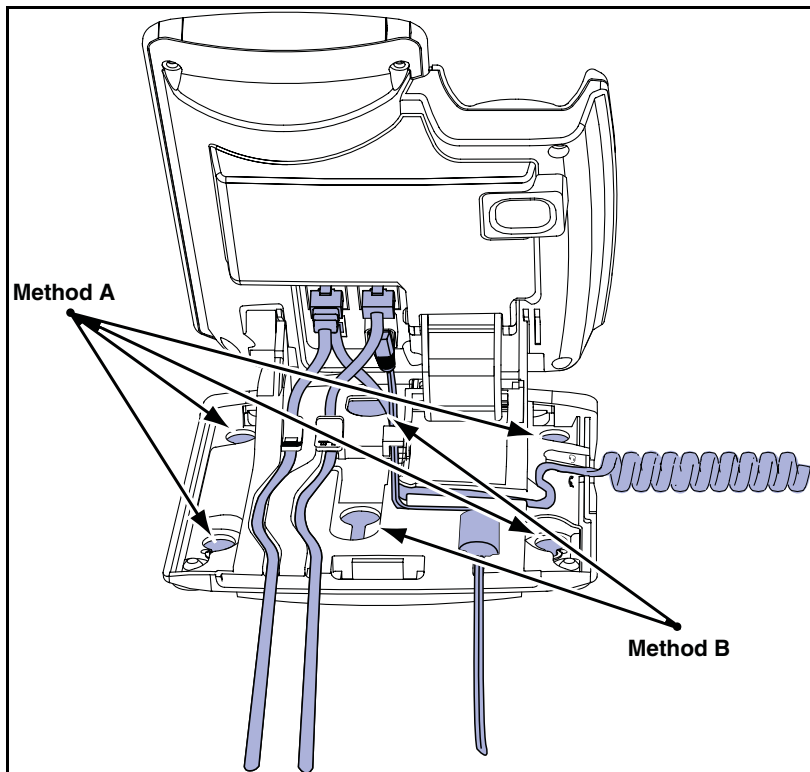

- 6** Install the Ethernet cable. Connect one end of the supplied Ethernet cable to the back of your phone using the CAT5 cable (not provided) connect marked with the symbol%, and thread the network cable through the channel marked with the symbol%.

- 7 If you are connecting your PC through the phone, you will require a second CAT5 cable. Only one cable is included with the IP Phone 1110 package. Connect one end of the PC Ethernet cable to your phone using the CAT5 connector marked with the symbol (), and thread it through the channel marked with the symbol (). Connect the other end to the LAN connector on the back of your PC.

**CAUTION****Damage to Equipment**

Do not plug any device into your IP Phone 1110 Ethernet port other than one PC. The IP Phone 1110 does not support multiple devices connected through the PC Ethernet Port.

Note: Complete steps 1-9, as needed, before wall-mounting the IP Phone.

- 8 Wall-mount your phone (optional). Use Method A or Method B to wall-mount the IP Phone. See Method A—using the mounting holes on the bottom of the phone stand, or Method B—using the traditional-style wall-mount box with a CAT5 connector and a 15 cm (6 inch) CAT5 cord (not provided). See Figure 29 on [page 324](#).
- Method A: Press the wall-mount lever, and pull away from the stand. Using the stand cover (see step 3 on [page 321](#)), mark the wall-mount holes by pressing the bottom of the stand cover firmly against the wall in the location where you wish to install the phone. Four small pins on the bottom of the stand cover make the marks on the wall. Use the marks as a guideline for installing the wall-mount screws (not provided).

Install the screws so that they protrude 3 mm (1/8 inch) from the wall, and then install the phone stand mounting holes over the screw heads. You may need to remove the phone from the wall to adjust the lower screws. When the lower screws are snug, install the phone on the mounting screws, and then tighten the top screws.
 - Method B: Attach the 15 cm (6 inch) CAT5 cable (not provided), position the stand over the mounting rivets, and slide the phone down the wall so that the rivets fit into the slots on the stand.
- 9 Replace the stand cover. Ensure that all cables are neatly routed and press the stand cover into place until you hear a click.

- 10
- If you wall-mount the phone, put it in the wall-mount position by holding the Tilt Lever and press the phone towards the base until the phone is parallel with the base. Release the Tilt Lever and continue to push the phone towards the base until you hear an audible click. Ensure the phone is securely locked into position.
- 11
- Connect additional cables. Connect the Ethernet cable to the LAN Ethernet connection. If you are using an AC power adapter, plug the adapter into an AC outlet.

End of Procedure

Startup sequence

When an IP Phone 1110 is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- authenticating the user

See Table 38 for a summary of the IP parameters and how they are obtained.

Table 38
IP Phone 1110 IP parameters (Part 1 of 2)

| Parameter | Method of acquisition |
|-------------------------|--|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically obtained through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically obtained through Partial or Full DHCP. |
| Default Gateway address | Manually entered or automatically obtained through Partial or Full DHCP. |

Table 38
IP Phone 1110 IP parameters (Part 2 of 2)

| Parameter | Method of acquisition |
|---|--|
| Connect Server (IP address, port, action and retry count—primary and secondary) | Manually entered or automatically obtained through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Obtained from local storage on subsequent power cycles. |

Installing the IP Phone 1110

Use Procedure 58 to install the IP Phone 1110 for the first time using manual configuration. Use Procedure 59 on [page 334](#) to install the IP Phone 1110 for the first time using Full DHCP.

Procedure 58 **Installing the IP Phone 1110 for the** **first time using manual configuration**

IMPORTANT!

Timing information for manual configuration

To enter the manual configuration mode, you have approximately 30 seconds (s) between plugging in the IP Phone 1110 power adapter and the appearance of the text Nortel. When you see the text Nortel on the phone, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right. If you miss the one-s response time, the IP Phone 1110 attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the Local diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: “IP Phone diagnostic utilities” on [page 525](#).

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see “Local Tools menu password protection” on page 313.

To edit network configuration the following soft keys are available:

- OK—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- BkSpace—backspace a configuration entry to change it
- Clear—clear an entire configuration entry
- Cancel—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1 At the prompt **EAP Enable?**, enter **1**-Yes (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **0**-No (0 for No), you will not be prompted to enter Device ID and Password.

For more information about EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

- 2 At the prompt, **LLDP Enable?**, enter **1**-Y (1 for Yes, default), or **0**-N (0 for No).

For more information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 3 At the prompt **DHCP Yes/No?**, enter **0**-N (0 for No). You are prompted to enter all parameters.

By default, Full DHCP is configured on the IP Phone 1110. Depending on the configuration requirements, you can change the IP Phone 1110 configuration to allow the following IP address assignments:

- Static—enter all parameters
- Partial DHCP—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- Full DHCP— (default) all parameters are obtained from the DHCP server

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

4 Enter the following information:

| Screen prompt | Description |
|---------------|---|
| set IP | A valid IP Phone 1110 IP address. |
| net msk | A subnet mask. |
| def gw | The default Gateway for the IP Phone 1110 on the LAN segment to which the IP Phone 1110 is connected. |

5 Enter the information for the primary Connect Server (S1) and the secondary Connect Server (S2):

| | |
|----------------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 1110. |
| S1 Port | This is a fixed value: 4100 |
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if S1 Action is set to 1.</p> |
| S1 retry count | The number of times the IP Phone 1110 to connect to the server. Enter 10. |

| | |
|----------------|--|
| S1 PK | <p>Default is ffffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set S1 PK to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address for the IP Phone 1110.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if S2 Action is set to 1.</p> |
| S2 retry count | <p>Same as S1</p> |
| S2 PK | <p>Default is ffffffffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |

| | |
|--------------------------|---|
| Cfg XAS? (0-No,1-Yes) | <p>Default 0 (for No)</p> <p>Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address.</p> |
| XAS IP: | <p>Enter the IP address of the XAS server.</p> <p>Note: The IP Phone 1110 currently does not support XAS.</p> |
| VLAN Cfg? (0-No, 1-Yes) | |
| VLAN Cfg? 0-Auto, 1-Man: | <p>0-Auto Automatically obtains VLAN ID using DHCP, or the 802.1ab data switch.</p> <p>1-Man Enter the VLAN ID manually. This is a number between 1 and 4094.</p> |
| LLDP-MED? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.</p> <p>You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.</p> |
| LLDP VLAN? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>You are not prompted for LLDP VLAN if VLAN is not set to Auto (2-Auto), or if LLDP is not enabled.</p> |

| | |
|--------------------|--|
| DHCP (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
|--------------------|--|

| | |
|--------------------------|--|
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (0 for No)</p> <p>You are not prompted for VLANFILTER if VLAN is not enabled.</p> |
|--------------------------|--|

| | |
|------------------------|--------------------|
| PC Port? (1-ON, 0-OFF) | Default 1 (for ON) |
|------------------------|--------------------|

| | |
|-----------------------------------|--------------------|
| PC Port? Untag All? (1-ON, 0-OFF) | Default 1 (for ON) |
|-----------------------------------|--------------------|

| | |
|--------------------------|----------------------|
| Duplex? (0-Auto, 1-Full) | Default 0 (for Auto) |
|--------------------------|----------------------|

| | |
|-------------------------|--------------------|
| PSK SRTP? (0-No, 1-Yes) | Default 0 (for No) |
|-------------------------|--------------------|

| | |
|----------------------------|--------------------|
| GARP Ignore? (0-No, 1-Yes) | Default 0 (for No) |
|----------------------------|--------------------|

You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware.

For CS 1000 Release 4.5, accept the default value of 0.0.0.0. A TFTP Server is not required for CS 1000 Release 4.5. With the Enhanced UNISim Firmware Download feature, firmware can be automatically downloaded from the Call Server. For further information about the Enhanced UNISim Firmware Download feature, see *IP Line: Description, Installation, and Operation* (553-3001-365).

For CS 1000 Release 4.0, a TFTP Server is required to upgrade the firmware. Enter the TFTP Server IP address.

The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: "TFTP Server" on [page 605](#).

The IP Phone 1110 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 1110 saves the configuration and then reboots. The IP Phone 1110 searches for the connect server.

The IP Phone 1110 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Phone 1110 resets.

The current Call Server date and time appear on the top line of the display when the configuration is complete. Soft key labels also appear.

- 6** Check for dial tone and the correct DN on the display.

End of Procedure

Use Procedure 59 on [page 334](#) to install the IP Phone 1110 for the first time using DHCP.

Procedure 59
Installing an IP Phone 1110 for the first time
using DHCP

To edit network configuration the following soft keys are available:

- **OK**—accept current settings and proceed to the next configuration option. If all configuration options are presented, the configuration is saved and the IP Phone reboots with the saved changes.
- **BkSpace**—backspace a configuration entry to change it
- **Clear**—clear an entire configuration entry
- **Cancel**—cancels out of network configuration. The IP Phone reboots without saving changes.

- 1** At the prompt **EAP Enable?**, enter **1-Yes** (1 for Yes) if the network infrastructure supports 802.1x port-based network access control. Enter DeviceID and Password.

If you select **0-No** (0 for No), you are not prompted to enter Device ID and Password.

For more information about EAP, see Appendix Appendix C: “802.1x Port-based network access control” on [page 521](#).

- 2** At the prompt, **LLDP Enable?**, enter **1-Y** (1 for Yes, default), or **0-N** (0 for No).

For more information about LLDP, see Appendix Appendix D: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 3** At the prompt **DHCP Yes/No?**, enter **1-Y** (1 for Yes, default).

By default, Full DHCP is configured on the IP Phone 1110. Depending on the configuration requirements, you can change the IP Phone 1110 configuration to allow the following IP address assignments:

- **Static**—enter all parameters
- **Partial DHCP**—IP Phone address, subnet mask, and default Gateway are obtained from the DHCP server
- **Full DHCP**— (default) all parameters are obtained from the DHCP server

A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 4 At the prompt, **Cached IP?**, select 0 (0-No, default) to conform to the DHCP standard and to obtain an IP address from the DHCP server. Only select 1 (1 for Yes) to force the IP Phone to start with a cached IP address in the event that the IP Phone cannot connect to the DHCP server and obtain an IP address.
- 5 Select Partial or Full DHCP.
 - a. If you select Full DHCP, then the following parameters are obtained from the DHCP server:
 - a valid IP Phone 1110 IP address
 - a subnet mask
 - the default Gateway for the IP Phone 1110 on the LAN segment to which it is connected
 - the S1 IP. The primary CS 1000 node IP address of the IP Phone.
 - the S1 action
 - the S1 retry count. This is the number of times the IP Phone 1110 attempts to connect to the server
 - the S2 IP. The secondary CS 1000 node IP address of the IP Phone.
 - the S2 action
 - the S2 retry count
 - the External Application Server (XAS) IP address
 - b. If you select Partial DHCP, then you must enter the following parameters:

| | |
|---------|--|
| S1 IP | The primary CS 1000 node IP address for the IP Phone 1110. |
| S1 Port | This is a fixed value: 4100 |

| | |
|----------------|--|
| S1 action | <p>Choose one of the following:</p> <ul style="list-style-type: none">• for TPS only, enter 1• for TPS and Secure Media Controller, enter 6 or 1 <p>For more information about Secure Media Controller, see <i>Secure Media Controller: Implementation Guide</i> (553-3001-225).</p> <p>Note: You are not prompted for S1 PK if the S1 action is set to 1.</p> |
| S1 retry count | <p>The number of times the IP Phone 1110 attempts to connect to the server. Enter 10.</p> |
| S1 PK | <p>Default is ffffffffffffff.</p> <p>The Private key of the Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| S2 IP | <p>The secondary CS 1000 node IP address for the IP Phone 1110.</p> |
| S2 Port | <p>Same as S1</p> |
| S2 action | <p>Same as S1</p> <p>Note: You are not prompted for S2 PK if the S2 action is set to 1.</p> |

| | |
|--|--|
| S2 retry count | Same as S1 |
| S2 PK | <p>Default is ffffffff.</p> <p>The Private key of the alternate Secure Media Controller to which the IP Phone is connected.</p> <p>If you are using a Secure Media Controller, do the following:</p> <ul style="list-style-type: none">• Set to 6 or 1.• Enter a 16-digit hexadecimal number. |
| Cfg XAS? (0-No,1-Yes) | <p>Default 0 (for No)</p> <p>Note: If there is no External Application Server (XAS), enter 0 (for No). You are not prompted to enter the XAS IP address.</p> |
| XAS IP | <p>Enter the IP address of the XAS.</p> <p>Note: The IP Phone 1110 currently does not support an XAS.</p> |
| 6 Enter the following parameters: | |
| VLAN Cfg? (0-No, 1-Yes) | |
| VLAN Cfg? (0-Auto, 1-Man) | <p>0-Auto</p> <p>Automatically obtains VLAN ID using DHCP, or the 802.1ab data switch.</p> <p>1-Man</p> <p>Enter the VLAN ID manually. This is a number between 1 and 4094.</p> |

| | |
|-----------------------------------|---|
| LLDP-MED? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the Network Policy TLV.</p> <p>You are not prompted for LLDP-MED if VLAN is not set to Auto (2-Auto,) or if LLDP is not enabled.</p> |
| LLDP VLAN? (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), VLAN ID is configured automatically to the value received in the VLAN NAME TLV.</p> <p>You are not prompted for LLDP VLAN if VLAN is not set to Auto (2-Auto), or if LLDP is not enabled.</p> |
| DHCP (0-No, 1-Yes) | <p>If you select 1 (1 for Yes), the VLAN ID is configured automatically to a value received from the DHCP server.</p> <p>You are not prompted for DHCP if VLAN is not set to Auto (2-Au), or if DHCP is not enabled.</p> |
| VLANFILTER (0-No, 1-Yes) | <p>Default 0 (0 for No)</p> <p>You are not prompted for VLANFILTER if VLAN? is not enabled.</p> |
| PC Port? (1-ON, 0-OFF) | <p>Default 1 (for ON)</p> |
| PC Port? Untag All? (1-ON, 0-OFF) | <p>Default 1 (for ON)</p> |
| Duplex? (0-Auto, 1-Full) | <p>Default 0 (for Auto)</p> |

PSK SRTP? (0-No, 1-Yes) Default 0 (for No)

GARP Ignore? (0-No, 1-Yes) Default 0 (for No)

You are prompted to enter the TFTP Server IP address if you are using a TFTP Server to download the current firmware.

For CS 1000 Release 4.5, accept the default value of 0.0.0.0. A TFTP Server is not required for CS 1000 Release 4.5. With the Enhanced UNISim Firmware Download feature, firmware can be automatically downloaded from the Call Server. For further information about the Enhanced UNISim Firmware Download feature, see *IP Line: Description, Installation, and Operation* (553-3001-365).

For CS 1000 Release 4.0, a TFTP Server is required to upgrade the firmware. Enter the TFTP Server IP address.

The IP Phone searches for the TFTP Server for firmware upgrade. If the file name specified in configuration file is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone reboots. For further information about TFTP Server configuration, see Appendix Appendix H:: "TFTP Server" on [page 605](#).

The IP Phone 1110 can support a primary (S1) and secondary (S2) connect server. If you require IP Phones to register on multiple nodes, see "Enhanced Redundancy for IP Line Nodes" in *IP Line: Description, Installation, and Operation* (553-3001-365).

IP Phone 1110 searches for the connect server.

The IP Phone 1110 registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When the download is complete, the IP Phone 1110 resets.

The current Call Server date and time appear on the top line of the display when the configuration is complete. Soft key labels also appear.

- 7** Check for dial tone and the correct DN on the display.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 60 to enable Full Duplex.

Procedure 60
Enabling Full Duplex

- 1 Reset the phone by disconnecting and re-connecting power.
- 2 When the Nortel logo appears, press each of the soft keys in sequence. See Procedure 58 on [page 327](#).
- 3 If no other configuration changes are required, press **OK** repeatedly until the Duplex network option appears.
- 4 Select 1 to enable Full Duplex mode.
- 5 When the Speed option appears, select one of the following:
 - 0 for 10 Mbps
 - 1 for 100 Mbps (default)
- 6 Select **OK** to confirm the change.
- 7 Restart the IP Phone 1110. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 61 to confirm activation of Full Duplex mode.

Procedure 61
Checking Ethernet Statistics

- 1 Double-click the **Services** key. The Network Diagnostics menu appears.
- 2 Select **Ethernet Statistics**.
 - If Full Duplex mode is active, the following is displayed:
 - Link: UP
 - Duplex: Full
 - Speed: 10 (Mb) or 100(Mb)

- Auto-Negotiate Capability: N
- Auto-Negotiate Completed: N

End of Procedure

TFTP firmware upgrade

When you enter Cfg TFTP = 1 (for yes), and enter an IP address, the phone searches for an upgrade file on the TFTP Server.

Note: Users of CS 1000 Release 4.5 or later do not need to enter a TFTP IP address.

For more information about TFTP firmware upgrade, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 1110 from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim’s machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim’s machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 57, “Configuring the IP Phone 1110” on page 319.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Redeploying an IP Phone 1110

You can redeploy an existing previously configured IP Phone 1110 on the same Call Server. For example, the IP Phone 1110 can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 1110. For further information, see *Data Networking for Voice over IP* (553-3001-160).

Procedure 62

Changing the TN of an existing IP Phone 1110

- 1 Repower the IP Phone 1110.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 1110 displays the existing node number for approximately 5 seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

If

Then

the node password is enabled and is not NULL

a password screen displays. Go to step 4.

the node password is disabled

a TN screen displays. Go to step 5.

- 4 Enter the password at the password screen and press **OK**.
A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 1110

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 1110 that is currently using the TN.

Procedure 63 Replacing an IP Phone 1110

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 1110 that you want to replace.
- 3 Follow Procedure 57 on [page 319](#) and Procedure 58 on [page 327](#), or Procedure 59 on [page 334](#) to install and configure the IP Phone 1110.
- 4 Enter the same TN and Node Number as the IP Phone 1110 you replaced. The Call Server associates the new IP Phone 1110 with the existing TN.

End of Procedure

Removing an IP Phone 1110 from service

Procedure 64 Removing an IP Phone 1110 from service

- 1 Disconnect the IP Phone 1110 from the network or turn off the power.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 1110.

If the IP Phone 1110 was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 1120E

Contents

| | |
|---|-----|
| Introduction | 346 |
| Description | 346 |
| Components and functions | 347 |
| Supported features | 353 |
| Features not currently supported | 356 |
| Display characteristics | 356 |
| Local Tools menu password protection | 359 |
| Key number assignments | 361 |
| Package components | 362 |
| Installation and Configuration | 363 |
| Full Duplex mode | 380 |
| Gratuitous Address Resolution Protocol Protection | 383 |
| Extensible Authentication Protocol | 383 |
| Reinstalling an IP Phone 1120E | 383 |
| Replacing an IP Phone 1120E | 385 |
| Removing an IP Phone 1120E from service | 385 |

Introduction

This section explains how to install and maintain the IP Phone 1120E. For information on using the IP Phone 1120E, see the *IP Phone 1120E User Guide (NN43112-103)*.

This section contains the following procedures:

- Procedure 65, “Configuring the IP Phone 1120E” on page 365.
- Procedure 65, “Configuring the IP Phone 1120E” on page 365.
- Procedure 67, “Enabling Full Duplex mode” on page 381.
- Procedure 68, “Checking Ethernet Statistics” on page 382.
- Procedure 69, “Changing the TN of an existing IP Phone 1120E” on page 384.
- Procedure 70, “Replacing an IP Phone 1120E” on page 385.
- Procedure 71, “Removing an IP Phone 1120E from service” on page 385.

Note: After an IP Phone has been installed and configured, if power to the phone is interrupted, re-entry of the IP parameters, Node Number, TN, or re-acquisition of firmware is not required.

Description

The IP Phone 1120E uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 1120E translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 1120E network connection, and connection to the Communication Server 1000.

Figure 30 on [page 347](#) shows the IP Phone 1120E

Figure 30
IP Phone 1120E



Components and functions

This section describes the following components of the IP Phone 1120E:

- Keys and functions
- Services menu
- Local Tools menu

Keys and functions

Table 39 lists the keys and functions for the IP Phone 1120E.

Table 39
IP Phone 1120E keys and functions (Part 1 of 3)

| Key | Function |
|--|--|
| Hold | Press the Hold key to put an active call on hold. Press the line (DN) key beside the flashing LCD to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Visual Alserter/ Message waiting indicator | When a message is waiting, the red Visual Alserter/Message waiting indicator lights. Also, when the ringer sounds, this indicator flashes. |
| Feature Status Lamp indicator | When the firmware is updating, the blue Feature Status Lamp indicator flashes. Note: This function requires server support and, therefore, is not available on all phones. |
| User-defined feature key labels | User-defined feature key labels are configured for various features on the IP Phones. A steady LCD light beside a line (DN) key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed. |
| Soft keys | Soft keys are located below the display area. The LCD label above the key changes, based on the active feature. Note: A triangle before a key label indicates that the key is active. |
| Fixed feature keys | Use these keys to access non-programmable standard features. |
| Expand to PC | The Expand to PC key is used to access external server applications such as External Application Server (XAS). |

Table 39
IP Phone 1120E keys and functions (Part 2 of 3)

| Key | Function |
|-----------------|--|
| Navigation keys | <p>Use the Navigation keys to scroll through menus and lists appearing on the LCD display screen. The outer part of this key cluster rocks for up, down, left, and right movements.</p> <p>Use Up and Down keys to scroll up and down in lists, and the Left and Right keys to position the cursor. You can also use the Left and Right keys to select editable fields that appear on the phone. Press the Right key to select the field below the current position, or press the Left key to select the field above the current position.</p> |
| Enter | Press the Enter key, at the center of the Navigation key cluster, to confirm menu selections. In many cases, you can use the Enter key instead of the Select soft key. |
| Message/Inbox | Press the Message/Inbox key to access your voicemail box. |
| Shift/Outbox | The Shift/Outbox key is a fixed key that is reserved for future feature development. |
| Quit/Stop | <p>Press the Quit/Stop key to end an active application.</p> <p>Pressing the Quit/Stop key does not affect the status of the calls currently on your IP Phone.</p> |
| Directory | Press the Directory key to access Directory services. |
| Mute | <p>Press the Mute key to listen to the receiving party without transmitting.</p> <p>Press the Mute key again to return to a two-way conversation.</p> <p>The Mute key applies to Handsfree, Handset, and Headset microphones.</p> <p>The Mute LED flashes when the Mute option is in use.</p> |
| Headset | <p>Press the Headset key to answer a call using the headset or to switch a call from the handset or Handsfree to the headset.</p> <p>The Headset LED flashes when the Headset option is in use.</p> |

Table 39
IP Phone 1120E keys and functions (Part 3 of 3)

| Key | Function |
|---------------------|---|
| Volume control keys | <p>Press the volume control keys to adjust the volume of the handset, headset, speaker, ringer, and, Handsfree feature.</p> <p>Press the volume key with the loudspeaker icon to increase volume; press the volume key without the loudspeaker icon to decrease volume.</p> |
| Copy | Press the Copy Key to copy entries to your Personal Directory from other lists, such as the Caller List, Redial List and Corporate Directory. |
| Speaker | Press the Handsfree key to activate the speaker. |
| Handsfree | <p>Press the Handsfree key to activate the Handsfree feature.</p> <p>The LED lights to indicate when handsfree is active.</p> |

Services menu

Table 40 shows the Services menu.

Table 40
Services menu (Part 1 of 2)

| | |
|----------|---|
| Services | <p>Press the Services key to access the following items:</p> <ul style="list-style-type: none"> Telephone Options (see Notes 1 and 2): <ul style="list-style-type: none"> Volume Adjustment Contrast Adjustment Language Date/Time Display diagnostics |
|----------|---|

Table 40
Services menu (Part 2 of 2)

- Local Dialpad Tone
- Set Info
- Diagnostics
- Call Log Options
- Ring type
- Call Timer
- OnHook Default Path
- Change Feature Key Label
- Name Display Format
- Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)
- Test Local Mode and Resume Local Mode (if Branch Office is configured)
- Password Admin

Note: If a call is presented while the user is manipulating an option, the IP Phone 1120E rings and the DN key flashes. However, the screen display is not updated with Caller ID information. The programming text is not disturbed.

Note: If a call is presented while the user is manipulating an option, the IP Phone 1120E rings and the DN key flashes. However, the screen display is not updated with Caller ID information. The programming text is not disturbed.

Local Tools menu

Table 41, “Local Tools menu,” on page 352 shows the Local Tools menu.

Table 41

Local Tools menu (Part 1 of 2)

Press the Services key twice to access the Local Tools menu. The following items appear in the Local Tools menu:

1. Preferences
 1. Display Settings
 2. Languages...
2. Local Diagnostics
 1. IP Set&DHCP Information
 2. Network Diagnostic Tools
 3. Ethernet Statistics
 4. IP Network Statistics
 5. USB Devices
3. Network Configuration
4. Lock Menu
 1. Manual Secure Local Menu
 2. Manual Partial Secure Menu
 3. Manual Disable Secure Menu
 4. DHCP Secure Menu
5. Lock Now

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see “Local Tools menu password protection” on page 359.

Table 41
Local Tools menu (Part 2 of 2)

To make a selection, press the number associated with the menu item, or use the navigation keys to scroll through the menu items. Press the Enter key to select the highlighted menu item.

Press the Quit/Stop key to exit from any menu or menu item.

For information on configuring IP Phone 1120E Local Tools menu, see “Configuring the Local Tools menu” on page 579.

Supported features

The IP Phone 1120E supports the following telephony features:

- four user-defined feature keys with labels and indicators
 - four soft keys providing access to a maximum of nine features
- Note:*** Functions for the soft keys are configured in LD 11.
- high quality speaker phone
 - volume control keys for adjusting ringer, speaker, handset, and headset volume
 - six specialized feature keys:
 - Quit
 - Directory
 - Message/Inbox
 - Shift/Outbox
 - Services
 - Copy
 - six call-processing fixed keys:
 - Mute
 - Handsfree
 - Goodbye
 - Expand to PC

- Headset
- Hold
- Call Duration Timer
- ability to change the user-defined feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNiStim Firmware Download

The IP Phone 1120E supports the following data network features:

- integrated gigabit Ethernet switch for shared PC access
 - LAN Ethernet port supports 10/100/1000 Mbps Full Duplex mode
 - PC Ethernet port supports 10/100/1000 Mbps Full Duplex mode
- automatic network configuration through DHCP

For more information about automatic network configuration, see Table 43, “IP Phone 1120E IP parameters,” on page 371.

- 802.1ab Link Layer Discovery Protocol (LLDP)

For more information about LLDP, see Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- Secure Real-time Transport Protocol (SRTP) media encryption

For more information about SRTP media encryption, “Features overview” on page 493.


- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see [Appendix Appendix B:: “802.1Q VLAN description” on page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN

For more information about 802.1x port-based network access control, see [Appendix Appendix C:: “802.1x Port-based network access control” on page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 3
- Gratuitous Address Resolution Protocol (GARP) Protection

The IP Phone 1120E supports the following user interface features:

- graphical, high-resolution LCD display, backlit, with adjustable contrast
- USB port, to support USB devices

Note: Powered downstream 1.1 compliant USB hubs are supported, including USB 2.0 hubs, if they offer USB 1.1 backwards compliancy.

- Hearing Aid Compatibility (HAC) as per FCC Part 68
- wireless headset support through Bluetooth®  Bluetooth 1.2 compliant Audio Gateway Headset Profile
- External Application Server (XAS)
- Graphical External Application Server (GXAS)
- headset jack with On/Off key

- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Russian, Latvian, Turkish, and Katakana

Note: In the case of the prompts locally generated by the phone for the Local Tools menu and in all local features, the language is controlled locally by the phone. Thus the two language selection mechanisms on the phone are: one for local features, which is selected in the Local Tools menu, and another for TPS features, which is selected in the Telephone Options menu. For information about selecting the languages for local features and TPS features, see the *IP Phone 1120E User Guide*.

- Expansion Module for IP Phones 1100 Series

Features not currently supported

The following features are not supported on the IP Phone 1120E:

- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys


Display characteristics

An IP Phone 1120E has three major display areas:

- user-defined feature key label
- information line
- soft key label

Figure 31 on [page 357](#) shows these three display areas.

Figure 31
1120E IP display area

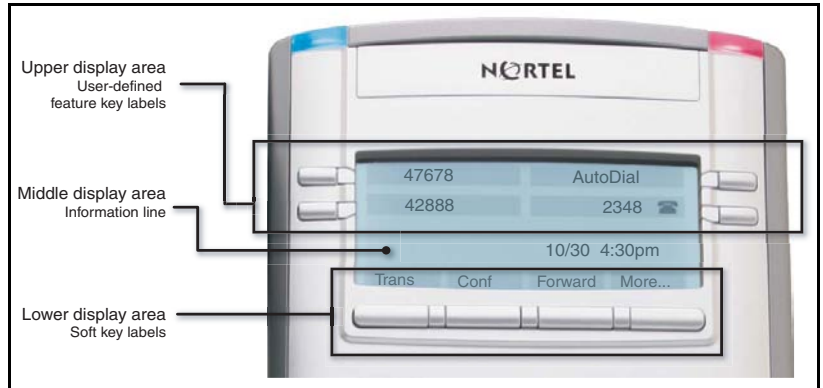

User-defined feature key label display

The feature key label area displays a 10 character string for each of the four feature keys. Each feature key includes the key label and an icon. The icon state can be on, off, or flashing. A telephone icon displays the status of the configured DN. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen. To change the feature key label, press the **Services** key to access **Telephone Options > Change Feature key label** option. For more information about changing the feature key label, see the *IP Phone 1120E User Guide*.

Note: If a label is longer than ten characters, the last ten characters are displayed and the excess characters are deleted from the beginning of the string.

Information line display

An IP Phone 1120E has a single-line information display area with the following information:

- Caller number
- Caller name
- Feature prompt strings

- User-entered digits
- Date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Because the IP Phone 1120E only has a single-line information display area, you are prompted to scroll through any additional lines of information. For example, during an incoming call, only the Directory Number (DN) appears if the caller name is greater than 10 characters. Press the flashing arrow to display the caller name.

Soft key label display

The soft key label has a maximum of seven characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the **More** soft key to navigate through the layers of functions. If only four functions are assigned to the soft keys, the **More** key does not appear and all four functions are displayed.

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Local Tools menu password protection

If the SECUREMENU parameter was set during Full DHCP configuration, the Local Tools menu is locked to prevent accidental or unwanted changes. You are prompted to enter the fixed password 26567*738 (color*set) whenever the Services key is double-pressed, or whenever the Local Diagnostics and Network Configuration sub menus are accessed.

If the PARTSECURE parameter was set during Full DHCP configuration, you are prompted to enter the fixed password whenever you access 2. Local Diagnostics, or 3. Network Configuration menu items from the Local Tools menu. You are always prompted to enter the fixed password whenever you access the 4. Lock Menu sub menu.

Two ways to control the menu lock are as follows:

- DHCP Secure Menu option—the IP Phone processes the secure menu setting retrieved from the Full DHCP response.
- Lock Menu option—double-press the Services key to access the Local Tools menu. Press **4** on the dialpad to access the Lock Menu items, or use the up/down navigation keys to scroll and highlight one of the following Lock Menu options:
 - 1. Manual Secure Local Menu
 - 2. Manual Partial Secure Menu
 - 3. Manual Disable Secure Menu

- 4. DHCP Secure Menu
- 5. Lock Now

The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

For more information about 4. Lock Menu manual user settings, see Appendix Appendix F: “Configuring the Local Tools menu” on [page 579](#).

Configuring Secure Local Menu through Full DHCP

Password protection is enabled during Full DHCP configuration if the SECUREMENU parameter, or the PARTSECURE parameter are present at the end of the S4 part of the Full DHCP string. If neither the SECUREMENU parameter, nor the PARTSECURE parameter is present, password protection is not enabled.

The SECUREMENU/PARTSECURE item is an optional parameter. If it is present, then the full S4 string needs to be present, including the action and retries. The S4 string will already be present if the XAS support has been configured through the DHCP. If XAS is not configured, you can still enable password protection by setting the S4 IP address to 0.0.0.0 and by setting the other fields to 0.

IMPORTANT!

With Full DHCP, the vendor-specific or site-specific options must be configured depending on the customers DHCP server configuration.

For further information on configuring Full DHCP, see *Data Networking for Voice over IP* (553-3001-160).

Accessing the Local Tools menu

Once the password is entered, the Local Tools menu remains active for 5 minutes. You can freely navigate, exit and reenter the Local Tools menu

without being prompted to reenter the password. To reset the timer before the 5 minute time expires, double-press the Services key.

You can also press the 5 key to select the Lock Now item from the Lock Menu. The Lock Now item immediately exits the Local Tools menu, closes any open Local Tools menu pages, and locks the Local Tools menu. Alternatively, when time expires, the Local Tools menu and any open submenus are closed. Double-press the Services key to open the password prompt window to reaccess the Local Tools menu.

If you enter an incorrect password, the Local Tools menu will not open. Double-press the Services key to open the password prompt window. Only three incorrect password entries are allowed. Any entry after the three attempts is ignored for 5 minutes. The password prompt window is visible and you can reenter the password but the password is not processed until the 5 minute time expires.

Note: Some text appears dimmed depending on the current state of the menu lock and the configuration of the IP Phone. Only configuration options which are enabled from the current state appear active. Menu options that are not available appear dimmed.

For more information about configuring the Local Tools menu for the IP Phone 1120E, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Key number assignments

You can assign a maximum of nine functions to the four soft-labeled, predefined soft keys. Because the soft keys are predefined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message Waiting key is numbered 16.

Functions mapped to key numbers 17 to 26 are assigned to the four soft keys. Labels for the soft keys appear in the display area. For further information, see “Soft key label display” on page 358. Figure 31 on [page 357](#) shows the IP Phone 1120E display area.

Key number mappings at the Call Server are aligned with that of the IP Phone 2002.

For a description of the IP Phone function assignment for each of the soft keys, see Appendix Appendix I:: “IP Phone soft keys” on [page 619](#).

Package components

The IP Phone 1120E includes integrated support for a number of Power over Ethernet options, including support for IEEE 802.3af Power Classification 3.

Table 42 lists the IP Phone 1120E package components and product codes.

Table 42
IP Phone 1120E components list (Part 1 of 2)

| | |
|---|------------|
| IP Phone 1120E package contents include: <ul style="list-style-type: none"> • IP Phone 1120E • handset • handset cord • 2.1 m (7 ft.) CAT5 Ethernet cable • Number plate and lens • Getting Started Card | |
| Non-RoHS | |
| IP Phone 1120E with icon key caps (Graphite) | NTYS03AC |
| IP Phone 1120E with English key caps (Graphite) | NTYS03BC |
| IP Phone 1120E with icon key caps (Graphite) (RoHS) | NTYS03ACE6 |
| IP Phone 1120E with English key caps (Graphite) (RoHS) | NTYS03BCE6 |
| Replacement parts | |
| Handset, Charcoal | NTYS09AA70 |
| Handset cord, Charcoal | NTYS10AA70 |
| Footstand kit, Charcoal | NTYS11AA70 |

Table 42
IP Phone 1120E components list (Part 2 of 2)

| | | |
|---|-------------|-----------------|
| Phone number label and lens kit | | NTYS12AA |
| 2.1 m (7 ft) CAT5 Ethernet cable | | NTYS13AA |
| Power adapter | | |
| Global power supply (for local power) | | N0089601 |
| IEC cables | RoHS | Non-RoHS |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 North America | NTYS14AAE6 | NTYS14AA |
| 2.4 m (8 ft), 240 VAC 10 amp, ANZ power cord AS-3, Australia, New Zealand | N/A | NTTK15AA |
| 250 VAC, Option 11C Standard European power cord, Other EMEA, Kenya, Korea, Thailand, Indonesia, Vietnam, India, Pakistan | NTTK16ABE6 | NTTK16AB |
| 3 m (9.9 ft) 125 VAC, Option 11C Swiss power cord Switzerland | NTTK17ABE6 | NTTK17AB |
| 240 VAC, Option 11C UK power cord Hong Kong, Ireland, United Kingdom, Singapore, Malaysia, Bangladesh, Brunei, Sri Lanka | NTTK18ABE6 | NTTK18AB |
| 3 m (9.9 ft), 125 VAC, Option 11C Denmark power cord Denmark | NTTK22ABE6 | NTTK22AB |
| Argentina | N/A | A0814961 |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 Japan | NTTK26AAE6 | N/A |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 1120E installation and configuration process:

- Before you begin
- First-time installation

- Configuring the IP Phone 1120E
- Startup sequence
- Installing the IP Phone 1120E

Before you begin

Before installing the IP Phone 1120E, complete the following pre-installation checklist:

- Ensure there is one IP Phone 1120E boxed package for each IP Phone 1120E being installed. The package contains:
 - IP Phone 1120E
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Number plate and lens
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 1120E being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the approved Nortel global power supply (model # N0089601) is used. See Table 42, “IP Phone 1120E components list,” on page 362.

First-time installation

You must first install an IP telephony node with the Communication Server. For information about installing an IP telephony node, see *Signaling Server*:

Installation and Configuration (553-3001-212), or IP Line: Description, Installation, and Operation (553-3001-365).

**CAUTION****Damage to Equipment**

Do not plug your IP Phone 1120E into an ISDN connection. Severe damage can result. The IP Phone 1120E does not support multiple devices connected through the PC Ethernet port.

Configuring the IP Phone 1120E

You must configure the IP Phone 1120E before you can use it. Use Procedure 65 on [page 365](#) to configure the IP Phone 1120E for the first time.

Procedure 65**Configuring the IP Phone 1120E**

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation (553-3001-365)*, and *Software Input/Output: Administration (553-3001-311)*.

- 2 Configure the IP Phone 1120E on the Call Server as IP Phone 2002 using LD 11. At the prompt, enter the following:


```
REQ:chg  
TYPE:i2002
```

For more information, see *Software Input/Output: Administration (553-3001-311)*.

**CAUTION**


The IP Phone 1120E is shipped with the stand locked in position. To avoid damaging the IP Phone, press the wall-mount lever located under the Handsfree key to release the stand and pull it away from the phone. See Figure 32 on [page 366](#).

Figure 32
Release the IP Phone 1120E from the stand

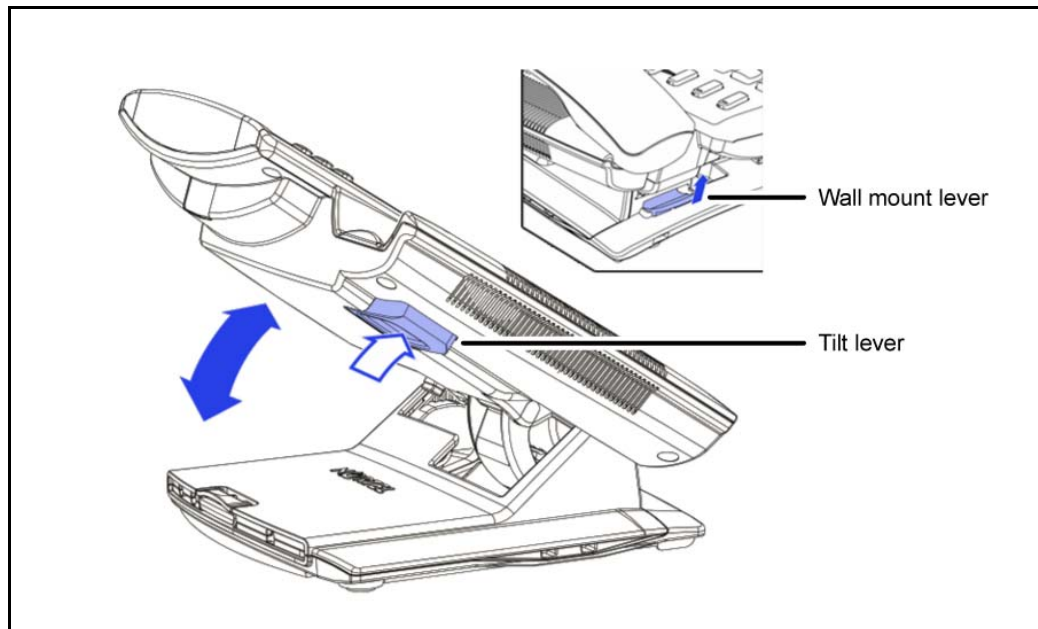

- 3** Remove the stand cover. Pull upward on the center catch and remove the stand cover. The cable routing tracks are now accessible. See Figure 33 on [page 367](#).

Figure 33
Stand cover removed

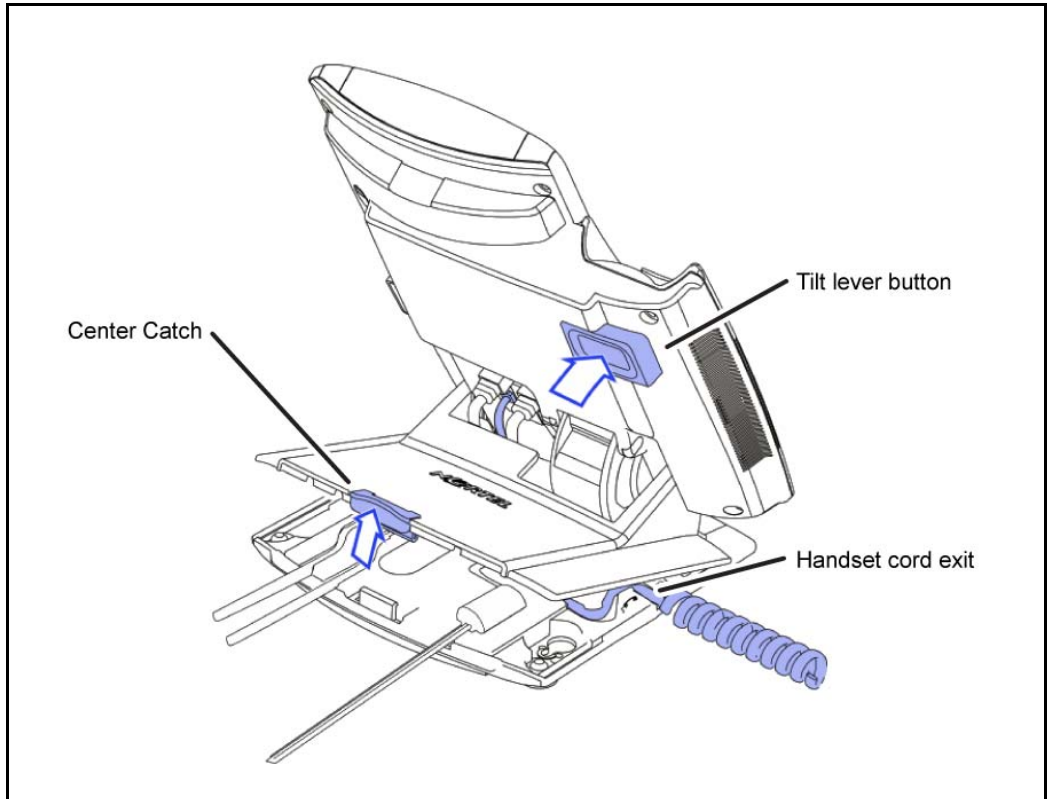

- 4 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable, and then thread the adapter cord through the channels in the stand. See Figure 34 on [page 368](#).


WARNING

Use your IP Phone 1120E with the approved Nortel global power supply (model # N0089601).

Note 1: The IP Phone 1120E supports both AC power and Power over LAN options, including IEEE 802.3af Power Classification 3. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.


Note 2: You must use CAT5e (or later) cables if you want to use gigabit Ethernet. Figure 34 shows the IP Phone 1120E connections.

Figure 34
IP Phone 1120E connections

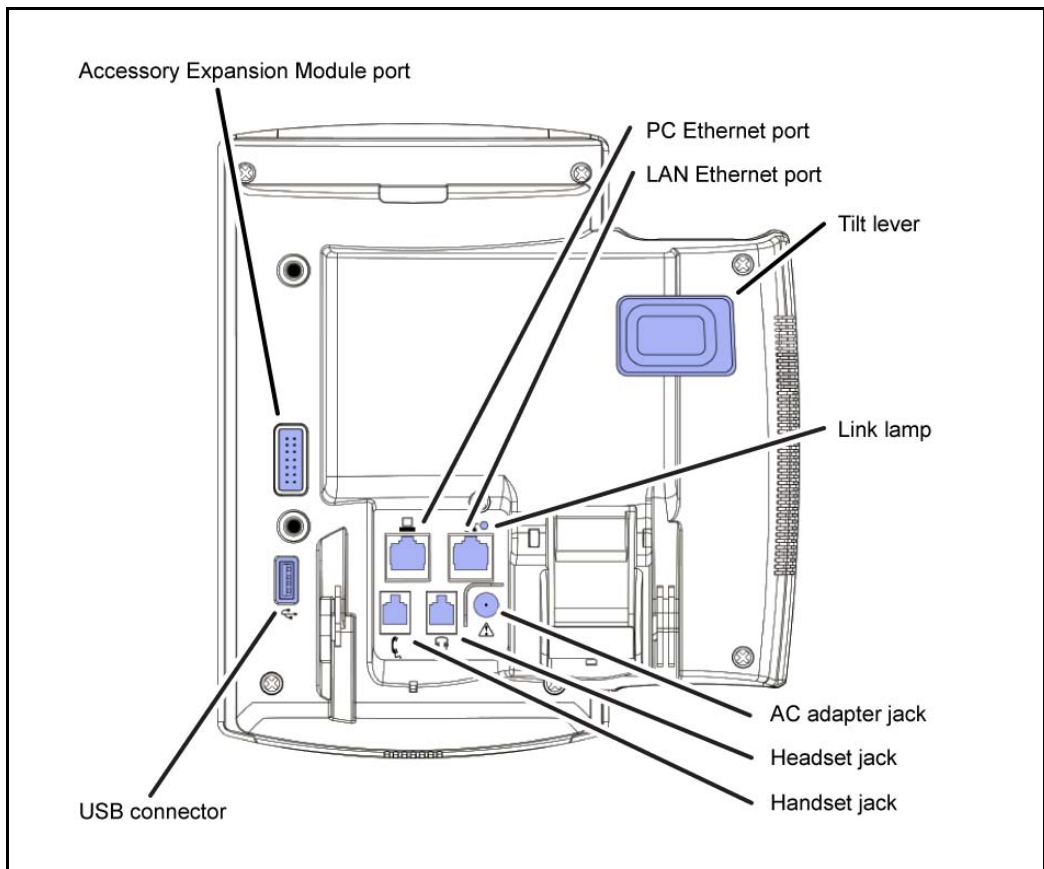

- 5 Install the handset. Connect the end of the handset cable with the short straight section into the handset. Connect the end of the handset cable with the long straight section to the back of the phone, using the RJ-9 handset jack marked with the symbol +. Form a small bend in the cable, and then thread the handset cord through the channels in the stand so that it exits behind the handset on the right side, in the channel exit in the stand base marked with the symbol +. See Figure 35.

Figure 35
Cable routing tracks

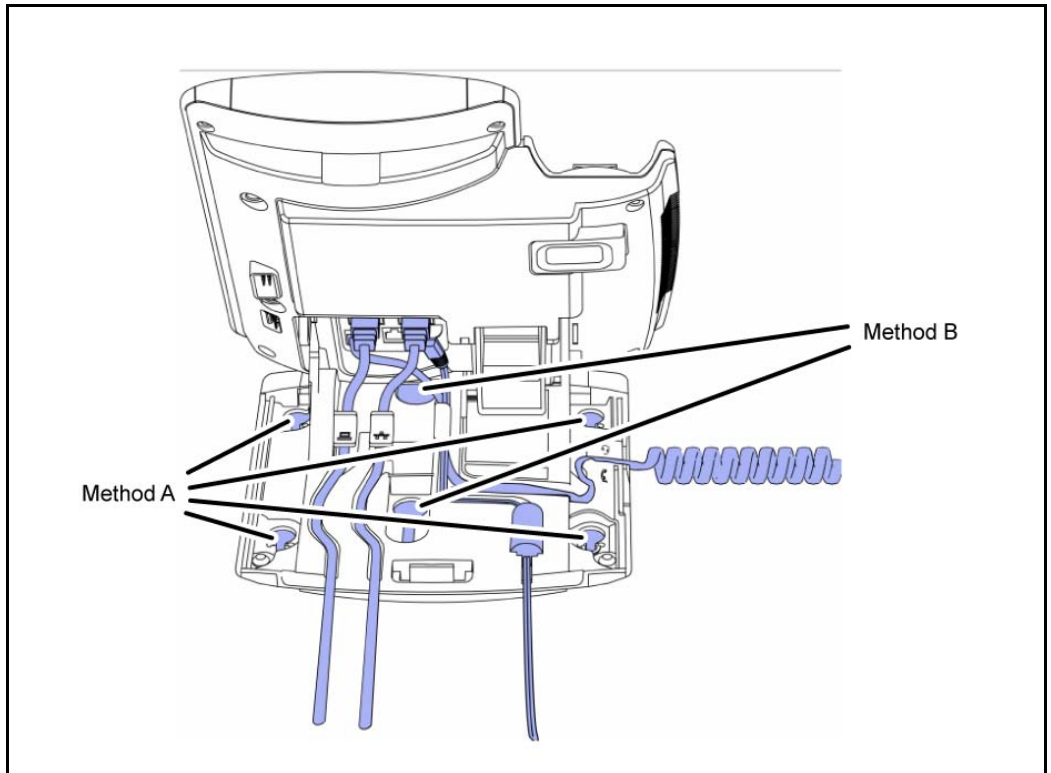

- 6 Install the Ethernet cable. Connect one end of the supplied Ethernet cable to the back of your phone using the RJ-45 connect marked with the symbol %, and thread the network cable through the channel marked with the symbol %.

- 7 If you are connecting your PC through the phone, you will require a second CAT5 cable. Only one cable is included with the IP Phone 1120E package. Install the Ethernet cable connecting the PC to the phone (optional). Connect one end of the PC Ethernet cable to your phone using the RJ-45 connector marked with the symbol (), and thread it through the channel marked with the symbol (). Connect the other end to the LAN connector on the back of your PC.



CAUTION

Damage to Equipment

Do not plug any device into your IP Phone 1120E PC Ethernet port other than a PC.

- 8 Install additional cables. If applicable, plug in optional USB devices. Connect the Ethernet cable to the LAN Ethernet connection. If you are using an AC power adapter, plug the adapter into an AC outlet.
- Note:** Complete steps 1-9, as needed, before wall-mounting the IP Phone.
- 9 Wall-mount your phone (optional). Use Method A or Method B to wall-mount the IP Phone. See Method A—using the mounting holes on the bottom of the phone stand, or Method B—using the traditional-style wall-mount box with a RJ-45 connector and a 15 cm (6 inch) RJ-45 cord (not provided).
- Method A: Press the wall-mount lever, and pull away from the stand. Using the stand cover (see step 3 on [page 366](#)), mark the wall-mount holes by pressing the bottom of the stand cover firmly against the wall in the location where you wish to install the phone. Four small pins on the bottom of the stand cover make the marks on the wall. Use the marks as a guideline for installing the wall-mount screws (not provided).

Install the screws so that they protrude 3 mm (1/8 inch) from the wall, and then install the phone stand mounting holes over the screw heads. You may need to remove the phone from the wall to adjust the lower screws. When the lower screws are snug, install the phone on the mounting screws, and then tighten the top screws.
 - Method B: Attach the 15 cm (6 inch) CAT5e cable, position the stand over the mounting rivets, and slide the phone down the wall so that the rivets fit into the slots on the stand.

- 10 Replace the stand cover. Ensure that all cables are neatly routed and press the stand cover into place until you hear a click.
- 11 Put the phone in the wall-mount position (optional). If you wall-mount the phone, put it in the wall-mount position by holding the Tilt Lever and press the phone towards the base until the phone is parallel with the base. Release the Tilt Lever and continue to push the phone towards the base until you have an audible click. Ensure the phone is securely locked in to position.

Startup sequence

When an IP Phone 1120E is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 43 for a summary of the IP parameters and how they are obtained.

Table 43
IP Phone 1120E IP parameters (Part 1 of 2)

| Parameter | Method of acquisition |
|-------------------------|--|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically obtained through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically obtained through Partial or Full DHCP. |
| Default Gateway Address | Manually entered or automatically obtained through Partial or Full DHCP. |

Table 43
IP Phone 1120E IP parameters (Part 2 of 2)

| Parameter | Method of acquisition |
|---|--|
| Connect Server (IP address, port, action and retry count—primary and secondary) | Manually entered or automatically obtained through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Obtained from local storage on subsequent power cycles. |

Installing the IP Phone 1120E

To install the IP Phone 1120E, use Procedure 66, “Configuring the IP Phone 1120E” on page 365.

Procedure 66

Installing the IP Phone 1120E

IMPORTANT!

Timing information

There are approximately 45 seconds (s) between plugging in the IP Phone 1120E power adapter and the appearance of the text Nortel. When you see the text Nortel on the phone, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 1120E attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the Local diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see "Local Tools menu password protection" on page 359.

- 1 When the Nortel logo appears in the middle of the display, immediately press the four soft keys at the bottom of the display in sequence from left to right. The **3. Network Configuration** menu opens.

Note: You can press the **Apply&Reset** soft key to save the following settings and to reset the IP Phone. You can press the **Exit** soft key exit the menu to exit the menu without saving any changes and return to the **3. Network Configuration** menu.

When the **3. Network Configuration** menu opens, the **Enable 802.1x (EAP)** check box is highlighted.

- 2 Press the **Enter** key to toggle this item on and off. A check mark appears to indicate the item is active.

If 802.1x Authentication is enabled, press the **Enter** key to start the edit mode. Use the keypad to fill in the following information:

- Device ID
- Password
- Retype password

For further information about EAP, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Note: If you do not enable 802.1x Authentication, you are not prompted to enter Device ID and Password.

- 3 Use the **Right** navigation key to scroll and highlight **Enable 802.1x (LLDP Enable)** check box. Press the **Enter** key to toggle this item on and off.

For information about LLDP, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 4 Use the **Right** navigation key to scroll and highlight **DHCP** combo box.

- 5 Press the **Enter** key.

- 6 Press the **Down** navigation key to open list box.

- 7 following DHCP options:

- No—disable DHCP support and enter IP network information manually.
- Partial—IP network information (IP address, network mask, and gateway address) are provided by the DHCP server. Enter Server 1 IP address, Server 2 IP address, Port, Action, Retry, and PK numbers manually.
- Full—IP network information, Server 1 IP address, Server 2 IP address, and XAS information are provided by the DHCP server. All items are dimmed to prevent manual entry.

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 8 Press the **Enter** key.
- 9 Use the **Right** navigation key to scroll and highlight **SET IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.
Set IP—a valid IP Phone 1120E IP address.

- 10 Use the **Right** navigation key to scroll and highlight **NET MASK**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Net Mask—a subnet mask

- 11 Use the **Right** navigation key to scroll and highlight **Gateway**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Gateway—the default gateway for the IP Phone 1120E on the LAN segment to which it is connected

- 12 Use the **Right** navigation key to scroll and highlight **S1 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S1 IP—the primary CS 1000 node IP address for the IP Phone 1120E

- 13 Use the **Right** navigation key to scroll and highlight **Port**.

S1 Port—a fixed value of 4100

- 14 Use the **Right** navigation key to scroll and highlight **S1 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 15 Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—the number of times the IP Phone 1120E attempts to connect to the server

- 16 Use the **Right** navigation key to scroll and highlight **S1 PK**.

S1 PK—the Private key of the Secure Media Controller to which the IP Phone is connected

- 17 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Enter 6 or 1.

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 18 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffffff.

- 19 Use the **Right** navigation key to scroll and highlight **S2 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S2 IP—the secondary CS 1000 node IP address for the IP Phone 1120E

Note: The IP Phone 1120E can support a primary (S1) and secondary (S1) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

- 20** Use the **Right** navigation key to scroll and highlight **Port**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Port—same as S1 port

- 21** Use the **Right** navigation key to scroll and highlight **S2 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 22** Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—same as S1

- 23** Use the **Right** navigation key to scroll and highlight **S2 PK**.

S2 PK—the Private key of the alternate Secure Media Controller to which the IP Phone is connected

- 24** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Set the S2 PK to 6 or 1.
- 25** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffffff.
- 26** Use the **Right** navigation key to scroll and highlight **VoiceVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

27 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- DHCP—VLAN ID is configured automatically to one of the values received from the DHCP server
- LLDP MED—VLAN ID is configured automatically to the value received from 802.1ab LLDP.
- LLDP VLAN Name—VLAN ID is configured automatically to the value received from 802.1ab LLDP.

Note: If LLDP is disabled, LLDP MED and LLDP VLAN Name modes do not appear in the list. If DHCP is disabled, DHCP does not appear in the list.

28 Press the **Enter** key.

For more information about VLAN configuration, see *Data Networking for Voice over IP* (553-3001-160).

29 Use the **Right** navigation key to scroll and highlight **VLAN Filter** check box. Press the **Enter** key to toggle this item on and off.

If the VLAN Filter is enabled, packets destined for the IP Phone port are filtered on their MAC address and their VLAN tag. Untagged VLAN packets and tagged VLAN packets that differ from the Telephony VLAN ID are prevented from reaching the IP Phone port.

For information about VLAN tagging, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#).

Note: The **VLAN Filter** check box will appear dimmed if you select **No** in the **VoiceVLAN** combo box.

30 Use the **Right** navigation key to scroll and highlight **Disable PC Port** check box. Press the **Enter** key to toggle this item on and off.

31 Use the **Right** navigation key to scroll and highlight **DataVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

32 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- LLDP VLAN Name—VLAN ID is configured automatically to the value received in the VLAN NAME TLV
- VLAN ID value—manual selection of VLAN ID between 1 and 4094

Note: If LLDP is disabled, LLDP VLAN Name does not appear in the list.

33 Press the **Enter** key.

34 Use the **Right** navigation key to scroll and highlight **PC-Port Untag All** check box. Press the **Enter** key to toggle this item on and off.

If DATA VLAN is enabled, the tag on all traffic destined for the PC port is stripped, by default. To override this action, deselect the PC-Port Untag All check box. If DATA VLAN is disabled, the tag on all traffic destined for the PC port is not stripped. To override this action, select the PC-Port Untag All check box.

For information about PC port tag stripping, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#).

35 Use the **Right** navigation key to scroll and highlight **Duplex** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

- Auto—Link speed is auto negotiated with the network device and attached PC
- 10BT Full—Link speed is available for up to 10 Megabit Full Duplex on the network and the PC port.
- 100BT Full—Link speed is available for up to 100 Megabit Full Duplex on the network and the PC port.
- 1000BT Full—Link speed is available for up to 1000 Megabit Full Duplex on the network and the PC port.

For more information about Full Duplex, see “Full Duplex mode” on page 380.

36 Use the **Right** navigation key to scroll to **Enable PSK SRTP**: Select **Yes** to enable SRTP media encryption or select **No** to disable media encryption.

The SRTP media encryption feature provides encrypted media. A preshared secret is embedded in the Nortel IP Phone to generate and to exchange encryption parameters without any Call Server involvement.

For further information about the SRTP media encryption feature, see “SRTP media encryption” on page 498 and *System Security Management (NN43001-604)*.

- 37** Use the **Right** navigation key to scroll and highlight **Ignore GARP** check box. Press the **Enter** key to toggle this item on and off.

The GARP feature protects the IP Phone from a Gratuitous ARP Spoof attack from the network.

For more information about GARP, see “Gratuitous Address Resolution Protocol Protection” on page 383.

- 38** If an External Application Server (XAS) is available in the network, use the **Right** navigation key to scroll and highlight the **XAS IP** combo box. Use the dialpad to enter the XAS IP address.

The XAS delivers business applications to the IP Phone. For more information about XAS, see Nortel Application Gateway 1000 documentation.

- 39** If the XAS supports graphical displays, use the **Right** navigation key to scroll and highlight **Graphical XAS** check box. Press the **Enter** key to toggle this item on and off.

- 40** Use the **Right** navigation key to scroll and highlight **Port** combo box. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

- 41** Upgrade the IP Phone 1120E firmware.

The IP Phone 1120E supports remote firmware upgrades through a TFTP process and an automated UFTP process.

The method to upgrade the firmware depends on the following Call Server software:

- For Succession Release 3.0 or CS 1000 Release 4.0, the TFTP Server is required to download the current firmware. Enter the TFTP Server IP address at the prompt.
- For CS 1000 Release 4.5 and later, use either a TFTP Server to upgrade the firmware (at the prompt accept the default entry of 0.0.0.0), or UFTP to download the current firmware.

For further information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

For Succession Release 3.0 or CS 1000 Release 4.0, the IP Phone 1120E searches for the TFTP Server for firmware upgrade. If the file name specified in 1120e.cfg is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone 1120E reboots.

Note: The Enhanced UNISTim firmware download is only supported on CS 1000 Release 4.5 or later. The Enhanced UNISTim firmware download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 1120E searches for the connect server. When the connection is complete, proceed with step 42.

The IP Phone 1120E registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When download is complete, the IP Phone 1120E resets.

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 42 Check for dial tone and the correct DN on the display.
- 43 (Optional) Customize the feature keys as required. For more information, see *IP Phone 1120E User Guide (NN43112-103)*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 67 to enable Full Duplex mode.

Procedure 67
Enabling Full Duplex mode

- 1 Double-press the **Services** key to open the **Local Tools** menu.
- 2 Press **3** on the dialpad to access the **Network Configuration** menu or use the Up/Down navigation keys to scroll and highlight the Network Configuration option.
- 3 Use the **Right** navigation key to scroll and highlight the **Duplex** combo box.
- 4 Press **Enter** to start the edit mode.
- 5 Press the **Down** navigation key to open list box.
- 6 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:
 - 10BT Full—10 BT Full Duplex mode
 - 100BT Full—100 BT Full Duplex mode
- 7 Press **Enter** to exit the edit mode.

- 8 Press the **Apply&Reset** soft key to save the changes and to restart the IP Phone 1120E. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 68 to confirm activation of Full Duplex mode.

Procedure 68

Checking Ethernet Statistics

- 1 Double-press the **Services** key.
- 2 Press **2** to select **Local Diagnostics**, then press **3** to open the **Ethernet Statistics** menu.

If Full Duplex mode is active, the following is displayed:

- Link Status: UP
- Duplex Mode: Full
- Network Speed: 10 Mb, 100 Mb or 1G
- Auto Sense/Negotiate
 - Auto-Negotiate Capability: No
 - Auto-Negotiate Completed: No

End of Procedure

TFTP firmware upgrade

When you enter Cfg TFTP = 1 (for yes), and enter an IP address, the phone searches for an upgrade file on the TFTP Server.

Note: Users of CS 1000 Release 4.5 or later do not need to enter a TFTP IP address.

For further information about TFTP firmware upgrade, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

Gratuitous Address Resolution Protocol Protection

Gratuitous Address Resolution Protocol (GARP) Protection protects the IP Phone 1120E from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim’s machine. This allows the malicious device to launch a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim’s machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 65, “Configuring the IP Phone 1120E” on page 365.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Reinstalling an IP Phone 1120E

You can reinstall an existing previously configured IP Phone 1120E on the same Call Server. For example, the IP Phone 1120E can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 1120E.

Procedure 69
Changing the TN of an existing IP Phone 1120E

- 1 Repower the IP Phone 1120E.

 Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 1120E displays the existing node number for approximately 5 seconds.
- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |

- 4 Enter the password at the password screen and press **OK**.
 A TN screen displays.

 Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).
- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 1120E

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 1120E that is currently using the TN.

Procedure 70 Replacing an IP Phone 1120E

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 1120E that you want to replace.
- 3 Follow Procedure 65 on [page 365](#) to install and configure the IP Phone 1120E.
- 4 Enter the same TN and Node Number as the IP Phone 1120E you replaced. The Call Server associates the new IP Phone 1120E with the existing TN.

End of Procedure

Removing an IP Phone 1120E from service

Procedure 71 Removing an IP Phone 1120E from service

- 1 Disconnect the IP Phone 1120E from the network or turn off the power.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 1120E.

If the IP Phone 1120E was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 1140E

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 388 |
| Description | 388 |
| Components and functions | 389 |
| Supported features | 395 |
| Features not currently supported | 399 |
| Display characteristics | 400 |
| Local Tools menu password protection | 402 |
| Key number assignments | 404 |
| Package components | 405 |
| Installation and Configuration | 406 |
| Full Duplex mode | 424 |
| TFTP firmware upgrade | 426 |
| Gratuitous Address Resolution Protocol Protection | 426 |
| Extensible Authentication Protocol | 426 |
| Bluetooth wireless technology | 426 |
| Reinstalling an IP Phone 1140E | 427 |
| Replacing an IP Phone 1140E | 428 |
| Removing an IP Phone 1140E from service | 428 |

Introduction

This section explains how to install and maintain the IP Phone 1140E. For information on using the IP Phone 140E, see the *IP Phone 1140E User Guide*.

This section contains the following procedures:

- Procedure 72, “Configuring the IP Phone 1140E” on page 408.
- Procedure 72, “Configuring the IP Phone 1140E” on page 408.
- Procedure 74, “Enabling Full Duplex mode” on page 424.
- Procedure 75, “Checking Ethernet Statistics” on page 425.
- Procedure 76, “Changing the TN of an existing IP Phone 1140E” on page 427.
- Procedure 77, “Replacing an IP Phone 1140E” on page 428.
- Procedure 78, “Removing an IP Phone 1140E from service” on page 428.

Note: After an IP Phone is has been installed and configured, if power to the phone is interrupted, it is not necessary to reenter IP parameters, Node Number, TN, nor firmware again.

Description

The IP Phone 1140E uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 1140E translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 1140E network connection, and connection to the Communication Server 1000.

Figure 36 on [page 389](#) shows the IP Phone 1140E.

Figure 36
IP Phone 1140E



Components and functions

This section describes the following components of the IP Phone 1140E:

- Keys and functions
- Services menu
- Local Tools menu

Keys and functions

Table 44 lists keys and functions for the IP Phone 1140E.

Table 44
IP Phone 1140E keys and functions (Part 1 of 3)

| Key | Function |
|--|--|
| Hold | Press the Hold key to put an active call on hold. Press the line (DN) key beside the flashing LCD to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Visual Alerter/Message waiting indicator | When a message is waiting, the red Visual Alerter/Message waiting indicator lights. Also, when the ringer sounds, this indicator flashes. |
| Feature Status Lamp indicator | When the firmware is updating, the blue Feature Status Lamp indicator flashes. Note: This function requires server support and, therefore, is not available on all phones. |
| User-defined feature keys labels | User-defined feature key labels are configured for various features on the IP Phones. A steady LCD light beside a line (DN) key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed. |
| Soft keys | Soft keys are located below the display area. The LCD label above the key changes, based on the active feature. Note: A triangle before a key label indicates that the key is active. |
| Fixed feature keys | Use these keys to access non-programmable standard features. |
| Expand to PC | The Expand to PC key is used to access external server applications such as External Application Server. |

Table 44
IP Phone 1140E keys and functions (Part 2 of 3)

| Key | Function |
|-----------------|--|
| Navigation keys | <p>Use the Navigation keys to scroll through menus and lists appearing on the LCD display screen. The outer part of this key cluster rocks for up, down, left, and right movements.</p> <p>Use Up and Down keys to scroll up and down in lists, and the Left and Right keys to position the cursor. You can also use the Left and Right keys to select editable fields that appear on the phone. Press the Right key to select the field below the current position, or press the Left key to select the field above the current position.</p> |
| Enter | Press the Enter key, at the center of the Navigation key cluster, to confirm menu selections. In many cases, you can use the Enter key instead of the Select soft key. |
| Message/Inbox | Press the Message/Inbox key to access your voicemail box. |
| Shift/Outbox | The Shift/Outbox key is a fixed key that is reserved for future feature development. |
| Quit/Stop | <p>Press the Quit/Stop key to end an active application.</p> <p>Pressing the Quit/Stop key does not affect the status of the calls currently on your IP Phone.</p> |
| Directory | Press the Directory key to access Directory services. |
| Mute | <p>Press the Mute key to listen to the receiving party without transmitting.</p> <p>Press the Mute key again to return to a two-way conversation.</p> <p>The Mute key applies to Handsfree, Handset, and Headset microphones.</p> <p>The Mute LED flashes when the Mute option is in use.</p> |

Table 44
IP Phone 1140E keys and functions (Part 3 of 3)

| Key | Function |
|---------------------|---|
| Headset | <p>Press the Headset key to answer a call using the headset or to switch a call from the handset or Handsfree to the headset.</p> <p>Press the Headset key twice to access Bluetooth Setup menu. If Bluetooth wireless technology is not enabled, this menu is not available.</p> |
| Volume control keys | <p>Use the Volume control keys to adjust the volume of the handset, headset, speaker, ringer, and Handsfree feature.</p> <p>Press the volume key with the loudspeaker icon to increase volume; press the volume key without the loudspeaker icon to decrease volume.</p> |
| Copy | <p>Press the Copy Key to copy entries to your Personal Directory from other lists, such as the Caller List, Redial List and Corporate Directory.</p> |
| Speaker | <p>Press the Handsfree key to activate the speaker.</p> |
| Handsfree key | <p>Press the Handsfree key to activate handsfree.</p> <p>The LED lights to indicate when the handsfree feature is active.</p> |

Services menu

Table 45 shows the Services menu.

Table 45
Services menu

| | |
|----------|---|
| Services | <p>Press the Services key to access the following items:</p> <ul style="list-style-type: none">• Telephone Options (see Notes 1 and 2):<ul style="list-style-type: none">— Volume Adjustment— Contrast Adjustment— Language— Date/Time— Display diagnostics— Local Dialpad Tone— Set Info— Diagnostics— Call Log Options— Ring type— Call Timer— OnHook Default Path— Change Feature Key Label— Name Display Format• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured)• Password Admin |
|----------|---|

Note 1: If a call is presented while the user is manipulating an option, the IP Phone 1140E rings and the DN key flashes. However, the screen display is not updated with Caller ID information. The programming text is not disturbed.

Note 2: The user can originate a call using Autodial or Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or the Caller ID, and Autodial and Last Number Redial intercept the dialpad.

Local Tools menu

Table 46 shows the Local Tools menu.

Table 46
Local Tools menu

Press the Services key twice to access the Local Tools menu. The following items appear in the Local Tools menu:

1. Preferences
 1. Display Settings
 2. Languages...
 3. Bluetooth Setup
2. Local Diagnostics
 1. IP Set&DHCP Information
 2. Network Diagnostic Tools
 3. Ethernet Statistics
 4. IP Network Statistics
 5. USB Devices
3. Network Configuration

Table 46
Local Tools menu

| |
|--|
| <p>4. Lock Menu</p> <ol style="list-style-type: none"> 1. Manual Secure Local Menu 2. Manual Partial Secure Menu 3. Manual Disable Secure Menu 4. DHCP Secure Menu <p>5. Lock Now</p> <p>Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see “Local Tools menu password protection” on page 402.</p> <p>To make a selection, press the number associated with the menu item, or use the navigation keys to scroll through the menu items. Press the Enter key to select the highlighted menu item.</p> <p>Press the Quit/Stop key to exit from any menu or menu item.</p> <p>For information on configuring IP Phone 1140E Local Tools menu, see “Configuring the Local Tools menu” on page 579</p> |
|--|

Supported features

The IP Phone 1140E supports the following telephony features:

- six user-defined feature keys with labels and indicators
Note: Supports up to twelve DN's or features on 2 pages. Use the Shift/Outbox key to access the second page of DN's or features.
- four soft keys providing access to a maximum of nine features
Note: Functions for the soft keys are configured in LD 11.
- high quality speaker phone
- volume control keys for adjusting ringer, speaker, handset, and headset volume
- six specialized feature keys:

- Quit/Stop
- Directory
- Message/Inbox
- Shift/Outbox
- Services
- Copy
- six call-processing fixed keys:
 - Mute
 - Handsfree
 - Goodbye
 - Expand to PC
 - Headset
 - Hold
- Call Duration Timer
- ability to change user-defined feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 1140E supports the following Data network features:


- integrated gigabit Ethernet switch for shared PC access

- LAN Ethernet port supports 10/100/1000 Mbps Full Duplex mode
- PC Ethernet port supports 10/100/1000 Mbps Full Duplex mode

- automatic network configuration through DHCP
For more information about automatic network configuration, see Table 48, “IP Phone 1140E IP parameters,” on page 414.
 - 802.1ab Link Layer Discovery Protocol (LLDP)
For more information about LLDP, Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).
 - Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, “Features overview” on page 493.
 - 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
 - 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
 - integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 3
 - Gratuitous Address Resolution Protocol Protection (GARP)
- The IP Phone 1140E supports the following user interface features:
- graphical, high-resolution LCD display, backlit, with adjustable contrast

- USB port, to support USB devices

Note: Powered downstream 1.1 compliant USB hubs are supported, including USB 2.0 hubs, if they offer USB 1.1 backwards compliancy.

- Hearing Aid Compatibility (HAC) as per FCC Part 68
- wireless headset support through Bluetooth®  Bluetooth 1.2 compliant Audio Gateway Headset Profile
- External Application Server (XAS)
- Graphical External Application Server (GXAS)
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Russian, Latvian, Turkish, and Katakana
- headset jack with On/Off key

Note: In the case of the prompts locally generated by the phone for the Local Tools menu and in all local features, the language is controlled locally by the phone. Thus the two language selection mechanisms on the phone are: one for local features, which is selected in the Local Tools menu, and another for TPS features, which is selected in the Telephone Options menu. For information about selecting the languages for local features and TPS features, see the *IP Phone 1140E User Guide*.

- Expansion Module for IP Phones 1100 Series

Features not currently supported

The following features are not supported on the IP Phone 1140E:

- Live Dialpad
- Group Listening
- Set-to-Set messaging
- Context-sensitive soft keys


Display characteristics

The IP Phone 1140E has three major display areas:

- user-defined feature key label
- information line
- soft key label

Figure 37 on [page 400](#) shows these three display areas.

Figure 37
IP Phone 1140E display area

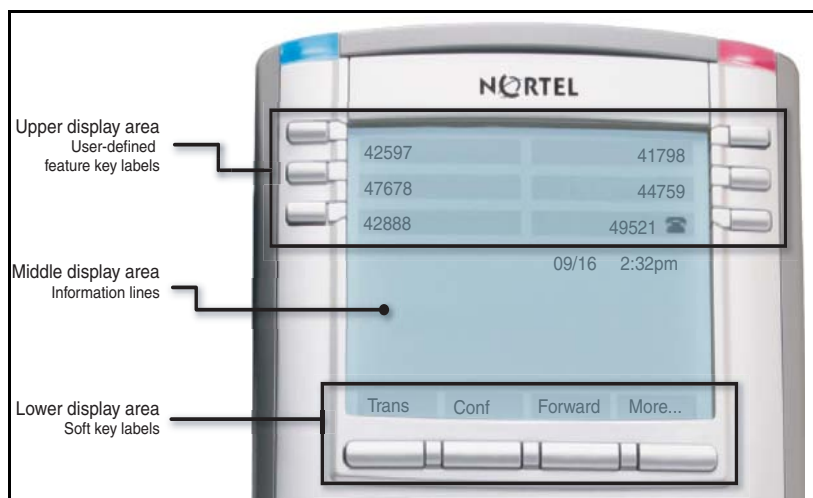

User-defined feature key label display

The feature key label area displays a 10-character string for each of the six feature keys. Each feature key includes the key label and an icon. The icon state can be on, off, or flashing. A telephone icon displays the status of the configured DN. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen. To change the feature key label, press the **Services** key to access **Telephone Options > Change Feature key label** option. For more information about changing the feature key label, see the *IP Phone 1140E User Guide*.

Note: If a label is longer than ten characters, the last ten characters are displayed and the excess characters are deleted from the beginning of the string.

Information line display

The IP Phone 1140E has a three-line information display area with the following information:

- caller number
- caller name
- feature prompt strings
- user-entered digits
- date and time information (if the IP Phone is in an idle state) or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Soft key label display

The soft key label has a maximum of seven characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the **More** soft key to navigate through the layers of functions. If only four functions are assigned to the soft keys, the **More** key does not appear and all four functions are displayed.

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Local Tools menu password protection

If the SECUREMENU parameter was set during Full DHCP configuration, the Local Tools menu is locked to prevent accidental or unwanted changes. You are prompted to enter the fixed password 26567*738 (color*set) whenever the Services key is double-pressed, or whenever the Local Diagnostics and Network Configuration sub menus are accessed.

If the PARTSECURE parameter was set during Full DHCP configuration, you are prompted to enter the fixed password whenever you access 2. Local Diagnostics, or 3. Network Configuration menu items from the Local Tools menu. You are always prompted to enter the fixed password whenever you access the 4. Lock Menu sub menu.

Two ways to control the menu lock are as follows:

- DHCP Secure Menu option—the IP Phone processes the secure menu setting retrieved from the Full DHCP response.
- Lock Menu option—double-press the Services key to access the Local Tools menu. Press **4** on the dialpad to access the Lock Menu items, or use the up/down navigation keys to scroll and highlight one of the following Lock Menu options:
 - 1. Manual Secure Local Menu
 - 2. Manual Partial Secure Menu
 - 3. Manual Disable Secure Menu

- 4. DHCP Secure Menu
- 5. Lock Now

The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

For more information about 4. Lock Menu manual user settings, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Configuring Secure Local Menu through Full DHCP

Password protection is enabled during Full DHCP configuration if the SECUREMENU parameter, or the PARTSECURE parameter are present at the end of the S4 part of the Full DHCP string. If neither the SECUREMENU parameter, nor the PARTSECURE parameter is present, password protection is not enabled.

The SECUREMENU/PARTSECURE item is an optional parameter. If it is present, then the full S4 string needs to be present, including the action and retries. The S4 string will already be present if the XAS support has been configured through the DHCP. If XAS is not configured, you can still enable password protection by setting the S4 IP address to 0.0.0.0 and by setting the other fields to 0.

IMPORTANT!

With Full DHCP, the vendor-specific or site-specific options must be configured depending on the customers DHCP server configuration.

For further information on configuring Full DHCP, see *Data Networking for Voice over IP* (553-3001-160).

Accessing the Local Tools menu

Once the password is entered, the Local Tools menu remains active for 5 minutes. You can freely navigate, exit and reenter the Local Tools menu

without being prompted to reenter the password. To reset the timer before the 5 minute time expires, double-press the Services key.

You can also press the 5 key to select the Lock Now item from the Lock Menu. The Lock Now item immediately exits the Local Tools menu, closes any open Local Tools menu pages, and locks the Local Tools menu. Alternatively, when time expires, the Local Tools menu and any open submenus are closed. Double-press the Services key to open the password prompt window to reaccess the Local Tools menu.

If you enter an incorrect password, the Local Tools menu will not open. Double-press the Services key to open the password prompt window. Only three incorrect password entries are allowed. Any entry after the three attempts is ignored for 5 minutes. The password prompt window is visible and you can reenter the password but the password is not processed until the 5 minute time expires.

Note: Some text appears dimmed depending on the current state of the menu lock and the configuration of the IP Phone. Only configuration options which are enabled from the current state appear active. Menu options that are not available appear dimmed.

For more information about configuring the Local Tools menu for the IP Phone 1140E, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Key number assignments

You can assign a maximum of nine functions to the four soft-labeled, predefined soft keys. Because the soft keys are predefined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message Waiting key is numbered 16.

Functions mapped to key numbers 17 to 26 are assigned to the four soft keys. Labels for the soft keys appear in the display area. For further information, see “Soft key label display” on page 401. Figure 37 on [page 400](#) shows the IP Phone 1140E display area.

Key number mappings at the Call Server are aligned with that of the IP Phone 2004.

For a description of the IP Phone function assignment for each of the soft keys, see Appendix Appendix I: “IP Phone soft keys” on [page 619](#).

Package components

The IP Phone 1140E includes integrated support for a number of Power over Ethernet options, including support for IEEE 802.3af Power Classification 3.

Table 47 lists the IP Phone 1140E package components and product codes.

Table 47
IP Phone 1140E component list (Part 1 of 2)

| | | |
|--|-------------|-----------------|
| IP Phone 1140E package contents includes | | |
| <ul style="list-style-type: none"> • IP Phone 1140E • handset • handset cord • 2.1 m (7 ft) CAT5 Ethernet cable • Number plate and lens • Getting Started Card | | |
| | RoHS | Non-RoHS |
| IP Phone 1140E with icon keycaps (Graphite) | NTYS05ACE6 | NTYS05AC |
| IP Phone 1140E with English keycaps (Graphite) | NTYS05BBE6 | NTYS05BC |
| Replacement parts | | |
| Handset, Charcoal | | NTYS09AA70 |
| Handset cord, Charcoal | | NTYS10AA70 |
| Footstand kit, Charcoal | | NTYS11AA70 |
| Phone number label and lens kit | | NTYS12AA |
| 2.1 m (7 ft) CAT5 Ethernet cable | | NTYS13AA |

Table 47
IP Phone 1140E component list (Part 2 of 2)

| | | |
|---|------------|----------|
| Power adapter | | |
| Global power supply | | N0089601 |
| IEC cable | | |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 North America | NTYS14AAE6 | NTYS14AA |
| 2.4 m (8 ft), 240 VAC 10 amp, ANZ power cord AS-3, Australia, New Zealand | N/A | NTTK15AA |
| 250 VAC, Option 11C Standard European power cord, Other EMEA, Kenya, Korea, Thailand, Indonesia, Vietnam, India, Pakistan | NTTK16ABE6 | NTTK16AB |
| 3 m (9.9 ft) 125 VAC, Option 11C Swiss power cord Switzerland | NTTK17ABE6 | NTTK17AB |
| 240 VAC, Option 11C UK power cord Hong Kong, Ireland, United Kingdom, Singapore, Malaysia, Bangladesh, Brunei, Sri Lanka | NTTK18ABE6 | NTTK18AB |
| 3 m (9.9 ft), 125 VAC, Option 11C Denmark power cord Denmark | NTTK22ABE6 | NTTK22AB |
| Argentina | N/A | A0814961 |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 Japan | NTTK26AAE6 | N/A |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 1120E installation and configuration process:

- Before you begin
- First-time installation
- Configuring the IP Phone 1120E

- Startup sequence
- Installing the IP Phone 1120E

Before you begin

Before installing the IP Phone 1140E, complete the following pre-installation checklist:

- Ensure there is one IP Phone 1140E boxed package for each IP Phone 1140E being installed. The package contains:
 - IP Phone 1140E
 - handset
 - handset cord
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Number plate and lens
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 1140E being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the approved Nortel global power supply (model # N0089601) is used. See Table 47, “IP Phone 1140E component list,” on page 405.

First-time installation

You must first install an IP telephony node with the Communication Server. For information about installing an IP telephony node, see *Signaling Server*:

Installation and Configuration (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Damage to Equipment

Do not plug your IP Phone 1140E into an ISDN connection. Severe damage can result.

Configuring the IP Phone 1140E

You must configure the IP Phone 1140E before you can use it. Use Procedure 72 on [page 408](#) to configure the IP Phone 1140E for the first time.

Procedure 72

Configuring the IP Phone 1140E

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2 Configure the IP Phone 1140E on the Call Server as IP Phone 2004 using LD 11. At the prompt, enter the following:

```
REQ:chg  
TYPE:i2004
```


For more information, see *Software Input/Output: Administration* (553-3001-311).



CAUTION


The IP Phone 1140E is shipped with the stand locked in position. To avoid damaging the IP Phone, press the wall-mount lever located under the Handsfree key to release the stand and pull it away from the phone. See Figure 38 on [page 409](#).

Figure 38
Release the IP Phone 1140E from the stand

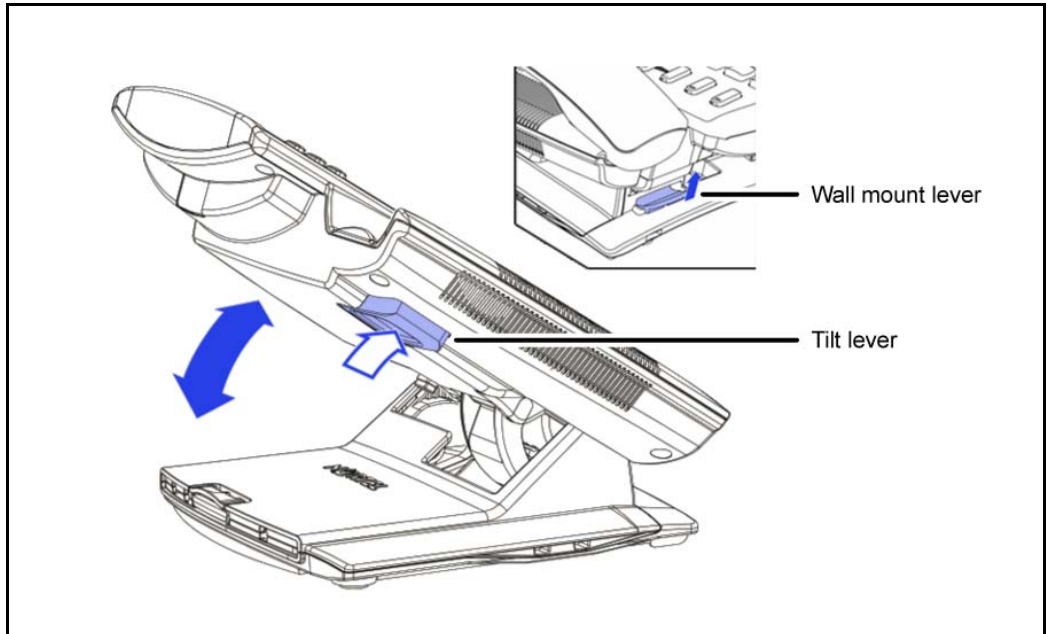

- 3** Remove the stand cover. Pull upward on the center catch and remove the stand cover. The cable routing tracks are now accessible. See Figure 39 on [page 410](#).

Figure 39
Stand cover removed

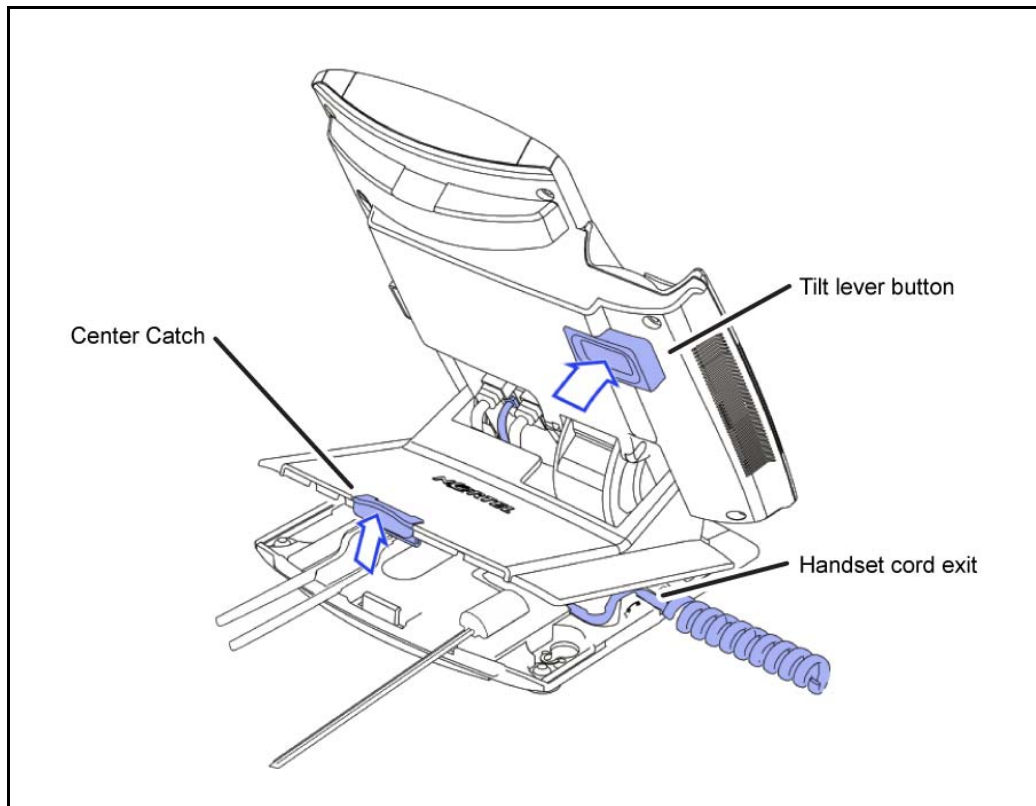

- 4 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable, and then thread the adapter cord through the channels in the stand.


WARNING

Use your IP Phone 1140E with the approved Nortel global power supply (model # N0089601).

Note 1: The IP Phone 1140E supports both AC power and Power over Ethernet options, including IEEE 802.3af Power Classification 3. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.


Note 2: You must use CAT5e (or later) cables if you want to use gigabit Ethernet. Figure 40 shows the IP Phone 1140E connections.

Figure 40
IP Phone 1140E connections

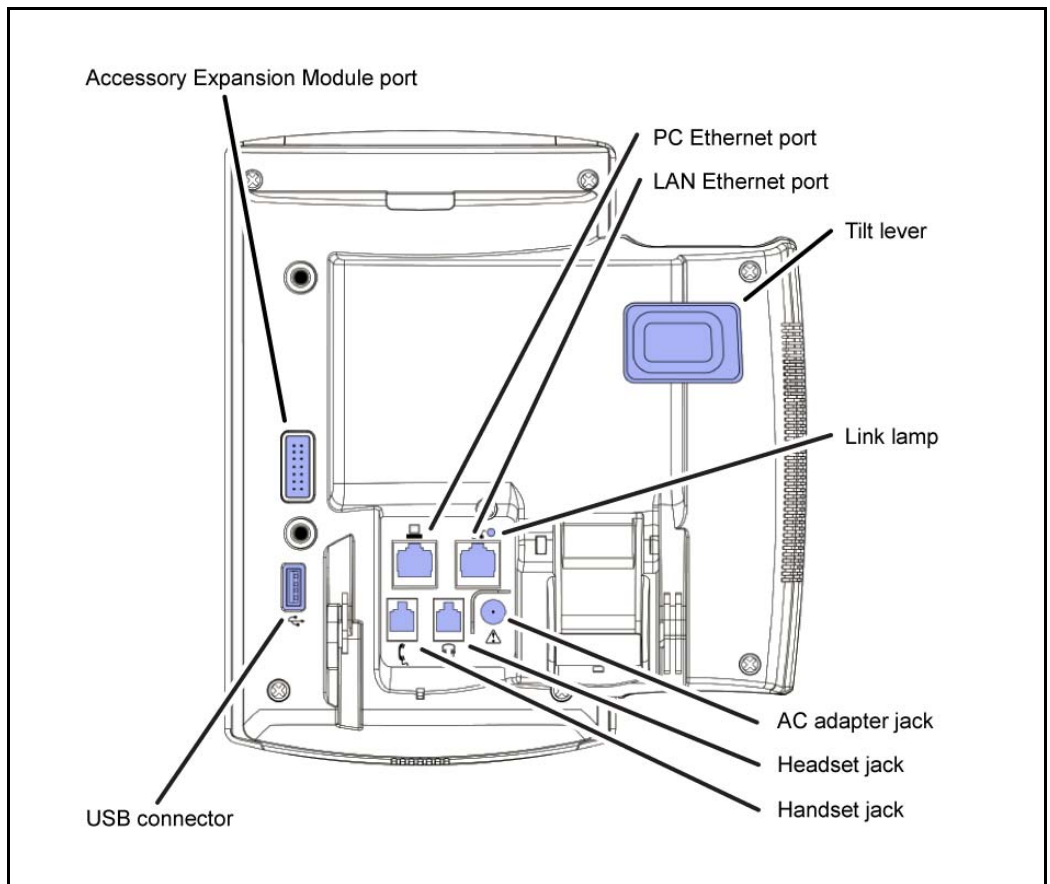

- 5 Install the handset. Connect the end of the handset cable with the short straight section into the handset. Connect the end of the handset cable with the long straight section to the back of the phone, using the RJ-9 handset jack marked with the symbol +. Form a small bend in the cable, and then thread the handset cord through the channels in the stand so that it exits behind the handset on the right side, in the channel exit in the stand base marked with the symbol +. See Figure 41.

Figure 41
Cable routing tracks

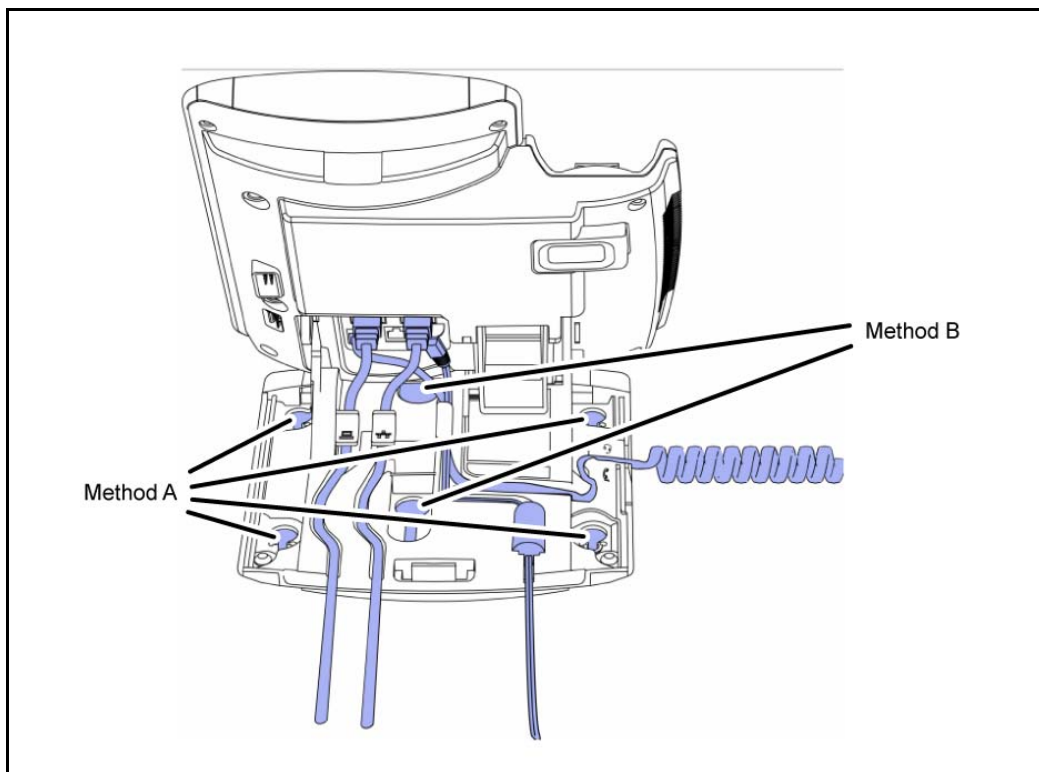

- 6 Install the headset (optional). If you are installing a headset, plug the connector into the RJ-9 headset jack marked with the symbol) on the back of the phone, and thread the headset cord along with the handset cord through the channels in the stand, so that the headset cord exits the channel marked with the symbol).

- 7 Install the Ethernet cable. Connect one end of the supplied Ethernet cable to the back of your phone using the RJ-45 connect marked with the symbol%, and thread the network cable through the channel marked with
- 8 If you are connecting your PC through the phone, you will require a second CAT5 cable. Only one cable is included with the IP Phone 1140E package. Install the Ethernet cable connecting the PC to the phone (optional). Connect one end of the PC Ethernet cable to your phone using the RJ-45 connector marked with the symbol (, and thread it through the channel marked with the symbol (. Connect the other end to the LAN connector on the back of your PC.

**CAUTION****Damage to Equipment**

Do not plug any device into your IP Phone 1140E PC Ethernet port other than a PC. The IP Phone 1140E does not support multiple devices connected through the PC Ethernet port.

- 9 Install additional cables. If applicable, plug in optional USB devices. Connect the Ethernet cable to the LAN Ethernet connection. If you are using an AC power adapter, plug the adapter into an AC outlet.
Note: Complete steps 1-9, as needed, before wall-mounting the IP Phone.
- 10 Wall-mount your phone (optional). Use Method A or Method B to wall-mount the IP Phone. See Method A—using the mounting holes on the bottom of the phone stand, or Method B—using the traditional-style wall-mount box with a RJ-45 connector and a 15 cm (6 inch) RJ-45 cord (not provided).

- Method A: Press the wall-mount lever, and pull away from the stand. Using the stand cover (see step 3 on [page 409](#)), mark the wall-mount holes by pressing the bottom of the stand cover firmly against the wall in the location where you wish to install the phone. Four small pins on the bottom of the stand cover make the marks on the wall. Use the marks as a guideline for installing the wall-mount screws (not provided).

Install the screws so that they protrude 3 mm (1/8 inch) from the wall, and then install the phone stand mounting holes over the screw heads. You may need to remove the phone from the wall to adjust the

- lower screws. When the lower screws are snug, install the phone on the mounting screws, and then tighten the top screws.
- Method B: Attach the 15 cm (6 inch) CAT5e cable, position the stand over the mounting rivets, and slide the phone down the wall so that the rivets fit into the slots on the stand.
- 11 Replace the stand cover. Ensure that all cables are neatly routed and press the stand cover into place until you hear a click.
- 12 Put the phone in the wall-mount position (optional). If you wall-mount the phone, put it in the wall-mount position by holding the Tilt Lever and press the phone towards the base until the phone is parallel with the base. Release the Tilt Lever and continue to push the phone towards the base until you hare an audible click. Ensure the phone is securely locked in to position.

Startup sequence

- When an IP Phone 1140E is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:
- obtaining VLAN ID (if supported by the network infrastructure)
 - obtaining the IP parameters
 - connecting to the Call Server
 - obtaining a User ID

See Table 48 for a summary of the IP parameters and how they are obtained.I

Table 48
IP Phone 1140E IP parameters (Part 1 of 2)

| Parameter | Method of acquisition |
|------------|--|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically obtained through Partial or Full DHCP. |
| Net Mask | Manually entered or automatically obtained through Partial or Full DHCP. |

Table 48
IP Phone 1140E IP parameters (Part 2 of 2)

| Parameter | Method of acquisition |
|---|--|
| Default Gateway address | Manually entered or automatically obtained through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count—primary and secondary) | Manually entered or automatically obtained through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Obtained from local storage on subsequent power cycles. |

Installing the IP Phone 1140E

To install the IP Phone 1140E, use Procedure 72, “Configuring the IP Phone 1140E” on page 408.

Procedure 73
Installing the IP Phone 1140E

IMPORTANT!

Timing information

There are approximately 45 seconds (s) between plugging in the IP Phone 1140E power adapter and the appearance of the text Nortel. When you see the text Nortel on the phone, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 1140E attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the Local diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see "Local Tools menu password protection" on page 402.

- 1 When the Nortel logo appears in the middle of the display, immediately press the four soft keys at the bottom of the display in sequence from left to right. The **3. Network Configuration** menu opens.

Note: You can press the **Apply&Reset** soft key to save the following settings and to reset the IP Phone. You can press the **Exit** soft key exit the menu to exit the menu without saving any changes and return to the **3. Network Configuration** menu.

When the **3. Network Configuration** menu opens, the **Enable 802.1x (EAP)** check box is highlighted.

- 2 Press the **Enter** key to toggle this item on and off. A check mark appears to indicate the item is active.

If 802.1x Authentication is enabled, press the **Enter** key to start the edit mode. Use the dialpad to fill in the following information:

- Device ID
- Password
- Retype password

For further information about 802.1x Authentication, Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Note: If you do not enable 802.1x Authentication, you will not be prompted to enter Device ID and Password.

- 3 Use the **Right** navigation key to scroll and highlight **Enable 802.1x (LLDP Enable)**. check box.

For information about 802.1x Authentication, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 4 Use the **Right** navigation key to scroll and highlight **DHCP** combo box.
- 5 Press the **Enter** key.
- 6 Press the **Down** navigation key to open list box.
- 7 Use the **Up/Down** navigation keys to scroll and highlight one of the following DHCP options:
 - No—disable DHCP support and enter IP network information manually.
 - Partial—IP network information (IP address, network mask, and gateway address) are provided by the DHCP server. Enter Server 1 IP address, Server 2 IP address, Port, Action, Retry, and PK numbers manually.
 - Full—IP network information, Server 1 IP address, Server 2 IP address, and XAS information are provided by the DHCP server. All items are dimmed to prevent manual entry.

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 8 Press the **Enter** key.
- 9 Use the **Right** navigation key to scroll and highlight **SET IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.
Set IP—a valid IP Phone 1140E IP address.
- 10 Use the **Right** navigation key to scroll and highlight **NET MASK**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Net Mask—a subnet mask

- 11 Use the **Right** navigation key to scroll and highlight **Gateway**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Gateway—the default gateway for the IP Phone 1140E on the LAN segment to which it is connected

- 12 Use the **Right** navigation key to scroll and highlight **S1 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S1 IP—the primary CS 1000 node IP address for the IP Phone 1140E

- 13 Use the **Right** navigation key to scroll and highlight **Port**.

S1 Port—a fixed value of 4100

- 14 Use the **Right** navigation key to scroll and highlight **S1 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 15 Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—the number of times the IP Phone 1140E attempts to connect to the server

- 16 Use the **Right** navigation key to scroll and highlight **S1 PK**.

S1 PK—the Private key of the Secure Media Controller to which the IP Phone is connected

- 17 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Enter 6 or 1.

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 18 Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffffff.

- 19 Use the **Right** navigation key to scroll and highlight **S2 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S2 IP—the secondary CS 1000 node IP address for the IP Phone 1140E

Note: The IP Phone 1140E can support a primary (S1) and secondary (S1) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

- 20** Use the **Right** navigation key to scroll and highlight **Port**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Port—same as S1 port

- 21** Use the **Right** navigation key to scroll and highlight **S2 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 22** Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—same as S1

- 23** Use the **Right** navigation key to scroll and highlight **S2 PK**.

S2 PK—the Private key of the alternate Secure Media Controller to which the IP Phone is connected

- 24** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Set the S2 PK to 6 or 1.
- 25** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffffff.
- 26** Use the **Right** navigation key to scroll and highlight **VoiceVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

27 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- DHCP—VLAN ID is configured automatically to one of the values received from the DHCP server
- LLDP MED—VLAN ID is configured automatically to the value received from 802.1ab LLDP
- LLDP VLAN Name—VLAN ID is configured automatically to the value received from 802.1ab LLDP

Note: If LLDP is disabled, LLDP MED and LLDP VLAN Name modes do not appear in the list. If DHCP is disabled, DHCP does not appear in the list.

For more information about VLAN configuration, see *Data Networking for Voice over IP* (553-3001-160).

28 Press the **Enter** key.

29 Use the **Right** navigation key to scroll and highlight **VLAN Filter** check box. Press the **Enter** key to toggle this item on and off.

If the VLAN Filter is enabled, packets destined for the IP Phone port are filtered on their MAC address and their VLAN tag. Untagged VLAN packets and tagged VLAN packets that differ from the Telephony VLAN ID are prevented from reaching the IP Phone port.

For information about VLAN tagging, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#).

Note: The **VLAN Filter** check box will appear dimmed if you select **No** in the **VoiceVLAN** combo box.

30 Use the **Right** navigation key to scroll and highlight **Disable PC Port** check box. Press the **Enter** key to toggle this item on and off.

31 Use the **Right** navigation key to scroll and highlight **DataVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

32 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- LLDP VLAN Name—VLAN ID is configured automatically to the value received in the VLAN NAME TLV
- VLAN ID value—Enter the VLAN ID manually. This is a number between 1 and 4094.

Note: If LLDP is disabled, LLDP VLAN Name does not appear in the list.

33 Press the **Enter** key.

34 Use the **Right** navigation key to scroll and highlight **PC-Port Untag All** check box. Press the **Enter** key to toggle this item on and off.

If DATA VLAN is enabled, the tag on all traffic destined for the PC port is stripped, by default. To override this action, deselect the PC-Port Untag All check box. If DATA VLAN is disabled, the tag on all traffic destined for the PC port is not stripped. To override this action, select the PC-Port Untag All check box.

For information about PC port tag stripping, see Appendix Appendix B: “802.1Q VLAN description” on [page 511](#).

35 Use the **Right** navigation key to scroll and highlight **Duplex** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

- Auto—Link speed is auto negotiated with the network device and attached PC
- 10BT Full—Link speed is available for up to 10 Megabit Full Duplex on the network and the PC port.
- 100BT Full—Link speed is available for up to 100 Megabit Full Duplex on the network and the PC port.
- 1000BT Full—Link speed is available for up to 1000 Megabit Full Duplex on the network and the PC port.

For more information about Full Duplex, see “Full Duplex mode” on page 424.

36 Use the **Right** navigation key to scroll and highlight **Enable PSK SRTP:** check box. Press the **Enter** key to toggle this item on and off.

The SRTP media encryption feature provides encrypted media. A preshared secret is embedded in the Nortel IP Phone to generate and to exchange encryption parameters without any Call Server involvement.

For further information about the SRTP media encryption feature, “SRTP media encryption” on page 498 and *System Security Management (NN43001-604)*.

- 37 Use the **Right** navigation key to scroll and highlight **Ignore GARP** check box. Press the **Enter** key to toggle this item on and off.

The GARP feature protects the IP Phone from a Gratuitous ARP Spoof attack from the network.

For more information about GARP, see “Gratuitous Address Resolution Protocol Protection” on page 426.

- 38 If an External Application Server (XAS) is available in the network, use the **Right** navigation key to scroll and highlight the **XAS IP** combo box. Use the dialpad to enter the XAS IP address.

The XAS delivers business applications to the IP Phone. For more information about XAS, see Nortel Application Gateway 1000 documentation.

- 39 If the XAS supports graphical displays, use the **Right** navigation key to scroll and highlight **Graphical XAS** check box. Press the **Enter** key to toggle this item on and off.

- 40 Use the **Right** navigation key to scroll and highlight **Port** combo box. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

- 41 Use the **Right** navigation key to scroll and highlight **Enable Bluetooth** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

- 42 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- Auto—(default) Bluetooth wireless technology setting received through TFTP configuration
- Yes—Bluetooth wireless technology is enabled on the IP Phone
- No—Bluetooth wireless technology is disabled on the IP Phone

For further information about Bluetooth wireless technology, Appendix Appendix G:: “Bluetooth wireless technology” on [page 591](#).

- 43 Upgrade the IP Phone 1140E firmware.

Use the **Right** navigation key to scroll and highlight **TFTP IP** combo box. The IP Phone 1140E supports remote firmware upgrades through a TFTP process and an automated UFTP process.

The method to upgrade the firmware depends on the following Call Server software:

- For Succession Release 3.0 or CS 1000 Release 4.0, the TFTP Server is required to download the current firmware. Enter the TFTP Server IP address at the prompt.
- For CS 1000 Release 4.5 and later, use either a TFTP Server to upgrade the firmware (at the prompt accept the default entry of 0.0.0.0), or UFTP to download the current firmware.

For further information about TFTP Server configuration, see Appendix Appendix H:: "TFTP Server" on [page 605](#).

For Succession Release 3.0 and CS 1000 Release 4.0, the IP Phone 1140E searches for the TFTP Server for firmware upgrade. If the file name specified in 1140e.cfg is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone 1140E reboots.

Note: The Enhanced UNiStim firmware download is only supported on CS 1000 Release 4.5 or later. The Enhanced UNiStim firmware download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNiStim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 1140E searches for the connect server.

The IP Phone 1140E registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When download is complete, the IP Phone 1140E resets.

The current Call Server date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 44 Check for dial tone and the correct DN on the display.
- 45 (Optional) Customize the feature keys as required. For more information, see For more information, see *Software Input/Output: Administration* (553-3001-311) and the *IP Phone 1140E User Guide*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 74 to enable Full Duplex mode.

Procedure 74 **Enabling Full Duplex mode**

- 1 Double-press the **Services** key to open the **Local Tools** menu.
- 2 Press **3** on the dialpad to access the **Network Configuration** menu or use the Up/Down navigation keys to scroll and highlight the Network Configuration option.
- 3 Use the **Right** navigation key to scroll and highlight the **Duplex** combo box.
- 4 Press **Enter** to start the edit mode.
- 5 Press the **Down** navigation key to open list box.

- 6 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:
 - 10BT Full—10 BT Full Duplex mode
 - 100BT Full—100 BT Full Duplex mode
- 7 Press **Enter** to exit the edit mode.
- 8 Press the **Apply&Reset** soft key to save the changes and to restart the IP Phone 1140E. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use Procedure 75 to confirm activation of Full Duplex mode.

Procedure 75
Checking Ethernet Statistics

- 1 Double-press the **Services** key to open the **Local Tools** menu.
- 2 Press **2** to select **Local Diagnostics**, then press **3** to open the **Ethernet Statistics** menu.

If Full Duplex mode is active, the following is displayed:

- Link Status: UP
- Duplex Mode: Full
- Network Speed: 10 Mb, 100 Mb or 1G
- Auto Sense/Negotiate
 - Auto-Negotiate Capability: No
 - Auto-Negotiate Completed: No

End of Procedure

TFTP firmware upgrade

When you enter Cfg TFTP = 1 (for yes), and enter an IP address, the phone searches for an upgrade file on the TFTP Server.

Note: Users of CS 1000 Release 4.5 or later do not need to enter a TFTP IP address.

For further information about TFTP firmware upgrade, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

Gratuitous Address Resolution Protocol Protection


Gratuitous Address Resolution Protocol (GARP) Protection protects the IP Phone 1140E from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim’s machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim’s machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 72, “Configuring the IP Phone 1140E” on page 408.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Bluetooth wireless technology

The IP Phone 1140E supports Bluetooth wireless technology  Bluetooth®. For information about configuring Bluetooth wireless technology on the IP Phone 1140E, see Appendix Appendix G:: “Bluetooth wireless technology” on [page 591](#).

Reinstalling an IP Phone 1140E

You can reinstall an existing previously configured IP Phone 1140E on the same Call Server. For example, the IP Phone 1140E can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 1140E.

Procedure 76

Changing the TN of an existing IP Phone 1140E

- 1 Repower the IP Phone 1140E.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 1140E displays the existing node number for approximately five seconds.

- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

If

Then

the node password is enabled and is not NULL

a password screen displays. Go to step 4.

the node password is disabled

a TN screen displays. Go to step 5.

- 4 Enter the password at the password screen, and press **OK**.

A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).

- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 1140E

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 1140E that is currently using the TN.

Procedure 77

Replacing an IP Phone 1140E

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 1140E that you want to replace.
- 3 Follow Procedure 72 on [page 408](#) to install and configure the IP Phone 1140E.
- 4 Enter the same TN and Node Number as the IP Phone 1140E you replaced. The Call Server associates the new IP Phone 1140E with the existing TN.

End of Procedure

Removing an IP Phone 1140E from service

Procedure 78

Removing an IP Phone 1140E from service

- 1 Disconnect the IP Phone 1140E from the network or turn the power off.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 1140E.

If the IP Phone 1140E was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Nortel IP Phone 1150E

Contents

| | |
|---|-----|
| Introduction | 430 |
| Description | 430 |
| Components and functions | 432 |
| Services menu | 437 |
| Features not currently supported | 443 |
| Display characteristics | 443 |
| Headset support | 446 |
| Local Tools menu password protection | 446 |
| Key number assignments | 449 |
| Package components | 451 |
| Installation and Configuration | 452 |
| Full Duplex mode | 471 |
| TFTP firmware upgrade | 473 |
| Gratuitous Address Resolution Protocol Protection | 473 |
| Extensible Authentication Protocol | 473 |
| Bluetooth wireless technology | 473 |
| Reinstalling an IP Phone 1150E | 474 |
| Replacing an IP Phone 1150E | 475 |
| Removing an IP Phone 1150E from service | 475 |

Introduction

This section explains how to install and maintain the IP Phone 1150E. For information on using the IP Phone 1150E, see the *IP Phone 1150E User Guide*, or the *IP Phone 1150E Getting Started Card*.

This section contains the following procedures:

- Procedure 79, “Configuring an IP Phone 1150E” on page 454.
- Procedure 79, “Configuring an IP Phone 1150E” on page 454.
- Procedure 81, “Enabling Full Duplex mode” on page 471.
- Procedure 82, “Checking Ethernet Statistics” on page 472.
- Procedure 83, “Changing the TN of an existing IP Phone 1150E” on page 474.
- Procedure 84, “Replacing an IP Phone 1150E” on page 475.
- Procedure 85, “Removing an IP Phone 1150E from service” on page 475.

Note: After an IP Phone is has been installed and configured, if power to the phone is interrupted, it is not necessary to reenter IP parameters, Node Number, TN, nor firmware again.

Description


The IP Phone 1150E uses the customer IP data network to communicate with the Communication Server 1000. The IP Phone 1150E translates voice into data packets for transport using Internet Protocol. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 1150E network connection, and connection to the Communication Server 1000.

The IP Phone 1150E is configured for either an Agent, or a Supervisor. The IP Phone 1150E is shipped with Agent key configuration but can be modified to support Supervisor key configuration by replacing the key caps. Remove the key caps using the Key Cap removal tool (product number NTNM19AA). For information about IP Phone 1150E components, see “Package components” on page 451.

Figure 42 shows the IP Phone 1150E default Agent key configuration.

Note: You can program the keys indicated with asterisks for different functions.


Figure 42
IP Phone 1150E default Agent key configuration

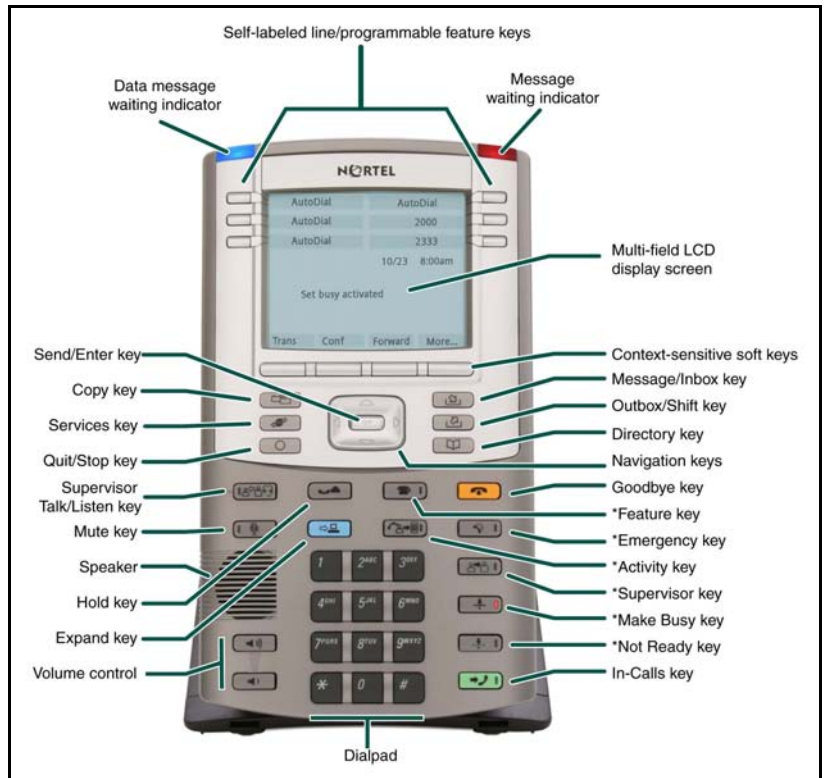

Note: You can program the keys indicated with asterisks for different functions.

Figure on [page 431](#) shows the IP Phone 1150E Supervisor key configuration.

Figure 43
IP Phone 1150E Supervisor key configuration

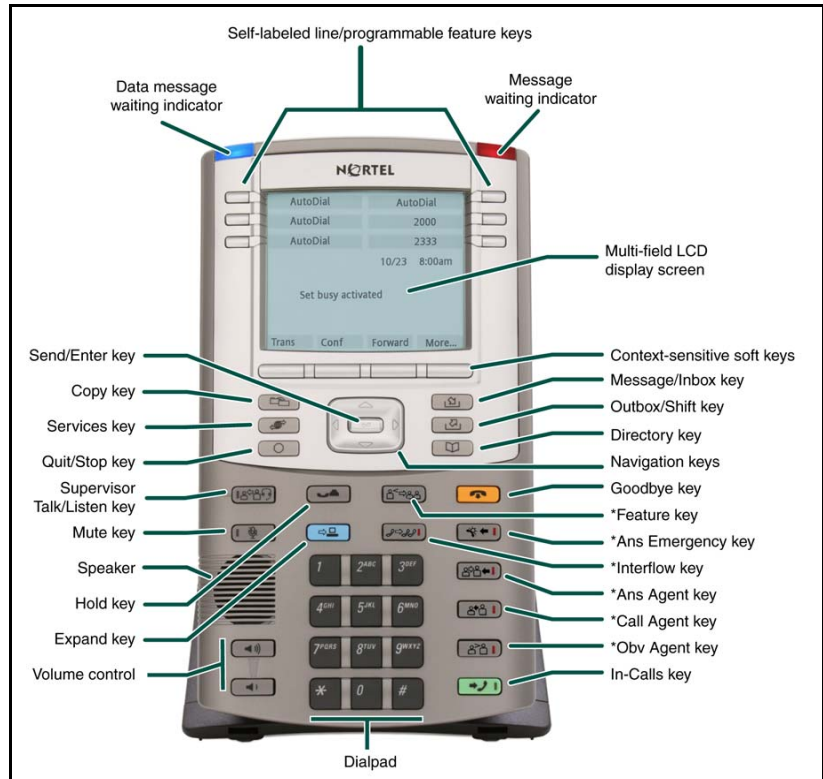

Note: You can program the keys indicated with asterisks for different functions.

Components and functions

This section describes the following components of the IP Phone 1150E:

- Keys and functions
- Services menu
- Local Tools menu

Table 49 shows the keys and functions for the IP Phone 1150E.

Table 49
IP Phone 1150E keys and functions (Part 1 of 3)

| Key | Function |
|--|---|
| Hold | Press the Hold key to put an active call on hold. Press the line (DN) key beside the flashing LCD to return to the caller on hold. |
| Goodbye | Press the Goodbye key to terminate an active call. |
| Visual Alerter/ Message waiting indicator | When a message is waiting, the red Visual Alerter/Message waiting indicator lights. Also, when the ringer sounds, this indicator flashes. |
| Feature Status Lamp indicator | When the firmware is updating, the blue Feature Status Lamp indicator flashes. Note: This function requires server support and, therefore, is not available on all phones. |
| Self-labeled line / programmable feature keys labels | Self-labeled line /programmable feature key labels are configured for various features on the IP Phones. A steady LCD light beside a line (DN) key indicates the feature or line is active. A flashing LCD indicates the line is on hold or the feature is being programmed. |
| Context-sensitive soft keys | Context-sensitive soft keys are located below the display area. The LCD label above the key changes, based on the active feature. Note: A triangle before a key label indicates that the key is active. |
| Fixed feature keys | Use these keys to access non-programmable features. |
| Expand | The Expand key is used to access external server applications such as External Application Server. |

Table 49
IP Phone 1150E keys and functions (Part 2 of 3)

| Key | Function |
|---------------------|--|
| Navigation keys | <p>Use the Navigation keys to scroll through menus and lists appearing on the LCD display screen. The outer part of this key cluster rocks for up, down, left, and right movements.</p> <p>Use Up and Down keys to scroll up and down in lists, and the Left and Right keys to position the cursor. You can also use the Left and Right keys to select editable fields that appear on the phone. Press the Right key to select the field below the current position, or press the Left key to select the field above the current position.</p> |
| Enter | Press the Enter key, at the center of the Navigation key cluster, to confirm menu selections. In many cases, you can use the Enter key instead of the Select soft key. |
| Message/Inbox | Press the Message/Inbox key to access your voicemail box. |
| Shift/Outbox | Press the Shift/Outbox key to toggle between two feature key pages, or any Expansion Modules for IP Phones 1100 Series attached to the phone. |
| Copy | Press the Copy Key to copy entries to your Personal Directory from other lists, such as the Caller List, Redial List and Corporate Directory. |
| Quit/Stop | <p>Press the Quit/Stop key to end an active application.</p> <p>Pressing the Quit/Stop key does not affect the status of the calls currently on your IP Phone.</p> |
| Directory | Press the Directory key to access Directory services. |
| Mute | <p>Press the Mute key to listen to the receiving party without transmitting. Press the Mute key again to return to a two-way conversation. The Mute key applies to Headset microphones.</p> <p>The Mute LED flashes when the Mute option is in use.</p> |
| Volume control keys | <p>Use the Volume control keys to adjust the volume of the headset, ringer, and alerter/pager.</p> <p>Press the volume key with the plus sign icon to increase volume; press the volume key with the minus sign icon to decrease volume.</p> |

Table 49
IP Phone 1150E keys and functions (Part 3 of 3)

| Key | Function |
|--------------------------------|--|
| Supervisor Talk/ Listen key | For Supervisor use. Press the Supervisor Talk/Listen key to participate in an active conversation. The LED lights to indicate talk/listen mode is on. If the LED is off, the Supervisor can only listen to an active conversation. Note: A headset must be connected to the Supervisor port on the IP Phone 1150E to use this feature. |
| In-Calls key | Press the In-Calls key to answer incoming calls. This mirrors the key function and state of the Primary DN key. The In-Calls LED lights when the In-Calls key is in use. |

Agent default configuration

Table 50 shows IP Phone 1150E keys and functions for default Agent key configuration. You can configure these keys for different functions.

Table 50
IP Phone 1150E keys and functions for default Agent key configuration

| Key | Function |
|---------------|--|
| Activity key | Press the Activity key and enter the appropriate activity code to record the activity the agent is performing. |
| Feature key | The Feature key supports the assignment of any telephony feature. |
| Not Ready | Press the Not Ready key to exit the Automatic Call Distribution (ACD) queue without logging out. |
| Make Set Busy | Press the Make Set Busy key to log out of the ACD queue and agent position. |
| Supervisor | Press the Supervisor key to open a direct line between the agent IP Phone and the supervisor IP Phone. |
| Emergency | Press the Emergency key to place an emergency call to the Supervisor. |

Supervisor key configuration

Table 51 shows IP Phone 1150E components and functions for Supervisor key configuration. You can configure these keys for different functions

Table 51
IP Phone 1150E keys and functions for Supervisor key configuration

| Key | Function |
|------------------|---|
| Display Agents | Press the Dsply Agents key to obtain a summary of the current status of all agent positions. |
| Interflow | Press the Interflow key to forward calls to a predefined target queue when the call backlog, or the waiting time in the queue exceeds a set threshold. |
| Answer Emergency | Press the Ans Emerg key to join the agent in an emergency situation call. |
| Answer Agent | The Ans Agent key corresponds to the agent Supervisor key. Press the Ans Agent key to open the direct line between the Supervisor and the agent. |
| Call Agent | Press the Call Agent key to connect to an agent position. |
| Observe Agent | Press the Obv Agent key to monitor activity on the agent phone. |

Services menu

Table 52 shows the Services menu.

Table 52
Services menu

Press the Services key to access the following items:

- Telephone Options (see Notes 1 and 2):
 - Volume Adjustment
 - Contrast Adjustment
 - Language
 - Date/Time
 - Display diagnostics
 - Local Dialpad Tone
 - Set Info
 - Diagnostics
 - Headset Type
 - Call Log Options
 - Ring type
 - Call Timer
 - Call Indicator Light
 - Change Feature Key Label
 - Name Display Format

Table 52
Services menu

| |
|---|
| <ul style="list-style-type: none">• Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)• Test Local Mode and Resume Local Mode (if Branch Office is configured)• Password Admin <p>Note 1: If a call is presented while the user is manipulating an option, the IP Phone 1150E rings and the DN key flashes. However, the screen display is not updated with Caller ID information. The programming text is not disturbed.</p> <p>Note 2: The user can originate a call using Autodial or Last Number Redial while manipulating an option. However, the display is not updated with the dialed digits or the Caller ID, and Autodial and Last Number Redial intercept the dialpad.</p> |
|---|

Local Tools menu

Table 53 shows the Local Tools menu.

Table 53
Local Tools menu

| |
|---|
| <p>Press the Services key twice to access the Local Tools menu. The following items appear in the Local Tools menu:</p> <ol style="list-style-type: none">1. Preferences<ol style="list-style-type: none">1. Display Settings2. Languages...3. Bluetooth Setup2. Local Diagnostics<ol style="list-style-type: none">1. IP Set&DHCP Information2. Network Diagnostic Tools3. Ethernet Statistics4. IP Network Statistics5. USB Devices3. Network Configuration |
|---|

Table 53
Local Tools menu

4. Lock Menu
 1. Manual Secure Local Menu
 2. Manual Partial Secure Menu
 3. Manual Disable Secure Menu
 4. DHCP Secure Menu
5. Lock Now

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see “Local Tools menu password protection” on page 446.

To make a selection, press the number associated with the menu item, or use the navigation keys to scroll through the menu items. Press the Enter key to select the highlighted menu item.

Press the Quit/Stop key to exit from any menu or menu item.

For information on configuring IP Phone 1150E Local Tools menu, see “Configuring the Local Tools menu” on page 579.

Supported features

The IP Phone 1150E supports the following telephony features:

- six self-labeled line /programmable feature keys with labels and indicators

Note: Supports up to twelve DN's or features on 2 pages. Use the Shift/Outbox key to access the second page of DN's or features.

- four context-sensitive soft keys providing access to a maximum of nine features

Note: Functions for the context-sensitive soft keys are configured in LD 11.

- seven specialized feature keys:
 - Copy

- Services
- Quit/Stop
- Shift/Outbox
- Inbox/Message
- Directory
- Feature key
- Inbox/Message
- seven dedicated Automatic Call Distribution (ACD) fixed keys for default Agent key configuration with an integrated LED:
 - Supervisor Talk/Listen
 - Emergency
 - Supervisor
 - Make Busy
 - Not Ready
 - In-Calls
 - Activity (reserved for future implementation)
- eight dedicated ACD fixed keys for Supervisor key configuration with an integrated LED:
 - Supervisor Talk/Listen
 - Display Agents
 - Interflow
 - Answer Emergency
 - Answer Agent
 - Call Agent
 - Observe Agent
 - In-Calls
- five call-processing fixed keys:

- Mute
- Release
- Expand
- Hold
- Volume increase/decrease
- Call Duration Timer
- ability to change self-labeled line /programmable feature key labels
- Corporate Directory
- Personal Directory
- Redial List
- Callers List
- Password Administration
- Virtual Office
- Branch Office
- Active Call Failover
- Enhanced UNISlim Firmware Download

The IP Phone 1150E supports the following Data network features:

- integrated gigabit Ethernet switch for shared PC access
 - LAN Ethernet port supports 10/100/1000 Mbps Full Duplex mode
 - PC Ethernet port supports 10/100/1000 Mbps Full Duplex mode
- automatic network configuration through DHCP


For more information about automatic network configuration, see Table 57, “IP Phone 1150E IP parameters,” on page 461.

- 802.1ab Link Layer Discovery Protocol (LLDP)

For more information about LLDP, Appendix Appendix D: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- Secure Real-time Transport Protocol (SRTP) media encryption
For more information about SRTP media encryption, “Features overview” on page 493.
- 802.1Q VLAN and 802.1p priority support, industry standards for managing bandwidth usage
 - full VLAN capability, including a manageable integrated switch in the IP Phone; allows VLAN and priority tagging for the IP Phone traffic and VLAN tagging for PC traffic
 - VLAN filtering which allows the IP Phone to only see Voice VLAN traffic. The integrated switch will pass DATA VLAN traffic to the PC Ethernet port. This prevents the Data VLAN broadcast traffic from reaching the IP Phone. For more information, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#) and *Data Networking for Voice over IP* (553-3001-160).
- 802.1x Port-based network access control, industry standard for passing Extensible Authentication Protocol (EAP) over a LAN
For more information about 802.1x port-based network access control, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).
- integrated hardware to support Power over Ethernet (PoE) for IEEE 802.3af Power Classification 3
- Gratuitous Address Resolution Protocol Protection (GARP)

The IP Phone 1150E supports the following user interface features:

- graphical, high-resolution LCD display, backlit, with adjustable contrast
- USB port, to support USB devices
Note: Powered downstream 1.1 compliant USB hubs are supported, including USB 2.0 hubs, if they offer USB 1.1 backwards compliancy.
- Hearing Aid Compatibility (HAC) as per FCC Part 68
- wireless device support (Agent port, *only*) through Bluetooth®
 Bluetooth 1.2 compliant Audio Gateway Headset Profile
- External Application Server (XAS)

- Graphical External Application Server (GXAS)
- language support: English, French, Swedish, Danish, Norwegian, German, Dutch, Portuguese, Czech, Finnish, Hungarian, Italian, Polish, Spanish, Russian, Latvian, Turkish, and Katakana

Note: In the case of the prompts locally generated by the phone for the Local Tools menu and in all local features, the language is controlled locally by the phone. Thus the two language selection mechanisms on the phone are: one for local features, which is selected in the Local Tools menu, and another for TPS features, which is selected in the Telephone Options menu. For information about selecting the languages for local features and TPS features, see the *IP Phone 1150E User Guide*.

- Expansion Module for IP Phones 1100 Series

For more information about the Expansion Module for IP Phone 1100 Series, see

Features not currently supported

The following features are not supported on the IP Phone 1150E:


- Group Listening
- Set-to-Set messaging

Display characteristics

An IP Phone 1150E has three major display areas:

- self-labeled line /programmable feature key label
- information line
- context-sensitive soft key label

Figure 44
IP Phone 1150E display area

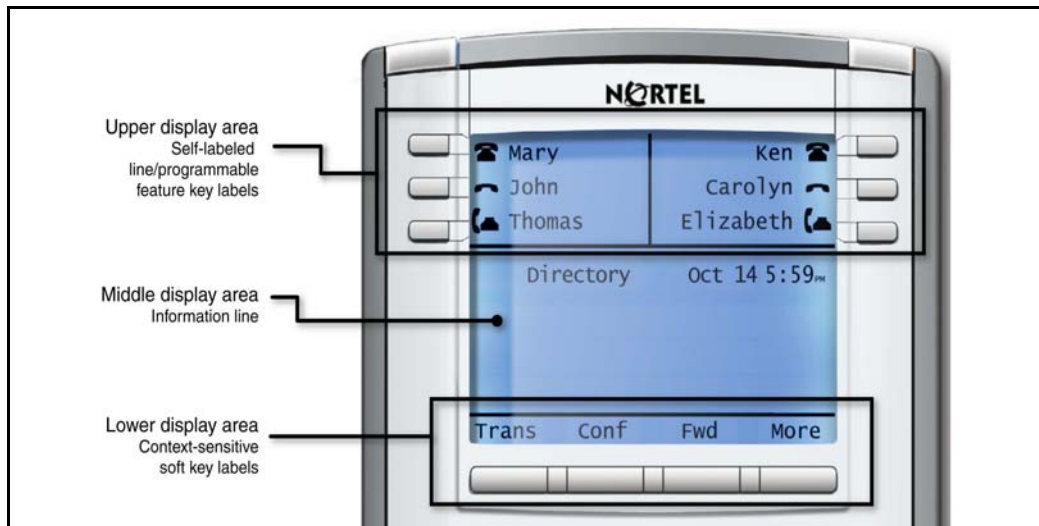

Self-labeled line /programmable feature key label

The self-labeled line/programmable feature key label area displays a 10-character string for each of the six line/programmable feature keys. Each line/programmable feature key includes the key label and an icon. The icon state can be on, off, or flashing. A telephone icon displays the status of the configured DN. Key labels are left-aligned for keys on the left side of the screen, and right-aligned for keys on the right side of the screen. To change the feature key label, press the **Services** key to access **Telephone Options > Change Feature key label** option. For more information about changing the line/programmable feature key label, see the *IP Phone 1150E User Guide*.

Note: If a label is longer than ten characters, the last ten characters are displayed, and the excess characters are deleted from the beginning of the string.

Information line display

An IP Phone 1150E has a four-line information display area with the following information:

- caller number
- caller name
- feature prompt strings
- user-entered digits
- date and time information (if the IP Phone is in an idle state), or Call Timer (if provisioned in the Telephone options menu)

The information in the display area changes, according to the call processing state and active features.

Context-sensitive soft key label

The context-sensitive soft key label has a maximum of seven characters. Each soft key includes the soft key label and an icon. When a soft key is in use, a triangle icon displays at the beginning of the soft key label, and the label shifts one character to the right. (If the label is six characters long, the last, or rightmost character is truncated.) If a feature is enabled, the icon state turns to On. It remains in the on state until the feature key is pressed again. This cancels the enabled feature and turns the icon off, returning the soft key label to its original state.

Use the **More** soft key to navigate through the layers of functions. If only four functions are assigned to the soft keys, the **More** key does not appear and all four functions are displayed.

Cleaning the IP Phone display screen

Gently wipe the IP Phone display screen with a soft, dry cloth.



CAUTION

Do not use any liquids or powders on the IP Phone. Using anything other than a soft, dry cloth can contaminate IP Phone components and cause premature failure.

Headset support

Press the Services key to open the Telephone Options menu and to access the Headset Type menu item.

The IP Phone 1150E supports the following headsets:

- Type 1: Plantronics P251N, P261N, CS55, Voyager 510S
- Type 2: GNNetcom GN 2120 NCD, GN9120 Flex
- GNNetcom Liberation

Local Tools menu password protection

If the SECUREMENU parameter was set during Full DHCP configuration, the Local Tools menu is locked to prevent accidental or unwanted changes. You are prompted to enter the fixed password 26567*738 (color*set) whenever the Services key is double-pressed, or whenever the Local Diagnostics and Network Configuration sub menus are accessed.

If the PARTSECURE parameter was set during Full DHCP configuration, you are prompted to enter the fixed password whenever you access 2. Local Diagnostics, or 3. Network Configuration menu items from the Local Tools menu. You are always prompted to enter the fixed password whenever you access the 4. Lock Menu sub menu.

Two ways to control the menu lock are as follows:

- DHCP Secure Menu option—the IP Phone processes the secure menu setting retrieved from the Full DHCP response.
- Lock Menu option—double-press the Services key to access the Local Tools menu. Press 4 on the dialpad to access the Lock Menu items, or use the up/down navigation keys to scroll and highlight one of the following Lock Menu options:
 - 1. Manual Secure Local Menu
 - 2. Manual Partial Secure Menu
 - 3. Manual Disable Secure Menu
 - 4. DHCP Secure Menu
 - 5. Lock Now

The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

For more information about 4. Lock Menu manual user settings, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Configuring Secure Local Menu through Full DHCP

Password protection is enabled during Full DHCP configuration if the SECUREMENU parameter, or the PARTSECURE parameter are present at the end of the S4 part of the Full DHCP string. If neither the SECUREMENU parameter, nor the PARTSECURE parameter is present, password protection is not enabled.

The SECUREMENU/PARTSECURE item is an optional parameter. If it is present, then the full S4 string needs to be present, including the action and retries. The S4 string will already be present if the XAS support has been configured through the DHCP. If XAS is not configured, you can still enable

password protection by setting the S4 IP address to 0.0.0.0 and by setting the other fields to 0.

IMPORTANT!

With Full DHCP, the vendor-specific or site-specific options must be configured depending on the customers DHCP server configuration.

For further information on configuring Full DHCP, see *Data Networking for Voice over IP* (553-3001-160).

Accessing the Local Tools menu

Once the password is entered, the Local Tools menu remains active for 5 minutes. You can freely navigate, exit and reenter the Local Tools menu without being prompted to reenter the password. To reset the timer before the 5 minute time expires, double-press the Services key.

You can also press the 5 key to select the Lock Now item from the Lock Menu. The Lock Now item immediately exits the Local Tools menu, closes any open Local Tools menu pages, and locks the Local Tools menu. Alternatively, when time expires, the Local Tools menu and any open submenus are closed. Double-press the Services key to open the password prompt window to reaccess the Local Tools menu.

If you enter an incorrect password, the Local Tools menu will not open. Double-press the Services key to open the password prompt window. Only three incorrect password entries are allowed. Any entry after the three attempts is ignored for 5 minutes. The password prompt window is visible and you can reenter the password but the password is not processed until the 5 minute time expires.

Note: Some text appears dimmed depending on the current state of the menu lock and the configuration of the IP Phone. Only configuration options which are enabled from the current state appear active. Menu options that are not available appear dimmed.

For more information about configuring the Local Tools menu for the IP Phone 1150E, see Appendix Appendix F:: “Configuring the Local Tools menu” on [page 579](#).

Key number assignments

This section describes the following keys supported on the IP Phone 1150E:

- self-labeled line /programmable feature keys
- ACD fixed feature keys
- soft keys

Self-labeled line /programmable feature keys

The IP Phone 1150E has six self-labeled line /programmable feature keys which can support up to 12 DN's or features on 2 pages. When a call is presented on a feature key which is not currently shown, the message *Shift for Call* appears on the display area. Press the Shift/Outbox key to access the second page of feature or DN's, or to access any Expansion Module 1100s attached to the phone.

The six self-labeled line /programmable keys are numbered 0-5 for the first key page, and 6-11 for the second key page.

When key 0 is programmed as the ACD In-Calls key, the default features are assigned to the Automatic Call Distribution (ACD) fixed keys.

ACD fixed feature keys

Key numbers 12-15 are used for the ACD fixed features. See Table 54, “ACD default Agent fixed feature keys,” on page 450 for a list of the ACD default Agent fixed feature keys or Table 55, “Supervisor fixed feature keys,” on page 450 for a list of Supervisor fixed feature keys.

For a description of supported call features, see Appendix Appendix J:: “Call features” on [page 621](#).

Table 54
ACD default Agent fixed feature keys

| Key number | Response | Description |
|------------|----------|-----------------|
| Key 12 | NRD | Not Ready |
| Key 13 | MSB | Make Set Busy |
| Key 14 | ASP | Call Supervisor |
| Key 15 | EMR | Emergency |

Note: The In-Calls key mirrors the programming of key 0; it is not separately programmable.

Table 55
Supervisor fixed feature keys

| Key number | Response | Description |
|------------|----------|------------------|
| Key 12 | OBV | Observe Agent |
| Key 13 | RAG | Call Agent |
| Key 14 | AAG | Answer Agent |
| Key 15 | AMG | Answer Emergency |

Soft keys

You can assign a maximum of nine functions to the four soft-labeled, predefined soft keys. Because the soft keys are predefined, the user cannot change the key number assignment. Functions are assigned to the soft keys in layers in LD 11.

The Message Waiting key is numbered 16.

Functions mapped to key numbers 17 to 26 are assigned to the four soft keys. Labels for the soft keys appear in the display area. For further information,

see “Context-sensitive soft key label” on page 445. Figure 44 on [page 444](#) shows the IP Phone 1150E display area.

Key number mappings at the Call Server are aligned with that of the IP Phone 2004.

For a description of the IP Phone function assignment for each of the soft keys, see Appendix Appendix I: “IP Phone soft keys” on [page 619](#).

Package components

The IP Phone 1150E includes integrated support for a number of Power over Ethernet options, including support for IEEE 802.3af Power Classification 3.

Table 56 lists the IP Phone 1150E package components and product codes.

Table 56
IP Phone 1150E component list (Part 1 of 2)

| | | |
|--|--|------------|
| IP Phone 1150E package contents includes | | |
| <ul style="list-style-type: none"> • IP Phone 1150E • 2.1 m (7 ft) CAT5 Ethernet cable • Getting Started Card | | |
| Note: If you are using local power, the approved Nortel global power supply and a standard local power cord must be ordered separately. | | |
| IP Phone 1150E with Agent icon keycaps | | NTYS06AA |
| IP Phone 1150E with English keycaps | | NTYS06BA |
| IP Phone 1150E with Supervisor icon key caps | | NTYS15AAE6 |
| Replacement parts | | |
| Footstand kit, Charcoal | | NTYS11BA70 |
| 2.1 m (7 ft) CAT5 Ethernet cable | | NTYS13AA |
| Accessories | | |
| Key cap removal tool | | NTNM19AA |

Table 56
IP Phone 1150E component list (Part 2 of 2)

| | | |
|--|-------------|-----------------|
| Expansion Module for IP Phones 1100 Series | | NTYS08AA |
| Power adapter | | |
| Global power supply | | N0089601 |
| IEC cable | RoHS | Non-RoHS |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 North America | NTYS14AAE6 | NTYS14AA |
| 2.4 m (8 ft), 240 VAC 10 amp, ANZ power cord AS-3, Australia, New Zealand | N/A | NTTK15AA |
| 250 VAC, Option 11C Standard European power cord, Other EMEA, Kenya, Korea, Thailand, Indonesia, Vietnam, India, Pakistan | NTTK16ABE6 | NTTK16AB |
| 3 m (9.9 ft) 125 VAC, Option 11C Swiss power cord Switzerland | NTTK17ABE6 | NTTK17AB |
| 240 VAC, Option 11C UK power cord Hong Kong, Ireland, United Kingdom, Singapore, Malaysia, Bangladesh, Brunei, Sri Lanka | NTTK18ABE6 | NTTK18AB |
| 3 m (9.9 ft), 125 VAC, Option 11C Denmark power cord Denmark | NTTK22ABE6 | NTTK22AB |
| Argentina | N/A | A0814961 |
| 1.8 m (5.9 ft), 10 amp, IEC320-C13 Japan | NTTK26AAE6 | N/A |

Installation and Configuration

The following sections provide a step-by-step guide through the IP Phone 1150E installation and configuration process:

- Before you begin

- First-time installation
- Configuring the IP Phone 1150E
- Startup sequence
- Installing the IP Phone 1150E

Before you begin

Before installing the IP Phone 1150E, complete the following pre-installation checklist:

- Ensure there is one IP Phone 1150E boxed package for each IP Phone 1150E being installed. The package contains:
 - IP Phone 1150E
 - 2.1 m (7 ft) CAT5 Ethernet cable
 - Getting Started Card
- Ensure there is one Software License for each IP Phone 1150E being installed.
- Ensure the host Call Server is equipped with the Voice Gateway Media Card, or a Signaling Server with the Line TPS application.
- If an AC power adapter is required, ensure the approved Nortel global power supply (model # N0089601) is used. See Table 56, “IP Phone 1150E component list,” on page 451.

First-time installation

You must first install an IP Telephony Node with the Communication Server. For information about installing an IP Telephony Node, see *Signaling Server: Installation and Configuration* (553-3001-212), or *IP Line: Description, Installation, and Operation* (553-3001-365).



CAUTION

Damage to Equipment

Do not plug your IP Phone 1150E into an ISDN connection. Severe damage can result.

Configuring the IP Phone 1150E

You must configure the IP Phone 1150E before you can use it. Use Procedure 79 to configure the IP Phone 1150E for the first time.

Procedure 79

Configuring an IP Phone 1150E

- 1 Configure a virtual loop on the Call Server using LD 97.

For more information about configuring a virtual loop, see *IP Line: Description, Installation, and Operation* (553-3001-365), and *Software Input/Output: Administration* (553-3001-311).

- 2 Configure the IP Phone 1150E in LD 11.

LD 11—Configure the IP Phone 1150E on the Call Server

| Prompt | Response | Description |
|--------|------------|---|
| REQ | NEW | Add new |
| TYPE | IPACD | For the IP Phone 1150E |
| TN | lscu cu | 99 9 |
| DES | a...x | Enter acd |
| CUST | 0 | |
| ... | ... | ... |
| KEM | 0-3 | Enter 0 if no Expansion Modules for IP Phones 1100 Series are added. 1 to 3 correspond to the number of Expansion Modules for IP Phones 1100 Series attached to the IP Phone. |
| ZONE | 0 | |
| ... | ... | ... |
| CLS | aaa | Same as IP Phone 2004 |

LD 11—Configure the IP Phone 1150E on the Call Server


| Prompt | Response | Description |
|--------|----------|---|
| ... | ... | ... |
| KEM | 0-3 | Enter 0 if no Expansion Modules for IP Phones 1100 Series are added. 1 to 3 correspond to the number of Expansion Modules for IP Phones 1100 Series attached to the IP Phone. |

For more information, see *Software Input/Output: Administration* (553-3001-311).

**CAUTION**


The IP Phone 1150E is shipped with the stand locked in position. To avoid damaging the IP Phone, press the wall-mount lever located under the base to release the stand and pull it away from the phone. See Figure 45 on [page 456](#).

Figure 45
Release the IP Phone 1150E from the stand

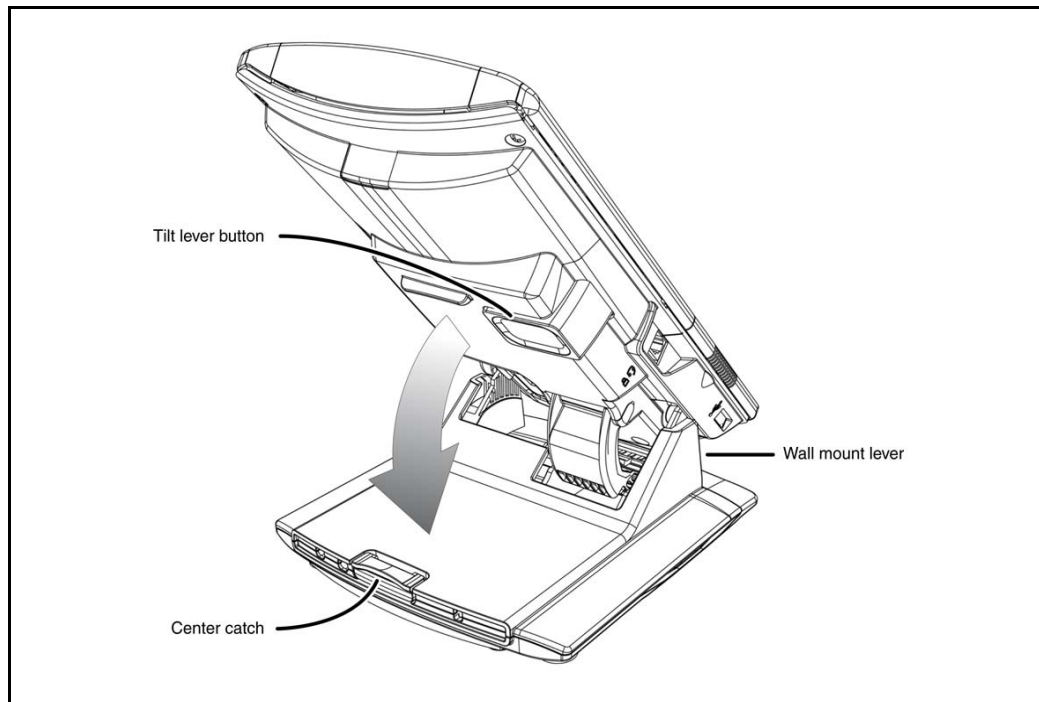

- 1 Remove the stand cover. Pull upward on the center catch and remove the stand cover. The cable routing tracks are now accessible. See Figure 46 on [page 457](#).

Figure 46
Release the IP Phone 1150E from the stand

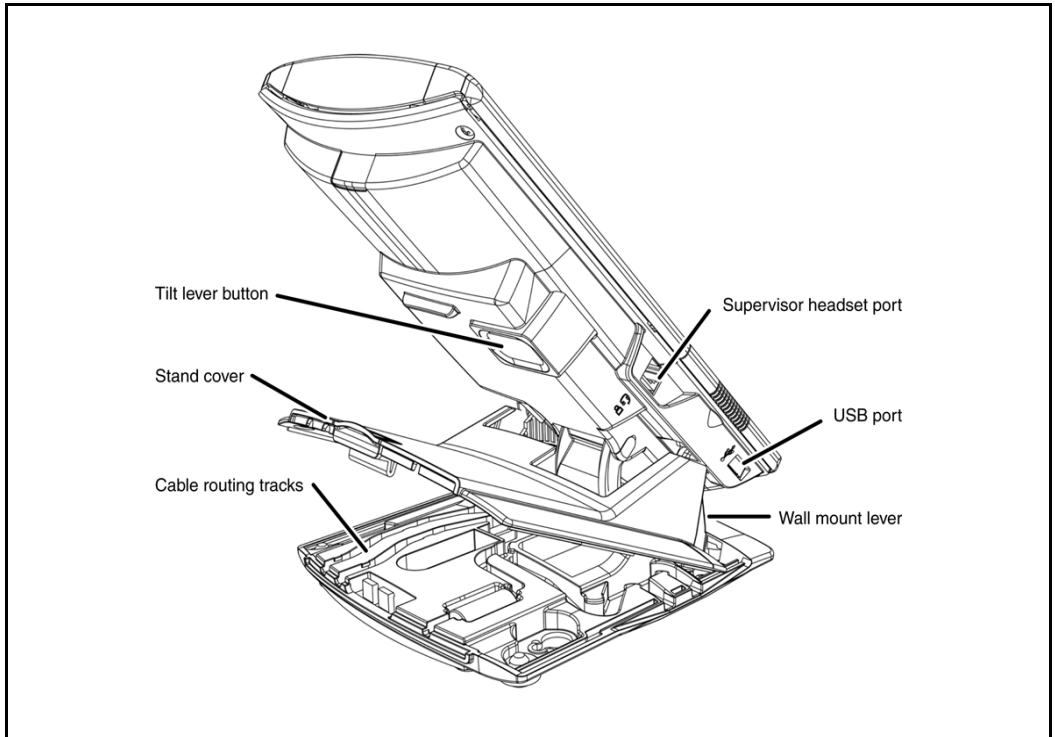

- 2 Connect the AC power adapter (optional). Leaving the AC adapter unplugged from the power outlet, connect the adapter to the AC adapter jack in the bottom of the phone. Form a small bend in the cable, and then thread the adapter cord through the channels in the stand.


WARNING

Use your IP Phone 1150E with the approved Nortel global power supply (model # N0089601).

Note 1: The IP Phone 1150E supports both AC power and Power over Ethernet options, including IEEE 802.3af Power Classification 3. To use Power over Ethernet, where power is delivered over the CAT5 cable, the LAN must support Power over Ethernet, and an AC adapter is not required. To use local AC power, the optional AC adapter can be ordered separately.

Note 2: You must use CAT5e (or later) cables if you want to use gigabit Ethernet.


Figure 47
IP Phone 1150E connections

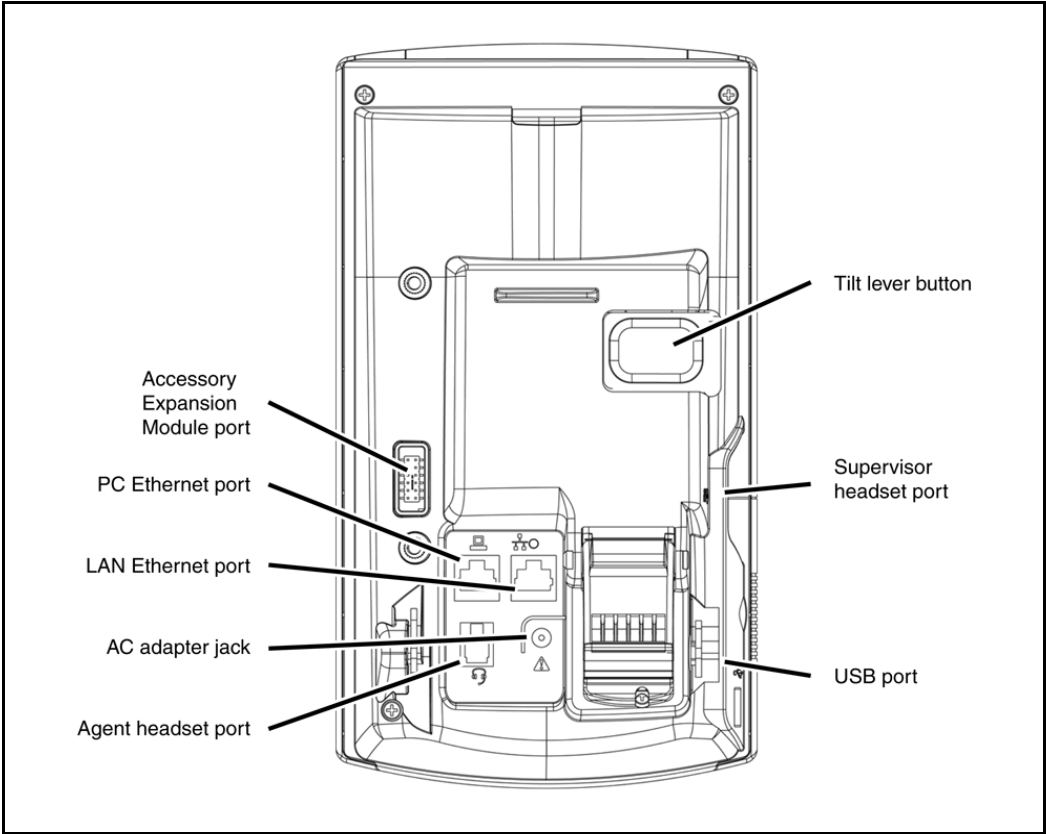

- 3 Install the headset. If you are installing a headset, plug the connector into the RJ-9 headset jack marked with the symbol) on the back of the phone, and thread the headset cord along with the handset cord through the channels in the stand, so that the headset cord exits the channel marked with the symbol).

Note: Although a handset cord channel appears on the base of the IP Phone 1150E, the IP Phone 1150E does not support a handset port.

Figure 48
Cable routing tracks

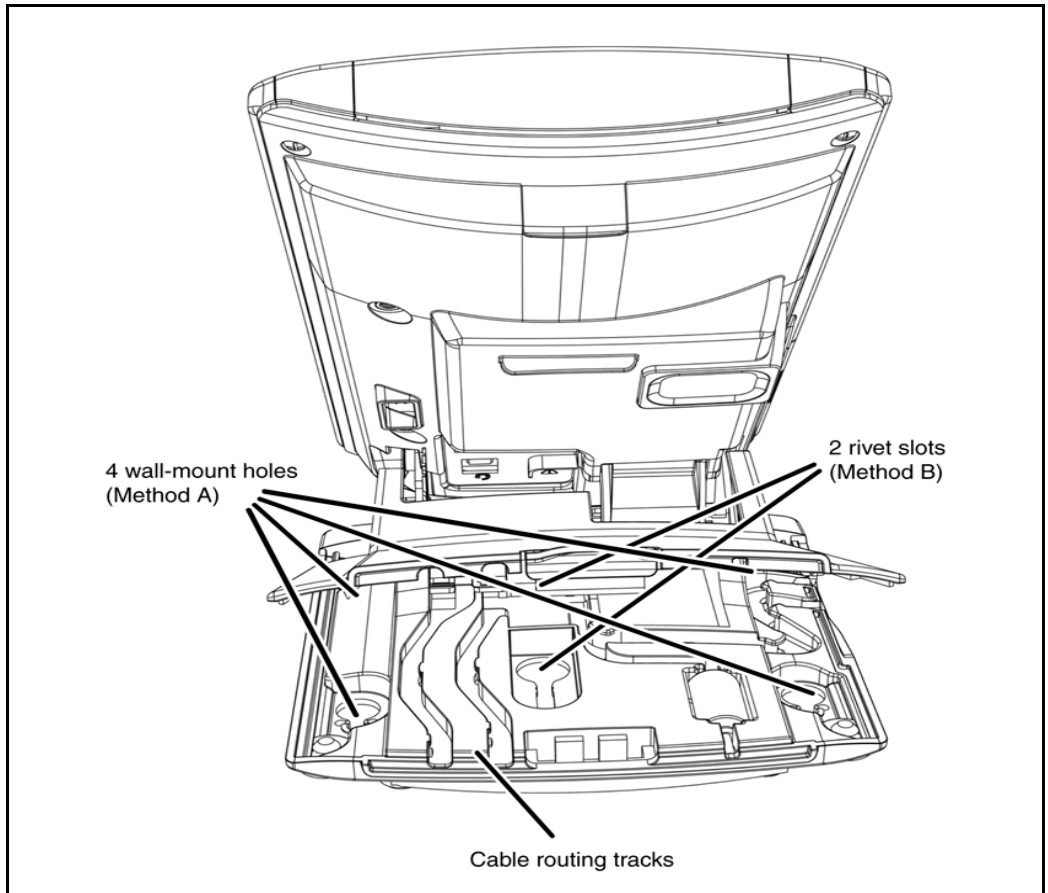

- 4 Install the Ethernet cable. Connect one end of the supplied Ethernet cable to the back of your phone using the RJ-45 connect marked with the symbol%, and thread the network cable through the channel marked with
- 5 If you are connecting your PC through the phone, you will require a second CAT5 cable. Only one cable is included with the IP Phone 1150E package. Install the Ethernet cable connecting the PC to the phone (optional). Connect one end of the PC Ethernet cable to your phone using the RJ-45 connector marked with the symbol (, and thread it through the channel marked with the symbol (. Connect the other end to the LAN connector on the back of your PC.



CAUTION

Damage to Equipment

Do not plug any device into your IP Phone 1150E Ethernet port other than a PC. The IP Phone 1150E does not support multiple devices connected through the PC Ethernet port.

- 6 Install additional cables. If applicable, plug in optional USB devices. Connect the Ethernet cable to the LAN Ethernet connection. If you are using an AC power adapter, plug the adapter into an AC outlet.

Note: Complete steps 1 to 8, as needed, before wall-mounting the IP Phone.
- 7 Wall-mount your phone (optional). Use Method A or Method B to wall-mount the IP Phone. See Method A—using the mounting holes on the bottom of the phone stand, or Method B—using the traditional-style wall-mount box with a RJ-45 connector and a 15 cm (6 inch) RJ-45 cord (not provided).

- Method A: Press the wall-mount lever, and pull away from the stand. Using the stand cover (see step 1 on [page 456](#)), mark the wall-mount holes by pressing the bottom of the stand cover firmly against the wall in the location where you wish to install the phone. Four small pins on the bottom of the stand cover make the marks on the wall. Use the marks as a guideline for installing the wall-mount screws (not provided).

Install the screws so that they protrude 3 mm (1/8 inch) from the wall, and then install the phone stand mounting holes over the screw heads. You may need to remove the phone from the wall to adjust the

lower screws. When the lower screws are snug, install the phone on the mounting screws, and then tighten the top screws.

- Method B: Attach the 15 cm (6 inch) CAT5e cable, position the stand over the mounting rivets, and slide the phone down the wall so that the rivets fit into the slots on the stand.

- 8 Replace the stand cover. Ensure that all cables are neatly routed and press the stand cover into place until you hear a click.
- 9 Put the phone in the wall-mount position (optional). If you wall-mount the phone, put it in the wall-mount position by holding the Tilt Lever and press the phone towards the base until the phone is parallel with the base. Release the Tilt Lever and continue to push the phone towards the base until you hear an audible click. Ensure the phone is securely locked in to position.

End of Procedure

Startup sequence

When an IP Phone 1150E is connected to the network, it must perform a startup sequence. The elements of the startup sequence include:

- obtaining VLAN ID (if supported by the network infrastructure)
- obtaining the IP parameters
- connecting to the Call Server
- obtaining a User ID

See Table 57 for a summary of the IP parameters and how they are obtained.

Table 57
IP Phone 1150E IP parameters (Part 1 of 2)

| Parameter | Method of acquisition |
|------------|--|
| VLAN ID | Manually entered or automatically obtained through DHCP, and LLDP. |
| IP Address | Manually entered or automatically obtained through Partial or Full DHCP. |

Table 57
IP Phone 1150E IP parameters (Part 2 of 2)

| Parameter | Method of acquisition |
|---|--|
| Net Mask | Manually entered or automatically obtained through Partial or Full DHCP. |
| Default Gateway address | Manually entered or automatically obtained through Partial or Full DHCP. |
| Connect Server (IP address, port, action and retry count—primary and secondary) | Manually entered or automatically obtained through Full DHCP. |
| User ID (Node ID, Node Password and TN) | Manually entered for first-time configuration. Obtained from local storage on subsequent power cycles. |

Installing the IP Phone 1150E

To install the IP Phone 1150E, use Procedure 80 on [page 463](#).

Procedure 80
Installing the IP Phone 1150E for the first time
using manual configuration

IMPORTANT!

Timing information

There are approximately 45 seconds (s) between plugging in the IP Phone 1150E power adapter and the appearance of the text Nortel. When you see the text Nortel on the phone, you have one s to respond by pressing the four soft keys at the bottom of the display in sequence from left to right, one at a time. If you miss the one-s response time, the IP Phone 1150E attempts to locate the connect server. You can begin the power-up sequence again, or you can double-press the Services key to open the Local diagnostic utilities to access the IP Phone settings. See Appendix Appendix E:: "IP Phone diagnostic utilities" on [page 525](#).

Note: If you are prompted to enter a password when you double-press the Services key, password protection is enabled. For more information about password protection, see "Local Tools menu password protection" on page 446.

- 1 When the Nortel logo appears in the middle of the display, immediately press the four soft keys at the bottom of the display in sequence from left to right. The **3. Network Configuration** menu opens.

Note: You can press the **Apply&Reset** soft key to save the following settings and to reset the IP Phone. You can press the **Exit** soft key exit the menu to exit the menu without saving any changes and return to the **3. Network Configuration** menu.

When the **3. Network Configuration** menu opens, the **Enable 802.1x (EAP)** check box is highlighted.

- 2 Press the **Enter** key to toggle this item on and off. A check mark appears to indicate the item is active.

If 802.1x Authentication is enabled, press the **Enter** key to start the edit mode. Use the dialpad to fill in the following information:

- Device ID
- Password
- Retype password

For further information about 802.1x Authentication, Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Note: If you do not enable 802.1x Authentication, you will not be prompted to enter Device ID and Password.

- 3 Use the **Right** navigation key to scroll and highlight **Enable 802.1x (LLDP Enable)**. check box.

For information about 802.1x Authentication, see Appendix Appendix D:: “802.1ab Link Layer Discovery Protocol” on [page 523](#).

- 4 Use the **Right** navigation key to scroll and highlight **DHCP** combo box.
- 5 Press the **Enter** key.
- 6 Press the **Down** navigation key to open list box.
- 7 Use the **Up/Down** navigation keys to scroll and highlight one of the following DHCP options:

- No—disable DHCP support and enter IP network information manually.
- Partial—IP network information (IP address, network mask, and gateway address) are provided by the DHCP server. Enter Server 1 IP address, Server 2 IP address, Port, Action, Retry, and PK numbers manually.
- Full—IP network information, Server 1 IP address, Server 2 IP address, and XAS information are provided by the DHCP server. All items are dimmed to prevent manual entry.

Note: A DHCP server and DHCP relay agents must also be installed, configured, and running if you choose Partial DHCP, or Full DHCP configuration.

For more information on how to set up DHCP servers for use with the IP Phones, see *Data Networking for Voice over IP* (553-3001-160).

- 8 Press the **Enter** key.
- 9 Use the **Right** navigation key to scroll and highlight **SET IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.
Set IP—a valid IP Phone 1150E IP address
- 10 Use the **Right** navigation key to scroll and highlight **NET MASK**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Net Mask—a subnet mask

- 11** Use the **Right** navigation key to scroll and highlight **Gateway**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Gateway—the default gateway for the IP Phone 1150E on the LAN segment to which it is connected

- 12** Use the **Right** navigation key to scroll and highlight **S1 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S1 IP—the primary CS 1000 node IP address for the IP Phone 1150E

- 13** Use the **Right** navigation key to scroll and highlight **Port**.

S1 Port—a fixed value of 4100

- 14** Use the **Right** navigation key to scroll and highlight **S1 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 15** Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—the number of times the IP Phone 1150E attempts to connect to the server

- 16** Use the **Right** navigation key to scroll and highlight **S1 PK**.

S1 PK—the Private key of the Secure Media Controller to which the IP Phone is connected

- 17** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Enter 6 or 1.

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 18** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffff.

- 19** Use the **Right** navigation key to scroll and highlight **S2 IP**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

S2 IP—the secondary CS 1000 node IP address for the IP Phone 1150E

Note: The IP Phone 1150E can support a primary (S1) and secondary (S1) connect server. If you require IP Phones to register on multiple nodes, see *IP Line: Description, Installation, and Operation* (553-3001-365).

- 20** Use the **Right** navigation key to scroll and highlight **Port**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Port—same as S1 port

- 21** Use the **Right** navigation key to scroll and highlight **S2 Action**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Choose one of the following:

- for TPS only, enter 1
- for TPS and Secure Media Controller, enter 6 or 1

For more information about Secure Media Controller, see *Secure Media Controller: Implementation Guide* (553-3001-225).

- 22** Use the **Right** navigation key to scroll and highlight **Retry**. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

Retry—same as S1

- 23** Use the **Right** navigation key to scroll and highlight **S2 PK**.

S2 PK—the Private key of the alternate Secure Media Controller to which the IP Phone is connected

- 24** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. Set the S2 PK to 6 or 1.

- 25** Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information. You must enter a 16-digit hexadecimal number. The default is ffffffffffffffff.

- 26** Use the **Right** navigation key to scroll and highlight **VoiceVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

27 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- DHCP—VLAN ID is configured automatically to one of the values received from the DHCP server
- LLDP MED—VLAN ID is configured automatically to the value received from 802.1ab LLDP
- LLDP VLAN Name—VLAN ID is configured automatically to the value received from 802.1ab LLDP

Note: If LLDP is disabled, LLDP MED and LLDP VLAN Name modes do not appear in the list. If DHCP is disabled, DHCP does not appear in the list.

For more information about VLAN configuration, see *Data Networking for Voice over IP* (553-3001-160).

28 Press the **Enter** key.

29 Use the **Right** navigation key to scroll and highlight **VLAN Filter** check box. Press the **Enter** key to toggle this item on and off.

If the VLAN Filter is enabled, packets destined for the IP Phone port are filtered on their MAC address and their VLAN tag. Untagged VLAN packets and tagged VLAN packets that differ from the Telephony VLAN ID are prevented from reaching the IP Phone port.

For information about VLAN tagging, see Appendix Appendix B:: “802.1Q VLAN description” on [page 511](#).

Note: The **VLAN Filter** check box will appear dimmed if you select **No** in the **VoiceVLAN** combo box.

30 Use the **Right** navigation key to scroll and highlight **Disable PC Port** check box. Press the **Enter** key to toggle this item on and off.

31 Use the **Right** navigation key to scroll and highlight **DataVLAN** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

- 32 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- No VLAN
- LLDP VLAN Name—VLAN ID is configured automatically to the value received in the VLAN NAME TLV
- VLAN ID value—Enter the VLAN ID manually. This is a number between 1 and 4094.

Note: If LLDP is disabled, LLDP VLAN Name does not appear in the list.

- 33 Press the **Enter** key.

- 34 Use the **Right** navigation key to scroll and highlight **PC-Port Untag All** check box. Press the **Enter** key to toggle this item on and off.

If DATA VLAN is enabled, the tag on all traffic destined for the PC port is stripped, by default. To override this action, deselect the PC-Port Untag All check box. If DATA VLAN is disabled, the tag on all traffic destined for the PC port is not stripped. To override this action, select the PC-Port Untag All check box.

For information about PC port tag stripping, see Appendix Appendix B: “802.1Q VLAN description” on [page 511](#).

- 35 Use the **Right** navigation key to scroll and highlight **Duplex** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

- Auto—Link speed is auto negotiated with the network device and attached PC
- 10BT Full—Link speed is available for up to 10 Megabit Full Duplex on the network and the PC port.
- 100BT Full—Link speed is available for up to 100 Megabit Full Duplex on the network and the PC port.
- 1000BT Full—Link speed is available for up to 1000 Megabit Full Duplex on the network and the PC port.

For more information about Full Duplex, see “Full Duplex mode” on page 471.

- 36 Use the **Right** navigation key to scroll and highlight **Enable PSK SRTP:** check box. Press the **Enter** key to toggle this item on and off.

The SRTP media encryption feature provides encrypted media. A preshared secret is embedded in the Nortel IP Phone to generate and to exchange encryption parameters without any Call Server involvement.

For further information about the SRTP media encryption feature, “SRTP media encryption” on page 498 and *System Security Management (NN43001-604)*.

- 37** Use the **Right** navigation key to scroll and highlight **Ignore GARP** check box. Press the **Enter** key to toggle this item on and off.

The GARP feature protects the IP Phone from a Gratuitous ARP Spoof attack from the network.

For more information about GARP, see “Gratuitous Address Resolution Protocol Protection” on page 473.

- 38** If an External Application Server (XAS) is available in the network, use the **Right** navigation key to scroll and highlight the **XAS IP** combo box. Use the dialpad to enter the XAS IP address.

The XAS delivers business applications to the IP Phone. For more information about XAS, see Nortel Application Gateway 1000 documentation.

- 39** If the XAS supports graphical displays, use the **Right** navigation key to scroll and highlight **Graphical XAS** check box. Press the **Enter** key to toggle this item on and off.

- 40** Use the **Right** navigation key to scroll and highlight **Port** combo box. Press the **Enter** key to start the edit mode. Use the dialpad to fill in the information.

- 41** Use the **Right** navigation key to scroll and highlight **Enable Bluetooth** combo box. Press the **Enter** key. Press the **Down** navigation key to open the list box.

Note: Only the Agent port supports Bluetooth wireless technology.

- 42** Use the **Up/Down** navigation keys to scroll and highlight one of the following options:

- Auto—(default) Bluetooth wireless technology setting received through TFTP configuration
- Yes—Bluetooth wireless technology is enabled on the IP Phone
- No—Bluetooth wireless technology is disabled on the IP Phone

For further information about Bluetooth wireless technology, Appendix Appendix G:: “Bluetooth wireless technology” on [page 591](#).

- 43** Upgrade the IP Phone 1150E firmware.

Use the **Right** navigation key to scroll and highlight **TFTP IP** combo box. The IP Phone 1150E supports remote firmware upgrades through a TFTP process and an automated UFTP process.

The method to upgrade the firmware depends on the following Call Server software:

- For Succession Release 3.0 or CS 1000 Release 4.0, the TFTP Server is required to download the current firmware. Enter the TFTP Server IP address at the prompt.
- For CS 1000 Release 4.5 and later, use either a TFTP Server to upgrade the firmware (at the prompt accept the default entry of 0.0.0.0), or UFTP to download the current firmware.

For further information about TFTP Server configuration, see Appendix Appendix H:: "TFTP Server" on [page 605](#).

For Succession Release 3.0 and CS 1000 Release 4.0, the IP Phone 1150E searches for the TFTP Server for firmware upgrade. If the file name specified in 1150e.cfg is not the same as the current firmware, the IP Phone downloads the file and upgrades the firmware. This takes several minutes. When the upgrade is complete, the IP Phone 1150E reboots.

Note: The Enhanced UNISTim firmware download is only supported on CS 1000 Release 4.5, or later. The Enhanced UNISTim firmware download feature for IP Phones provides an improved method of delivering new firmware to IP Phones. For further information on Enhanced UNISTim Firmware Download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

The IP Phone 1150E searches for the connect server.

The IP Phone 1150E registers with the Terminal Proxy Server (TPS) and, if needed, begins the firmware download. This takes several minutes. When download is complete, the IP Phone 1150E resets.

The current system date and time appear on the top line of the display when the configuration is complete. Self-labeling keys also appear.

- 44 Check for dial tone and the correct DN on the display.
- 45 (Optional) Customize the feature keys as required. For more information, see For more information, see *Software Input/Output: Administration* (553-3001-311) and the *IP Phone 1150E User Guide*.

End of Procedure

Full Duplex mode

In the **Configuration** menu, Auto Negotiate mode is the default setting for initial startup. Typically, the IP Phone is connected to a network that supports Auto Negotiate, and it selects the best speed and duplex mode available. There is no intervention required under normal operation.

Note: Changing the speed and/or duplex mode on the phone changes both the LAN Ethernet port and PC Ethernet Port interfaces.

IMPORTANT!

It is recommended that Auto Negotiate mode is used on the network and the IP Phone. Use Full Duplex mode only when the network is forced Full Duplex for 100BT Full Duplex mode, otherwise a duplex mismatch will result.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

Use Procedure 81 to enable Full Duplex mode.

Procedure 81 **Enabling Full Duplex mode**

- 1 Double-press the **Services** key to open the **Local Tools** menu.
- 2 Press **3** on the dialpad to access the **Network Configuration** menu or use the Up/Down navigation keys to scroll and highlight the Network Configuration option.
- 3 Use the **Right** navigation key to scroll and highlight the **Duplex** combo box.
- 4 Press **Enter** to start the edit mode.
- 5 Press the **Down** navigation key to open list box.

- 6 Use the **Up/Down** navigation keys to scroll and highlight one of the following options:
 - 10BT Full—10 BT Full Duplex mode
 - 100BT Full—100 BT Full Duplex mode
- 7 Press **Enter** to exit the edit mode.
- 8 Press the **Apply&Reset** soft key to save the changes and to restart the IP Phone 1150E. The firmware settings are read and are applied to UPLINK and the PC Ethernet Port.

End of Procedure

When the IP Phone is restarted, the firmware reads the setting for Full Duplex mode and sets the LAN Ethernet port, PC Ethernet port, duplex, and speed accordingly.

Use the following procedure to confirm activation of Full Duplex mode.

Procedure 82

Checking Ethernet Statistics

- 1 Double-press the **Services** key to open the **Local Tools** menu.
- 2 Press **2** to select **Local Diagnostics**, then press **3** to open the **Ethernet Statistics** menu.

If Full Duplex mode is active, the following is displayed:

- Link Status: UP
- Duplex Mode: Full
- Network Speed: 10 Mb, 100 Mb or 1G
- Auto Sense/Negotiate
 - Auto-Negotiate Capability: No
 - Auto-Negotiate Completed: No

End of Procedure

TFTP firmware upgrade

When you enter the IP address of the TFTP Server, the phone searches for an upgrade file on the TFTP Server.

Note: Users of CS 1000 Release 4.5 or later do not need to enter a TFTP IP address.

For further information about TFTP firmware upgrade, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

Gratuitous Address Resolution Protocol Protection


Gratuitous Address Resolution Protocol (GARP) Protection protects the IP Phone 1150E from GARP Spoof attacks on the network. In a GARP Spoof attack, a malicious device on the network takes over an IP address (usually the default gateway) by sending unsolicited (or Gratuitous) ARP messages, thus manipulating the ARP table of the victim’s machine. The malicious device launches a variety of attacks on the network, resulting in undesired traffic routing. For example, a GARP attack can convince the victim machine that the malicious device is the default gateway. In this scenario, all traffic from the victim’s machine flows through the malicious device.

To enable GARP Protection during configuration, see Procedure 79, “Configuring an IP Phone 1150E” on page 454.

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) is a general protocol that fulfills the protocol requirements defined by 802.1x. For further information on 802.1x, see Appendix Appendix C:: “802.1x Port-based network access control” on [page 521](#).

Bluetooth wireless technology

The IP Phone 1150E supports Bluetooth wireless technology  Bluetooth®. For information about configuring Bluetooth wireless technology on the IP Phone 1150E, see Appendix Appendix G:: “Bluetooth wireless technology” on [page 591](#).

Reinstalling an IP Phone 1150E

You can reinstall an existing previously configured IP Phone 1150E on the same system. For example, the IP Phone 1150E can be assigned to a new user (new TN) or to an existing user who moved to a new subnet by changing the TN of the IP Phone 1150E.

Procedure 83 Changing the TN of an existing IP Phone 1150E

- 1 Repower the IP Phone 1150E.

Note: During the reboot sequence of a previously configured IP Phone, the IP Phone 1150E displays the existing node number for approximately five seconds.
- 2 If the node password is enabled and NULL, choose one of the following:
 - a. Disable the password.
 - b. Set the password as non-NULL.
- 3 Press **OK** when the node number displays.

| If | Then |
|--|---|
| the node password is enabled and is not NULL | a password screen displays. Go to step 4. |
| the node password is disabled | a TN screen displays. Go to step 5. |
- 4 Enter the password at the password screen, and press **OK**.
A TN screen displays.

Note: To obtain the password, enter the nodePwdShow command in Element Manager. For further information, see *Communication Server 1000 Element Manager: System Administration* (553-3001-332).
- 5 Select the **Clear** soft key to clear the existing TN.
- 6 Enter the new TN.

End of Procedure

Replacing an IP Phone 1150E

IMPORTANT!

Two IP Phones cannot share the same TN. You must remove the IP Phone 1150E that is currently using the TN.

Procedure 84 **Replacing an IP Phone 1150E**

- 1 Obtain the node and TN information of the phone you want to replace.
- 2 Disconnect the IP Phone 1150E that you want to replace.
- 3 Follow Procedure 79 on [page 454](#) to install and configure the IP Phone 1150E.
- 4 Enter the same TN and Node Number as the IP Phone 1150E you replaced. The system associates the new IP Phone 1150E with the existing TN.

End of Procedure

Removing an IP Phone 1150E from service

Procedure 85 **Removing an IP Phone 1150E from service**

- 1 Disconnect the IP Phone 1150E from the network or turn the power off.

Note: The service to the PC is disconnected as well if the PC is connected to the IP Phone 1150E.

If the IP Phone 1150E was automatically configured, the DHCP lease expires and the IP address returns to the available pool.

- 2 In LD 11, enter OUT at the TN prompt.

End of Procedure

Expansion Module for IP Phone 1100 series

Contents

| | |
|---|-----|
| Description | 477 |
| Features | 479 |
| Display characteristics..... | 480 |
| Package components | 480 |
| Configuration | 481 |
| Installation..... | 482 |
| Expansion Module startup initialization | 486 |
| Operating parameters | 488 |
| IP Phone 1120E | 488 |
| IP Phone 1140E and IP Phone 1150E | 488 |
| Services key operation | 489 |
| Display diagnostics..... | 490 |
| Set Info | 491 |
| Firmware | 492 |

Description

The Expansion Module for IP Phones 1100 Series (Expansion Module) is supported on the following IP Phones:

- IP Phone 1120E
- IP Phone 1140E

- IP Phone 1150E

The Expansion Module is a hardware component that connects to the IP Phones and provides additional line appearances and feature keys.

Up to three Expansion Modules are supported on the IP Phones. With three Expansion Modules, the IP Phones provide up to 54 additional line/ feature keys.

The IP Phone 1140E and IP Phone 1150E can also provide up to 36 additional line/feature keys using the Shift key functionality and one Expansion Modules. With more than one Expansion Modules connected, the Shift key functionality does not affect the Expansion Modules since the maximum number of line/feature keys is already available.

Note: The IP Phone 1120E does not support Shift key functionality.

Figure 49 on [page 479](#) shows an IP Phone 1140E with the Expansion Module for IP Phones 1100 Series attached.

Figure 49
IP Phone 1140E with Expansion Module for IP Phones 1100 Series



Features

The Expansion Module provides the following features:

- 18 self-labeled line/programmable feature keys provide up to 36 additional self-labeled line/programmable feature keys. Using the **Shift** key functionality, an IP Phone 1140E, for example, can have up to 66 additional logical self-labeled line/programmable feature keys.
- Upgradeable firmware using a TFTP or UFTP Server.
- A desk-mount bracket and structural baseplate connect the Expansion Module to an IP Phone, or to another Expansion Module.
- IP Phone and Expansion Module combination can be wall-mounted using the wall mount template provided.

Display characteristics

The Expansion Module has the following display characteristics:

- LCD display area—Each of the 18 physical keys on the Expansion Module has a 10-character display label beside the 18 self-labeled line/programmable feature keys (see Figure 49 on [page 479](#)). This label is set automatically, however, the user can edit the label using the controls on the IP Phone.
- adjustable display and contrast settings—Use the Contrast Adjustment option in the Telephone Options menu on the IP Phone to adjust the display and contrast settings. Any contrast changes you make on the IP Phone affect the Expansion Module. The Expansion Module and IP Phone do not have separate contrast adjustments.
- backlight—The local 48V power supply is required to operate the backlight on the Expansion Module; however, you can use either the local 48V power supply or Power over Ethernet (PoE) to operate all other Expansion Module functionality.

Package components

Table 58 shows the Expansion Module package component.

Table 58
Expansion Module component list

| | |
|---|------------|
| Expansion Module for IP Phone 1100 Series | NTYS08AAE6 |
|---|------------|

Configuration

Use LD 11 to configure the Expansion Module for IP Phones 1100 Series.

LD 11 - Configure the Expansion Module for IP Phones 1100 Series (Part 1 of 2)

| Prompt | Response | Description |
|----------|----------------------------|--|
| REQ: | NEW/CHG | Add new or change existing data. |
| TYPE | 1120,1140,1150 | For IP Phone1120E, IP Phone 1140E, and IP Phone 1150E |
| ... | ... | ... |
| KEM | (0) - 3/<CR> | Number of attached Expansion Modules (0). Up to three Expansion Modules are supported. |
| ... | ... | ... |
| CLS | KEM3 | KEM3 CLS must be defined |
| KEY | 0 - <see text>/<CR> | Key number range expanded to support number of Expansion Modules specified by KEM prompt. The range on the IP Phone is as follows: <div> <div>KEM value:</div> <div>KEY range:</div> <div>0</div> <div>0 - 31</div> <div>1</div> <div>32- 49</div> <div>2</div> <div>50- 67</div> <div>3</div> <div>68- 85</div> </div> |
| PAGEOFST | <Page> <KeyOff-set> / <CR> | PAGEOFST is prompted if one Expansion Modules is specified at the KEM prompt and <CR> is entered at the KEY prompt. This prompt enables you to enter a Page number of 0, or 1, and a Key Offset number from 0 to 17. Once entered, the KEY is prompted with the appropriate KEY value filled in. <CR> ends the input. |

LD 11 - Configure the Expansion Module for IP Phones 1100 Series (Part 2 of 2)

| Prompt | Response | Description |
|-----------|--------------------------------|--|
| KEY <key> | <keys conf data>/ <CR> | <key> is the key number for the Page + Key Offset entered at PAGEOFST. Enter the key's configuration <CR> or just <CR>. |
| KEMOFST | <KEM> <Key-Off- set> / <CR> | KEMOFST is prompted if two or three Expansion Modules are specified at the KEM prompt and <CR> is entered for KEY prompt. This prompt enables you to enter a KEM number of 1, 2, or 3 and a KEY Offset number from 0 to 17. Once entered, the KEY prompt is prompted with the appropriate KEY value filled in. <CR> ends the input. |
| KEY <key> | <keys conf data>/ <CR> | <key> is the key number for the KEM + Key Offset entered at KEYOFST. Enter the key's configuration <CR> or just <CR>. |

Installation

The Expansion Module mounts on the right side of the IP Phone. The Expansion Module snaps into the receptacle on the back of the IP Phone using the desk-mount bracket and structural baseplate supplied with the Expansion Module.

The Expansion Module connects to the IP Phone using the Accessory Expansion Module (AEM) port on the IP Phone.

Use Procedure 86 to connect the Expansion Module to the IP Phone.

Procedure 86
Connecting the Expansion Module for
IP Phones 1100 Series to the IP Phone**Damage to Equipment**

To avoid damaging the equipment, remove the power (PoE cable, or local power) from the IP Phone before connecting the Expansion Module.

**CAUTION**

The Expansion Module is shipped with the base locked in position. To avoid damaging the Expansion Module, press the wall-mount lever, located on the base at the front of the Expansion Module.

- 1 Press the wall-mount lever to adjust the stand angle on the IP Phone. See Figure 50. You can adjust the stand angle to maximum, instead of removing the stand. See Figure 51 on [page 484](#).

Figure 50
Wall-mount lever



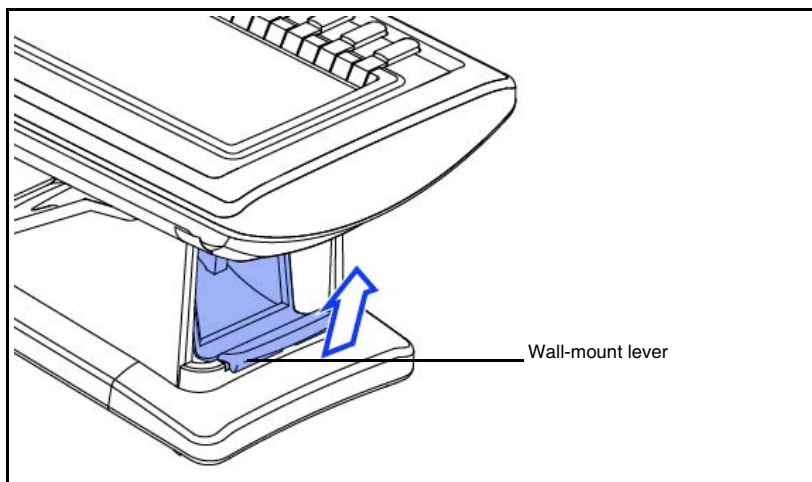


Figure 51
Adjusting the stand angle on the IP Phone

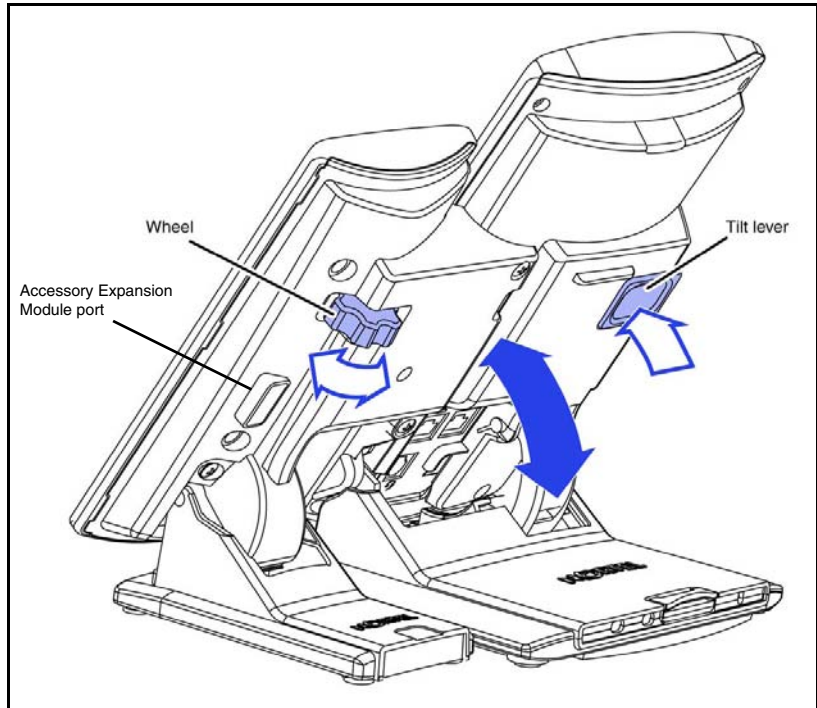

- 2 At the back of the IP Phone, remove the rubber plug from the Accessory Expansion Module (AEM) port. Place the connecting arm of the Expansion Module behind the IP Phone and align the Expansion Module connection plug to the AEM port on the back of the IP Phone.
- 3 Insert the screws in to the top and bottom holes of the connecting arm of the Expansion Module and tighten until snug. See Figure 52 on [page 485](#).

Figure 52
Connecting the Expansion Module

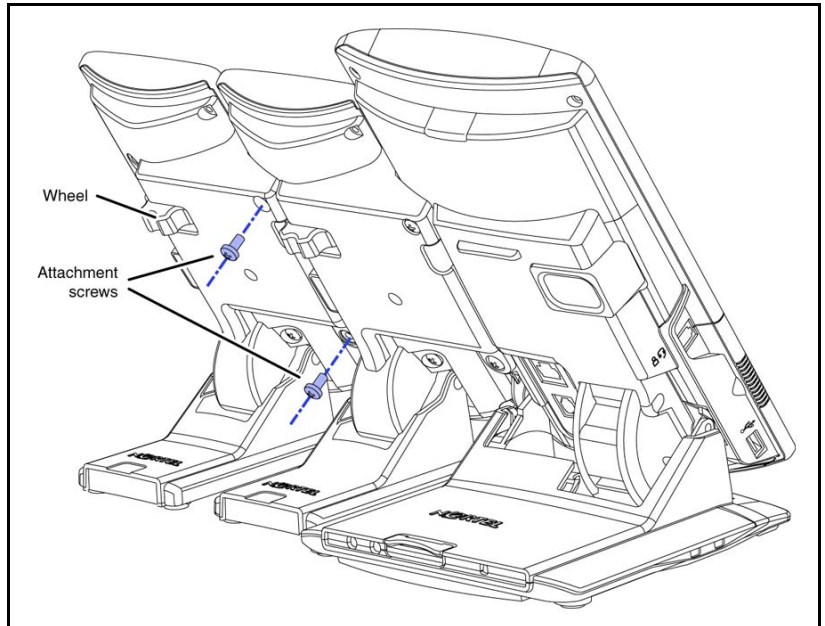

- 4 If connecting a second, or a third Expansion Module, repeat steps 2 to 4.

Note: The second Expansion Module is attached to the right side of the first Expansion Module. The third Expansion Module is attached to the right side of the second Expansion Module.

- 5 Adjust the height of the IP Phone tilt adjustment to a comfortable viewing angle. Then adjust each of the Expansion Module footstands so they are flush to the desk surface. Turn the wheel on the back right side of the Expansion Module to the right (if viewed from the front) to tighten the Expansion Module.



CAUTION

Do not over tighten the wheel on the Expansion Module.

- 6 Connect power to the IP Phone. The Expansion Module powers up.

Note: The Expansion Module uses the electrical connection of the IP Phone for power. It does not have its own power source.

End of Procedure

Expansion Module startup initialization

After the Expansion Module for IP Phones 1100 Series is been installed and powered up on the IP Phone, the Expansion Module for IP Phones 1100 Series initializes.

Table 59 lists the initialization process for the Expansion Module.

Table 59
Startup initialization process for the Expansion Module

| Phase | Description |
|---|--|
| 1 Expansion Module performs self-test | <p>The self-test confirms the operation of the Expansion Modules local memory, CPU, and other circuitry. While undergoing this self-test, the Expansion Modules display lights up.</p> <p>Note: If the Expansion Modules display does not light up, or lights up and then goes blank, or fails to begin flashing, check that the Expansion Modules is correctly installed and configured.</p> <p>Note:</p> |
| 2 Expansion Module establishes communication with the IP Phone | <p>The Expansion Modules display flashes until it establishes communication with the IP Phone.</p> <p>If the Expansion Modules display does not stop flashing, communication is not established with the IP Phone. Check that the Expansion Modules is correctly installed and configured.</p> |
| 3 Expansion Module downloads key maps | <p>The key labels download to the Expansion Modules. During the download, the display is blank.</p> |

When the three phases complete successfully, you are ready to use the additional self-labeled line/programmable feature keys on the Expansion Module.

If you have a second or a third Expansion Module installed on your IP Phone, the one to the immediate right of the IP Phone must be functional so that subsequent Expansion Module to work. This is necessary because the second Expansion Module receives its power, and communicates with the IP Phone, through the first Expansion Module; and the third Expansion Module receives its power, and communicates with the IP Phone, through the second Expansion Module.

Operating parameters

If the Expansion Module does not respond, and lines or features are configured on keys 32 to 85, calls can be directed to those keys which the user cannot access. This means that the IP Phone rings, but the call cannot be answered. In such cases, the incoming call receives Call Forward No Answer (CFNA) treatment.

IP Phone 1120E

Note: The IP Phone 1120E does not support Shift key functionality.

If only one Expansion Module is configured in LD 11, but two or three Expansion Modules are detected on an IP Phone 1120E, the second and third Expansion Modules are ignored. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If two Expansion Modules are configured in LD 11, but only one Expansion Module responds, the keys on the second Expansion Module are available for call processing but are not accessible to the user. This means that lines and features on keys 32 to 67 can cause the IP Phone 1120E to ring, but there is no way to answer it. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If three Expansion Modules are configured in LD 11, but only one or two Expansion Modules respond, the keys on the third Expansion Module are available for call processing but are not accessible to the user. This means that lines and features on keys 68 to 85 can cause the IP Phone 1120E to ring, but there is no way to answer it. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

IP Phone 1140E and IP Phone 1150E

If only one Expansion Module is configured in LD 11, but two or three Expansion Modules are detected on the IP Phone, the Terminal Proxy Server (TPS) assigns keys 50 to 67 to the second Expansion Module. The third Expansion Module does not have keys assigned until it is configured in

LD 11. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If two Expansion Modules are configured in LD 11 but only one Expansion Module responds, the TPS assigns keys 32 to 67 to the single Expansion Module (using the Shift key functionality). An error message displays to alert the administrator that the hardware configuration does not match the administered configuration. When a second Expansion Module is detected, the TPS changes the key assignments to display across both Expansion Modules.

If two Expansion Modules are configured in LD 11 but three Expansion Modules respond, the TPS assigns the keys 32 to 67 to the first two Expansion Modules. The third Expansion Module does not have keys assigned until it is configured in LD 11. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration.

If three Expansion Modules are configured but only one Expansion Module responds, the TPS assigns the keys 32 to 67 to the single Expansion Module (using the Shift key functionality). When a second Expansion Module is detected, the TPS changes the key assignments to display across both Expansion Modules. Keys on the third Expansion Module are inaccessible.

If three Expansion Modules are configured in LD 11 but two Expansion Modules respond, the TPS assigns keys 32 to 85 to the first two Expansion Modules. An error message displays to alert the administrator that the hardware configuration does not match the administered configuration. When a third Expansion Module is detected, the TPS changes the key assignments to display across all three Expansion Modules.

Services key operation

The Services key is used to access user settings and certain features on the IP Phone. When one or more Expansion Modules are attached to the IP Phone, the actions of the display diagnostics for the IP Phones DN/feature key display area are duplicated for the Expansion Modules.

If an incoming call occurs when in the diagnostic mode, the call is answered by pressing the DN/feature key, handsfree, or headset key, or by picking up the handset. The display area remains in diagnostic mode until either the user exits the diagnostic more, or the idle timeout clears the mode. Once cleared, the normal display for the current state of the IP Phone is displayed.

Press the Services key to access the following menu items:

- Display diagnostics
- Set Info

Display diagnostics

Use the Up/Down navigation keys to scroll the Display diagnostics menu to access the following screens/diagnostic operations:

- initial screen
- Full Contrast
- LED Test
- Character Test

Initial screen

Instructions are displayed on the display area of the IP Phone and the Expansion Module. The DN/feature key display areas are blank.

Full Contrast

The IP Phone and the Expansion Module display areas are set to maximum (dark) contrast, including the DN/feature key areas. All LEDs are off.

LED Test

The IP Phone and the Expansion Module LEDs are set to on. The display area is cleared, including the DN/feature key display areas.

Character Test

The IP Phone and the Expansion Module LEDs are set to off. The available character set is displayed across all writable areas of the display, including the

DN/feature key display areas. The telephone on-hook icon is displayed for all DN/feature keys.

Table 60 shows the display diagnostic operation on the IP Phones and the Expansion Module for IP Phones 1100 Series.

Table 60
Display diagnostic operation on the IP Phone and the Expansion Module

| Diagnostic step | IP Phone DN/feature key display area | Expansion Module display area |
|------------------------|---|---|
| initial screen | blank | blank |
| Full Contrast | set to highest contrast | set to highest contrast |
| LED Test | blank | blank |
| Character Test | Characters display across the display areas, the telephone on-hook icon is displayed. | Characters display across the display areas, the telephone on-hook icon is displayed. |

Set Info

The Set Info menu displays the firmware version for the IP Phone and any attached Expansion Modules. The attached Expansion Modules are identified as KEM1, KEM2, and KEM3. KEM1 is the closest to the IP Phone. The Expansion Module identifies the firmware as a three character string; the TPS displays the firmware in an n.nn format.

Use the Up/Down navigation keys to scroll the list to display the firmware for each attached Expansion Module. The firmware version is displayed even if the Expansion Module is not configured in LD 11. In this case, the Expansion Module is identified in the display area by an asterisk (*) after the Expansion Module number (for example, KEM1*).

If an Expansion Module is configured but does not respond, the firmware version displays as <unknown>.

Firmware

The Expansion Module uses a TFTP or UFTP Server to upgrade the firmware. The firmware is downloaded to the IP Phone, which is then distributed to the each attached Expansion Module, one at a time. After the Expansion Module confirms to the IP Phone that the firmware file is downloaded and saved successfully, the IP Phone starts the download to the next attached Expansion Module.

If any error causes the firmware download to fail, or if the saved firmware file is corrupted, the Expansion Module reverts to the factory installed firmware. The factory installed firmware file is always available to facilitate firmware download in case the downloaded firmware is unusable.

For more information about TFTP Server firmware upgrade, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

For more information about Expansion Module, see the *Expansion Module for IP Phones 1100 Series User Guide (NN43130-101)*.

Features overview

Contents

| | |
|--|-----|
| Introduction | 493 |
| Corporate Directory..... | 494 |
| Personal Directory..... | 494 |
| Redial List..... | 495 |
| Callers List | 495 |
| Password Administration | 495 |
| IP Call Recording | 495 |
| Virtual Office | 496 |
| Emergency Services for Virtual Office..... | 496 |
| Active Call Failover | 496 |
| Enhanced UNISlim Firmware download | 497 |
| SRTP media encryption | 498 |

Introduction

This chapter provides an overview of the following software features available for IP Phones:

- Corporate Directory
- Personal Directory
- Redial List
- Callers List

- Password Administration
- IP Call Recording
- Virtual Office
- Emergency Services for Virtual Office
- Active Call Failover
- Enhanced UNISim Firmware download
- Secure Real-time Transport Protocol media encryption

Note: Personal Directory, Redial List, Callers List, Application Server Administration, Password Administration are software on the Signaling Server. An IP Phone must be registered to a Signaling Server to access these features.

Corporate Directory

The Corporate Directory feature extends the use of a system database, created from Optivity Telephony Manager (OTM) information, to the IP Phones. This database is downloaded and stored on the system CPU platform. For information about using Corporate Directory from IP Phones, see the appropriate user guide. For details about Corporate Directory, see *Features and Services* (553-3001-306).

Note: Corporate Directory is not supported on the IP Phone 2001, IP Audio Conference Phone 2033, and IP Phone 1110.

Personal Directory

Personal Directory allows an end user to create and control a personal directory. Up to 100 Personal Directory entries can be created, edited, copied from other sources, or deleted. (For information about using Personal Directory on IP Phones, see the appropriate user guide. For more information about the Personal Directory feature, see *Features and Services* (553-3001-306).) Personal Directory uses a separate central database, called the Application Server, to store directory data and end-user profile options.

Note: Personal Directory is not supported on the IP Phone 2001, IP Audio Conference Phone 2033, and IP Phone 1110.

Redial List

Redial List is a call log feature whose content is generated by the system during call processing. The list resides on the Application Server. An end user can scroll through a list of up to 20 entries of the most recent calls dialed from the IP Phone and redial a selected telephone number. For more information about using Redial List with IP Phones, see the appropriate user guide. For more information about the Redial List feature, see *Features and Services* (553-3001-306).

Note: Redial List is not supported on the IP Phone 2001, IP Audio Conference Phone 2033, and IP Phone 1110.

Callers List

Callers List is a call log feature whose content is generated by the system during call processing. The list resides in the Application Server. An end user can scroll through a list of up to 100 entries of the most recent calls received by the IP Phone and call a selected telephone number. For more information about using Callers List with IP Phones, see the appropriate user guide. For more information about the Callers List feature, see *Features and Services* (553-3001-306).

Note: Callers List is not supported on the IP Phone 2001, IP Audio Conference Phone 2033, and IP Phone 1110.

Password Administration

Once the Station Control password (SCPW) has been set by the system administrator on the Call Server, end users can operate this feature from IP Phones to protect private directory information stored on the Application Server. For more information about using Password Administration from IP Phones, see the appropriate user guide. For information about the Password Administration feature, see *Features and Services* (553-3001-306).

IP Call Recording

IP Call Recording enables an IP Call Recording Server to monitor the media stream for the active call and record it by providing the IP address and port

information for an IP Phone on an active call. The following recording models are supported:

- bulk call recording — records all calls on an IP Phone
- quality monitor recording — records individual calls on an IP Phone

Note: If the network connection between the IP Call Recording Server and the IP Phone is lost, active calls cannot be recorded.

For more information about the IP Call Recording feature, see *IP Line: Description, Installation, and Operation* (553-3001-365) and *Automatic Call Distribution: Description* (553-3001-351).

Virtual Office

The Virtual Office feature enables end users to log into any IP Phone using their own user ID and password. This redirects the end-user's telephone calls and other features to the Virtual Office logged-in IP Phone. For information about using Virtual Office on an IP Phone, see the appropriate user guide. For more information about the Virtual Office feature, see *Features and Services* (553-3001-306).

Emergency Services for Virtual Office

The E911 for Virtual Office feature allows Virtual Office users to place an emergency call to the correct Public Safety Answering Point (PSAP) for their geographic location. For more information about the E911 for Virtual Office feature, see *Emergency Services Access: Description and Administration* (553-3001-313).

Active Call Failover

The Active Call Failover (ACF) feature enables an IP Phone to reregister in the ACF mode during a Signaling Server failure.

The ACF mode preserves the following:

- active media stream

- LED status of the Mute, Handsfree, and Headset keys
- DRAM content

Note: All other elements (feature keys, soft keys and text areas) are retained until the user presses a key or the connection with the Signaling Server is resumed. If the user presses a key during the failover, the display is cleared and a localized “Server Unreachable” message is displayed.

The IP Phone uses this new mode of reregistration only when the Signaling Server explicitly tells the IP Phone to do so. IP Phones clear all call information if they register to a Signaling Server or Line Terminal Proxy Server (LTPS) that does not support the ACF feature.

For more information on Active Call Failover, see *IP Line: Description, Installation, and Operation* (553-3001-365).

Enhanced UNISTim Firmware download

Enhanced UNISTim firmware download feature provides the following functionality for IP Phones:

- Enhanced firmware file header that includes the IT_TYPE and name string for each IP Phone type.
- Revised definition of the IP Client’s IP Phone identification.
- Maintenance Mode for the Signaling Server that allows more simultaneous firmware downloads.

Note: Maintenance Mode is not applicable to Voice Media Gateway Cards.

- Identification of the registered IP Phones using string names and detailed identification of IP Phones that register as emulations of the base IP Phone 2001, IP Phone 2002, and IP Phone 2004.
- UNISTim IP Phones are able to register with older versions of firmware when the UFTP servers are busy, and are periodically offered the option start the firmware upgrade to the IP Phone.

Enhanced UNISTim Firmware download feature requires a Signaling Server to be present on the node. Without a Signaling Server, the only firmware files available for downloading are the three available in CS Release 4.0 for the Phase 0/1/2 IP Phone 2001, IP Phone 2002, and IP Phone 2004.

For further information on Enhanced UNISTim Firmware download, see *IP Line: Description, Installation, and Operation* (553-3001-365).

SRTP media encryption

Secure Real-time Transport Protocol (SRTP) RFC 3711 is a standards based way to encrypt a Real-time Transport Protocol (RTP) media stream. The SRTP media encryption feature provides a mechanism to exchange session keys which are used to create an SRTP session over an existing RTP stream. The session keys are dynamically created each time an RTP stream is created and are used to generate an SRTP Master key. The session key is protected by a preshared secret embedded in the IP Phone to generate and exchange encryption parameters.

When SRTP media encryption feature is enabled and a traditional RTP call is set up, the new feature reuses part of the RTP packets to determine if the SRTP media encryption feature is supported at the far end. If the SRTP media encryption feature is supported, the encryption parameters are encrypted using a secret, preshared key and are sent in an RTP packet to the far end. Each side then switches to SRTP/SRTCP mode and all media and control streams are encrypted. A small icon appears on the display to indicate the call is encrypted. If the SRTP media encryption feature is not supported at the far end, the call continues using an unencrypted RTP/RTCP stream.

The SRTP media encryption feature is supported on the following IP Phones:

- IP Phone 2001
- IP Phone 2002
- IP Phone 2004
- IP Phone 2007
- IP Phone 1110
- IP Phone 1120E

- IP Phone 1140E
- IP Phone 1150E

For information about configuring the SRTP media encryption feature, see the applicable IP Phone section.

Note 1: During a firmware upgrade, the SRTP media encryption feature will be automatically disabled.

Note 2: The SRTP media encryption feature does not support duplicate media streams encryption, such as IP Call Recording.

Note 3: It takes as a few seconds at the beginning of the call for security to be established. As a result, the first few seconds of the call can sometimes be unsecured; once the security icon appears, the call is secure.

Note 4: SRTP media encryption does not work with codecs which have small payloads, such as 10ms G.729.

For more information about SRTP, see *System Security Management (NN43001-604)*.

Appendix A: Specifications

Contents

This section contains information on the following topics:

| | |
|--|-----|
| IP Phone power requirements | 501 |
| Environmental specifications | 504 |

IP Phone power requirements

Phase II IP Phones have integrated hardware to support power over Ethernet for 802.3af standard power. Nortel recommends Power over Ethernet deployment since it allows for power backup in case of power failures. Note that, with Phase II IP Phones, power splitters are no longer needed to support Power over Ethernet.

Phase II IP Phones, IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E also support connection to AC local power using the appropriate adapter. If local power using the AC adapter is required, the AC adapter must be ordered separately. If the network LAN infrastructure supports Power over Ethernet, an AC adapter may not be required.

Note 1: You must order a country-specific power adapter. See the IP Phone components list table in the applicable IP Phone chapter for AC adapter descriptions and product codes.

Note 2: If you are using local power with the IP Phone 1110, IP Phone 1120E, IP Phone 1140E, or IP Phone 1150E, you must use the AC adapter (model # N0089601) *only*.

Nortel does not advise connecting a local power adapter in addition to power over Ethernet.

Table 61 and Table 62 provide power requirements for the IP Audio Conference Phone 2033 using Power over Ethernet Classification 0.

Table 61
Power requirements for IP Audio Conference Phone 2033 (US, CA, CALA, AP, GC) using Power over Ethernet Classification 0

| IP Phone | Product Code | Maximum Load | Normal Load |
|--|--------------------------|--------------|-------------|
| 2033 | NTEX11BA70 NTEX11EA70 | 10.5 W | 8.5 W |
| Note 1: Heavy load is defined as all LEDs on and 1 kHz tone on the speaker. Note 2: Normal load is defined as set powered up. | | | |

Table 62
Power requirements for IP Audio Conference Phone 2033 (EMEA) using Power over Ethernet Classification 0

| IP Phone | Product Code | Maximum Load | Normal Load |
|--|--|--------------|-------------|
| 2033 | NTEX11AA70E6 NTEX11BA70E6 NTEX11EA70E6 NTEX11FA70E6 | 10.5 W | 8.5 W |
| Note 1: Heavy load is defined as all LEDs on and 1 kHz tone on the speaker. Note 2: Normal load is defined as set powered up. | | | |

Table 63 provides power requirements for IP Phones using Power over Ethernet Classification 2.

Table 63
Power requirements for IP Phones using Power over Ethernet Classification 2

| IP Phone | Product Code | Maximum Load | Normal Load |
|--|--------------------------|--------------|-------------|
| 2001 (Phase II) | NTDU90BA | 4.0 W | 3.0 W |
| 2002 (Phase II) | NTDU91BA | 4.5 W | 3.0 W |
| 2004 (Phase II) | NTDU92BA | 4.5 W | 3.4 W |
| 1110 | NTYS02AAE6 NTYS02BAE6 | 4.5 W | 3.4 W |
| Note 1: Heavy load is defined as all LEDs on and 1 kHz tone on the speaker. | | | |
| Note 2: Normal load is defined as set powered up. | | | |

Table 64 provides power requirements for IP Phones using Power over Ethernet Classification 3.

Table 64
Power requirements for IP Phones using Power over Ethernet Classification 3

| IP Phone | Product Code | Maximum Load | Normal Load |
|--|------------------------------------|--------------|-------------|
| 2007 | NTDU96AB | 10.0 W | 7.0 W |
| 1120E | NTYS03AA NTYS03BA | 10.5 W | 6.0 W |
| 1140E | NTYS05AA NTYS05BA | 10.5 W | 6.0 W |
| 1150E | NTYS06AA NTYSO6BA NTYS15AAE6 | 10.5 W | 6.0 W |
| Note 1: Heavy load is defined as all LEDs on and 1 kHz tone on the speaker. | | | |
| Note 2: Normal load is defined as set powered up. | | | |

Environmental specifications

Table 65 shows the environmental specifications of IP Phones.

Table 65
Environmental specifications

| Parameter | Specifications |
|-----------------------|--|
| Operating temperature | +5° to +40°C, ambient |
| Operating humidity | +5% to 95% RH (29 g/m3 mean absolute humidity) |
| Storage temperature | −40° to +70° C |

Regulatory and safety information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Note: The user should not make changes or modifications not expressly approved by Nortel Networks. Any such changes could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Warnings:

- This is a Class B product. In a domestic environment this product can cause radio interference in which case the user must take adequate measures.
- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

(V C C I)

B

Table 66 lists EMC compliance for various jurisdictions.

Table 66
EMC compliance (Part 1 of 2)

| Jurisdiction | Standard | Description |
|---------------------------|----------------------|---|
| United States | FCC CFR 47 Part 15 | Class B Emissions: FCC Rules for Radio Frequency Devices |
| Canada | ICES-003 | Class B Emissions: Interference-Causing Equipment Standard: Digital Apparatus |
| Australia/ New Zealand | AS/NZS 3548 CISPR 22 | Class B Emissions: Information technology equipment - Radio disturbance |

Table 66
EMC compliance (Part 2 of 2)

| Jurisdiction | Standard | Description |
|---------------------|-----------------|---|
| European Community | EN55022 | Class B Emissions: Information technology equipment - Radio disturbance |
| | EN 55024 | Information technology equipment - Immunity characteristics Limits and methods of measurement |
| | EN 61000-3-2 | Limits for harmonic current emissions (equipment input current ≤ 16 A per phase) |
| | EN 61000-3-3 | Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤ 16 A |
| Japan | VCCI | Regulations for voluntary control measures. |

Table 67 lists Safety compliance for various jurisdictions.

Table 67
Safety compliance

| Jurisdiction | Standard | Description |
|-----------------------|---------------------|---|
| United States | UL 60950-1 | Safety of Information Technology Equipment |
| Canada | CSA 60950-1-03 | Safety of Information Technology Equipment |
| European Community | EN 60950-1 | ITE equipment - Safety - Part 1: General requirements |
| Australia/New Zealand | AS/NZS 60950.1:2003 | Safety of Information Technology Equipment |

Other Safety Approvals: IEC 60950-1: ITE equipment - Safety - Part 1: General requirements.

Other compliances

US/Canada—Hearing Aid Compatibility (HAC) as per FCC Part 68

This equipment complies with the CE Marking requirements.



EU Countries—This device complies with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration may be obtained from http://www.nortel.com/corporate/community/environment/life_cycle/delcarations.html or Nortel Networks GmbH address:

Ingolstaedter Strasse 14-18, 80807 Munich Germany

Australia: AS/ACIF S004—Voice Frequency Performance Requirements for Customer Equipment

For those devices equipped with Bluetooth wireless technology

Bluetooth wireless technology—This portable device with its antenna complies with FCC's RF radiation exposure limits for an uncontrolled environment. To maintain compliance, this transmitter must not be colocated or operate in conjunction with any other antenna or transmitter.

DenAn regulatory notice for Japan

Warning

Please be careful of the following while installing the equipment:

- Please only use the Connecting cables, power cord, AC adaptors shipped with the equipment or specified by Nortel to be used with the equipment. If you use any other equipment, it may cause “failures, malfunctioning or fire”.
- Power cords shipped with this equipment must not be used with any other equipment. In case the above guidelines are not followed, it may lead to death or severe injury



本製品を安全にご使用頂くため、以下のことにご注意ください。

- 接続ケーブル、電源コード、ACアダプタなどの部品は、必ず製品に同梱されております。添付品または指定品をご使用ください。添付品・指定品以外の部品をご使用になると故障や動作不良、火災の原因となることがあります。
- 同梱されております付属の電源コードを他の機器には使用しないでください。
上記注意事項を守らないと、死亡や大怪我など人身事故の原因となることがあります。

Appendix B: 802.1Q VLAN description

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 511 |
| Description | 512 |
| IP Phone support | 513 |
| IP Softphone 2050 support | 514 |
| Three-port switch support | 514 |
| VLAN IDs | 515 |
| Automatic VOICE VLAN ID configuration | 515 |
| Enhanced VLAN Tagging | 516 |
| Enhanced DATA VLAN | 517 |

Introduction

The 802.1Q support is available for the following IP Phones:

- IP Phone 2001
- IP Phone 2002
- IP Phone 2004
- IP Phone 2007
- IP Audio Conference Phone 2033
- IP Softphone 2050 (through the PC operating system)

- IP Phone 1110
- IP Phone 1120E
- IP Phone 1140E
- IP Phone 1150E

The 802.1Q support is configured from the user display interface of the IP Phone. Configure 802.1Q VLAN support when you initially configure an IP Phone. The switch ports for Voice Gateway Media Card TLAN network interfaces must be configured as untagged ports so the header is removed. While the IP Phone 2001 and the IP Audio Conference Phone 2033 provide VLAN support, they do not provide a port for a PC.

The 802.1Q IEEE protocol standard allows virtual LANs (VLANs) to be defined within a single LAN. This improves bandwidth management and limits the impact of broadcast and multicast messages. A higher level of security between segments in a network can also be achieved.

Note: 802.1Q functionality is supported only on the IP Phone. The IP Line application IP stack does not provide 802.1Q support for the Voice Gateway Media Card.

Description

The p bits within the 802.1Q standard allow packet prioritization at Layer 2 improving network throughput for VoIP data.

The 802.1Q standard specifies a new format of Ethernet frame. A standard Ethernet frame contains:

- a header consisting of a six-byte destination MAC address (following the header is a data area)
- a six-byte source MAC address
- a two-byte protocol identifier

The 802.1Q formatted frame is identical to a standard Ethernet frame, with the exception of the 4-byte 802.1Q tag that is inserted between the source MAC address and the protocol identifier. The first 16 bits of the 802.1Q tag

field is the Tag Protocol Identifier containing 8100 (hex), allowing the Ethernet interface to distinguish it from standard Ethernet frames. The last 16 bits of the 802.1Q tag contain the following information:

- a 3-bit Priority field (the 802.1p defined bits)
- a 1-bit Canonical Field Identifier (CFI)
- a 12-bit VLAN ID field

IP Phone support

The IP Phones support 802.1Q as follows:

- 802.1Q can be enabled or disabled at boot time using manual configuration or control downloaded from the TPS.
- If 802.1Q is disabled, standard Ethernet frames are transmitted.
- If 802.1Q is enabled, all frames transmitted by the Ethernet driver have the 802.1Q tag bytes inserted between the source MAC address and the protocol type field. The tag protocol identifier field contains 8100 (hex) and the CFI bit is set to 0.
- When 802.1Q is enabled, the configuration of separate voice and data VLANs is possible. Each VLAN has its own ID and priority on the IP Phone. Voice messages have the priority bits of all frames set to 6 (octal) and the VOICE VLAN ID is set to 000 (hex) by default. Data messages have the priority bits of all frames set to 0 and the DATA VLAN ID is set to 000 (hex) by default. The GUI and TPS configured values override these values.
- The IP Phone Ethernet driver receives any Ethernet frame destined for it, regardless of whether 802.1Q is enabled or whether the received frame is an 802.1Q tagged frame.

Note: The only exception is any 802.1Q tagged frame with the CFI = 1. In this case the frame is discarded.

- The IP Phone Ethernet driver strips the 802.1Q tag information from the frame prior to passing it on to the IP stack.
- The IP Phone Ethernet driver filters packets by the VLAN tag and MAC address. Tagged traffic is prioritized and routed based on the priority bits.

IP Softphone 2050 support

The IP Softphone 2050 supports 802.1Q with Windows 2000. By default, when 802.1Q is enabled, the priority bits of all frames are set to 6 and the VLAN ID is set to 0 (a restriction of Windows 2000).

For more information, see the “Nortel IP Softphone 2050” on page 205.

Three-port switch support

The section refers to the following IP Phones:

- IP Phone 2002
- IP Phone 2004
- IP Phone 2007
- IP Phone 1120E
- IP Phone 1140E
- IP Phone 1150E

The three-port switch does not interpret the 802.1Q header, but rather, allows the packets to pass through unmodified. Priority is achieved on a per port basis. The phone “port” traffic has higher priority over the Ethernet port to which the PC is connected.

An IP Phone can receive Broadcast frames from a PC’s data VLAN. Any data network broadcast storm packets from the network are seen by the IP Phone. Significant broadcast storms occurring on the DATA VLAN can impact IP Phone performance. See “Enhanced VLAN Tagging” on page 516 for configuration information to filter network activity from impacting IP Phone performance.

Enhanced 802.1P and 802.1Q support on the IP Phones improves voice quality by taking advantage of the VLAN filtering available on the three-port switch on the BCM 1100/1101/1103.

The following functions are available on the three-port switch:

- hardware VLAN filter
- two TX (out) queues on each port —High Priority Queue (HPQ) and Low Priority Queue (LPQ)

Therefore, traffic other than Voice VLAN can be filtered by enabling the VLAN filtering feature and taking advantage of the hardware VLAN filter. Voice traffic is always queued to the HPQ thereby providing a higher quality of service.

VLAN IDs

The VOICE and DATA VLAN ID fields can be specified on a *per interface* basis. There is only one network interface on the IP Phone; however, the IP Phone has two internal IDs, one for voice and one for data traffic. The IP Phone firmware can detect and route the voice and data traffic.

The VLAN ID fields are *global* settings. That is, all voice packets transmitted by the IP Phone have the same VOICE VLAN ID. If DATA VLAN is enabled, the IP Phone will add the DATA VLAN ID to untagged traffic. However, if the traffic arriving on the PC port is already tagged, the frame will pass through unchanged.

Each VLAN ID is specified as follows:

- The default VLAN ID is 000 (hex).
- The VOICE and DATA VLAN IDs can be specified in the manual configuration user interface.
- Or, in the case of the VOICE VLAN ID, the VOICE VLAN ID can also be configured by the DHCP parameter when using the Automatic VLAN discovery using DHCP approach.

Automatic VOICE VLAN ID configuration

As part of the 802.1Q feature, there is an option to automatically discover the VOICE VLAN ID using DHCP. This process reduces the configuration steps since entering data manually (the VOICE VLAN ID) is not required.

When the Automatic VOICE VLAN Discovery using DHCP approach is used, and the IP Phone has been configured as such, the following steps are automatically taken to obtain the VOICE VLAN ID:

- 1 The IP Phones perform an initial DHCP Discovery Request in the default VLAN.
- 2 The DHCP server returns a DHCP Ack message with an IP address in the data VLAN and one or more voice VLAN IDs in the vendor-specific field.
- 3 The IP Phone reads and saves the VOICE VLAN IDs.
- 4 The IP Phone rejects the DHCP offer (accepts it but immediately gives up the lease).
- 5 The IP Phone reboots and sends a DHCP Discovery Request with the first VLAN ID from the saved list. This is repeated for each VLAN ID in the list until a response is received.

This works because the Layer 2 switch discards every DHCP Discovery Request it receives from the IP Phone if the VLAN ID does not match the VLAN IDs configured on the port. When the IP Phone sends a DHCP Discovery Request with the port's configured VLAN ID, the packet passes into the network and the DHCP server's Ack message is passed back.

When a DHCP Ack message is received, the IP Phone accepts the offer and saves the IP address and Node IP address.

Enhanced VLAN Tagging

Enhanced VLAN has two main functions:

- Enhance the current Voice VLAN by implementing the hardware VLAN filter on the IP Phone port (SMP).
- Use TX High Priority Queue (HPQ) and 802.1P VLAN priority to enhance the traffic control on the IP Phone and PC network interface.

Enable/Disable menu is available to enable or disable telephony packets filtering based on a VLAN ID. The Enable/Disable menu is only available if tagging is enabled on the IP Phone port.

IMPORTANT!

VLAN filtering on the telephony port is disabled by default. If tagging is enabled on the telephony port, you can enable VLAN filtering on the telephony port. When VLAN filtering is enabled, packets destined for the IP Phone port are filtered based on the MAC address and the VLAN tag.

If VLAN filtering is not enabled on the telephony port, packets destined for the IP Phone port are filtered only on the MAC address. Filtering based on the VLAN tag does not occur. This makes the telephony port susceptible to broadcast storms and a Denial of Service (DOS) attack.

Enhanced DATA VLAN

Enhancements for DATA (PC Port) VLAN for the IP Phone include the following:

- DATA (PC Port) VLAN packet handling
 - PC Port (Ingress direction)
 - PC Port (Egress direction)
- DATA (PC Port) VLAN Tag Stripping

DATA (PC Port) VLAN packet handling

Packets processed to and from the PC port operate as follows:

PC Port (Ingress direction)

- DATA VLAN disabled—all traffic received on the PC port is switched based on MAC address. The packets are not modified in any way.
- DATA VLAN enabled—all untagged packets received on the PC port have the 802.1Q header appended and the VLAN ID is set to the value that was manually configured in the Data VLAN field. Any packet arriving on the PC port that is already tagged is dropped.

PC Port (Egress direction)

- DATA VLAN disabled—all traffic received on the PC port has the 802.1Q header appended and the VLAN ID is set to the value which was manually configured in the DATA VLAN field. Any packet arriving on the PC port which is already tagged is dropped.
- DATA VLAN enabled—all traffic is forwarded to the PC port based on a review of the MAC address and the 802.1Q value that was manually configured in the DATA VLAN field. Traffic is forwarded out the PC port only if the packets contain the DATA VLAN tag. Untagged traffic and traffic without the DATA VLAN tag is dropped.

DATA (PC Port) VLAN Tag Stripping

DATA VLAN Tag Stripping can be configured in the Network Configuration menu. To enable DATA VLAN Tag Stripping, select the PC-Port Untag All check box, DATA VLAN Tag Stripping can be enabled or disabled independent of enabling VLAN support on the PC Port.

If the DATA VLAN Tag Stripping is disabled, the packet is sent to the PC Port unmodified. If the DATA VLAN Tag Stripping is enabled, the 802.1Q header if one exists, is removed from the packet before the packet is forwarded to the PC port.

During manual configuration, if DATA VLAN is enabled by configuring a VLAN ID, the PC-Port Untag All check box is selected and is enabled by default. By default, the egress tag is stripped. To manually override this setting and disable egress stripping, clear the PC-Port Untag All check box.

If DATA VLAN is not enabled during manual configuration, the PC-Port Untag All check box is not selected. By default, the ingress tag is not stripped. To manually override this setting and enable ingress stripping, select the PC-Port Untag All check box.

Appendix C: 802.1x Port-based network access control

Contents

This section contains information on the following topics:

| | |
|--|-----|
| Introduction | 521 |
| Extensible Authentication Protocol | 522 |
| Authorization | 522 |

Introduction

The 802.1x support is available for the following IP Phones:

- IP Phone 2001
- IP Phone 2002
- IP Phone 2004
- IP Phone 2007
- IP Audio Conference Phone 2033
- IP Phone 1110
- IP Phone 1120E
- IP Phone 1140E
- IP Phone 1150E

Extensible Authentication Protocol

Extensible Authentication Protocol (EAP) supports multiple authentication methods, such as MD5, PEAP, TLS, and TTLS, and represents a technology framework that facilitates the adoption of Authentication, Authorization, and Accounting (AAA) schemes, such as Remote Authentication Dial In User Service (RADIUS). RADIUS is defined in RFC 2865.

802.1x defines the following three roles:

- **Supplicant**—an IP Phone which requires access to the network to use network services.
- **Authenticator**—the network entry point to which the supplicant physically connects (typically a Layer 2/3 switch). The authenticator acts as the proxy between the supplicant and the authentication server. The authenticator controls access to the network based on the authentication status of the supplicant.
- **Authentication server**—performs authentication of the supplicant.

Authorization

If 802.1x is configured and the IP Phone is physically connected to the network, the IP Phone (supplicant) initiates 802.1x authentication by contacting the Layer 2/3 switch (authenticator). The IP Phone also initiates 802.1x authentication after the Ethernet connection (network interface only) is restored following a network link failure.

However, if the phone resets, the IP Phone assumes the Layer 2 link has remained in service and is authenticated.

The IP Phone fails to authorize if the DeviceID and the IP Phone passwords do not match the DeviceID and IP Phone password provisioned on the RADIUS Server. The Layer 2 switch (authenticator) locks out the IP Phone and network access is denied. If this happens during reauthorization, all phone services are lost. The connected PC operates as normal.

For information about configuring EAP, see the applicable IP Phone section in this document.

Appendix D: 802.1ab Link Layer Discovery Protocol

Contents

This section contains information on the following topics:

| | |
|------------------------------------|-----|
| Introduction | 523 |
| Description | 523 |

Introduction

802.1ab Link Layer Discovery Protocol is available for the following IP Phones:

- IP Phone 2001
- IP Phone 2002
- IP Phone 2004
- IP Phone 2007
- IP Phone 1120E
- IP Phone 1140E
- IP Phone 1150E

Description

The IEEE 802.1ab Link Layer Discovery Protocol (LLDP) defines a standard method for Ethernet network devices, such as IP Phones, switches, and

routers to exchange information about their capabilities with other devices and to store this information in a Management Information Base (MIB).

LLDP also enables the system administrator to view the entire network infrastructure.

The Telecommunications Industry Association (TIA) developed the Link Layer Discovery Protocol (LLDP)-Media Endpoint Discovery (LLDP-MED) extension of 802.1ab LLDP for VoIP networks, as defined by ANSI/TIA-1057. This extension enables media devices such as IP Phones, IP media gateways, IP media servers, and IP media controllers to transmit and receive media related information.

LLDP provides the following functionality:

- periodic transmission of advertisements containing device information
- device capabilities and media specific configuration information to neighbors in the same network
- implementation of behavioral requirements specified by LLDP-MED

The 802.1ab feature provides automatic configuration of the IP Phone's network policy parameters, such as VLAN ID, as well as, automatic detection of misconfigurations, such as Duplex discrepancies.

The 802.1ab feature is enabled by default. However, you can disable the feature during manual configuration.

For information about 802.1ab configuration, see the applicable IP Phone section.

Appendix E: IP Phone diagnostic utilities

Contents

This section contains information on the following topics:

| | |
|--|-----|
| Introduction | 525 |
| Text-based diagnostic utilities | 526 |
| Network diagnostic utilities | 526 |
| Accessing Network Diagnostic utilities from the IP Phone | 529 |
| Network Diagnostic Utilities data display pages | 540 |
| Network Address Translation Traversal | 553 |
| General Information | 554 |
| Using CLI Commands | 557 |
| Graphic-based diagnostics utilities | 559 |
| Local Diagnostics for the IP Phone 2007 | 560 |
| Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E | 566 |

Introduction

Two methods of accessing IP Phone diagnostic utilities are text-based and graphic-based. The IP Phone 2001, IP Phone 2002, IP Phone 2004, IP Audio Conference Phone 2033, and the IP Phone 1110 use a text-based method to access diagnostic utilities. For information about diagnostic utilities for the IP Phone 2001, IP Phone 2002, IP Phone 2004, IP Audio Conference Phone 2033, and IP Phone 1110 see “Network diagnostic utilities” on page 526.

The IP Phone 2007, IP Phone 1120E, IP Phone 1140E, and the IP Phone 1150E use a graphic-based method to access Local Diagnostics through the

Local Tools menu. For information about Local Diagnostics for the IP Phone 2007, see “Local Diagnostics for the IP Phone 2007” on page 560. For information about Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E see “Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E” on page 566.

Text-based diagnostic utilities

Network diagnostic utilities are accessible on IP Phone 2001, IP Phone 2002, IP Phone 2004, IP Audio Conference Phone 2033, and the IP Phone 1110 to isolate voice quality and network performance problems.

Network diagnostic utilities

Network diagnostic utilities are available on the IP Phone itself (set-based), or from the Command Line Interface (CLI) (server-based). Diagnostic utilities provide testing and verification of end-to-end connectivity, verification of statistics and settings, and retrieval of set information. For further information about CLI, see “Using CLI Commands” on page 557.

Network diagnostic utilities include Network Diagnostic Tools (Ping and traceRoute), Ethernet Statistics, IP Networking Statistics, DHCP Information Process, RUDP Statistics, and Network QoS Process.

See Table 68, “Network Diagnostic Utilities availability,” on page 527 for a description of diagnostic utilities available for each phone state.

Note: Network diagnostic utilities are available on the IP Audio Conference Phone 2033 in Remote Mode only.

For detailed information on Quality of Service (QoS) and Proactive Voice Quality Management (PVQM), see *Data Networking for Voice over IP* (553-3001-160).

Table 68 lists the Network Diagnostic Utilities available on the IP Phone in different states.

Table 68
Network Diagnostic Utilities availability

| Function module | Before IP Address assignment | After IP Address assignment, unregistered - Local Mode | Registered (TPS) - Remote Mode | Call in progress (TPS) |
|--|-------------------------------------|---|---------------------------------------|-------------------------------|
| Local diagnostic tools (Ping & TraceRoute) | N/A | Yes | Yes | Yes |
| Ethernet statistics | Yes | Yes | Yes | Yes |
| IP Networking statistics | N/A | Yes | Yes | Yes |
| DHCP information process | N/A | Yes, part of information | Yes | Yes |
| UNISlim/RUDP statistics | N/A | N/A | Yes | Yes |
| RTP/RTCP statistics | N/A | N/A | Yes | Yes |
| Network QoS process | N/A | N/A | Yes, last call | Yes, renew |
| Supplicant Status | N/A | N/A | Yes | Yes |
| Supplicant Authentication Status | N/A | N/A | Yes | Yes |
| Supplicant Device ID | N/A | N/A | Yes | Yes |
| Supplicant Authenticator ID | N/A | N/A | Yes | Yes |

Ping and TraceRoute

The system administrator can use the local diagnostic tools, Ping or Traceroute command, from a specific endpoint with any arbitrary destination, typically another endpoint or Signaling Server. Ping and TraceRoute are available in Local or Remote mode.

Ethernet statistics

In Local or Remote Mode, the system administrator can view ethernet statistics (for example, number of collisions, VLAN ID, speed and duplex) for the IP Phone on a particular endpoint. The exact statistics will depend on what is available from the IP Phone for the specific endpoint. The user may select either the Network Port (NIport) or PC port (PCport).

IP Networking statistics

In Local or Remote Mode, the system administrator can view information on the packets sent, packets received, broadcast packets received, multicast packets received, incoming packets discarded, and outgoing packets discarded.

DHCP information process

In Remote Mode, the system administrator can view DHCP settings (for example, IP address, S1, S2, and S4 addresses) for each IP Phone. In Local Mode partial information is available.

UNISlim/RUDP statistics

In Remote Mode, the system administrator can view RUDP statistics (for example, number of messages sent, received, retries, resets, and uptime) for the IP Phones.

RTP/RTCP statistics

In Remote Mode, the system administrator can view RTP/RTCP QoS metrics (for example, packet loss and jitter) while a call is in progress.

Network QoS Process

In Remote Mode, the system administrator can view QoS statistics (for example, packets sent, packets received, packet loss, jitter average and jitter maximum, and round trip delay).

Supplicant Status

The system administrator uses this option to determine whether 802.1x is enabled or disabled 802.1x.

Authentication State

The system administrator uses this option to determine whether the IP Phone is currently authenticated with the 802.1x system. The following are valid state values:

- LogOff
- Disconnected
- Connected
- Acquired
- Authorizing
- Held
- Authorized
- Dbl Authd

DeviceID

The system administrator uses this option to check the user name configured for the device that is sent to the switch for authentication. This should match the corresponding entry in the RADIUS Server.

Authenticator ID

The system administrator uses this option to check the MAC address of the Authenticator (switch).

Accessing Network Diagnostic utilities from the IP Phone

Local diagnostics are available from the IP Phone for either Local or Remote mode.

Note: Diagnostics prompts are presented in English.

Local Mode

When the IP Phone is not registered with the signaling server, the **Network Diagnostic Tools** menu is available from the IP Phone in Local Mode (see Table 68, “Network Diagnostic Utilities availability,” on page 527). This menu is controlled by the firmware on the IP phone.

Use Procedure 87 on [page 530](#) to access the Network Diagnostic Tools in Local mode.

Procedure 87
Accessing the Network Diagnostic Tools
menu in Local mode

- 1 Double-press the **Services** key. The Local Main Menu, Network Diagnostic Tools, appears.
- 2 Press **Cancel** to quit, or use the **Navigation** keys to scroll through the menu and select one of the following:
 - Ping
 - TraceRoute
 - Ethernet Statistics
 - IP Network Statistics
 - IP Set & DHCP Information

End of Procedure

Procedure 88
Executing Ping

- 1 Select **Ping** from the **Network Diagnostic Tools** submenu.
- 2 Press the **IP** soft key and enter the IP address to Ping.

Tip: Use the dialpad to enter the IP address. The * key is used for dots and the # key produces a space.
- 3 Press the **Ping** soft key. The results of the Ping appear on the display.
- 4 Use the **Navigation** keys to browse the data. See Figure 53 on [page 541](#).

Tip: Press the **Ping** soft key again to stop the pinging.
- 5 Press one of the following soft keys:
 - **Reset** — to clear the data
 - **Exit** — to return to the **Network Diagnostic Tools** menu.

End of Procedure

Procedure 89
Executing TraceRoute

- 1 Select **TraceRoute** from the **Network Diagnostic Tools** submenu.
- 2 Press the **IP** soft key and enter the IP address to trace.
- 3 Press the **Tracert** soft key. The results of the TraceRoute appear on the display.
- 4 Use the **Navigation** keys to browse the data. See Figure 54 on [page 542](#).
Tip: Press the **Tracert** soft key again to stop the route tracing.
- 5 Press one of the following soft keys:
 - **Reset** — to clear the data
 - **Exit** — to return to the **Network Diagnostic Tools** menu

End of Procedure

Procedure 90
Accessing Ethernet Statistics

- 1 Select **Ethernet Statistics** from the **Network Diagnostic Tools** menu. The Ethernet statistics appear on the display.
- 2 Use the **Navigation** keys to browse the data. See Figure 55 on [page 543](#).
- 3 Press one of the following soft keys:
 - **Reset**— to clear the data and reset the statistic counter
 - **Exit** — to return to the **Network Diagnostic Tools** menu

End of Procedure

Procedure 91
Accessing IP Network Statistics

- 1 Select **IP Network Statistics** from the **Network Diagnostic Tools** menu. The IP Network Statistics appear on the display.
- 2 Use the **Navigation** keys to browse the data. See Figure 56 on [page 544](#).
- 3 Press one of the following soft keys:
 - **Reset** — to clear the data and reset the statistic counter
 - **Exit** — to return to the **Network Diagnostic Tools** menu

Procedure 92

Accessing IP Set & DHCP Information

- 1 Select **IP Set & DHCP Information** from the **Network Diagnostic Tools** menu. The IP Set and DHCP information appears on the display.
- 2 Use the **Navigation** keys to browse the data. See Figure 57 on [page 545](#).

Note: In Local Mode, **Exit** is the only soft-key available in this submenu.

End of Procedure

Remote Mode

When the IP Phone is registered to the signaling server, diagnostics are available through the Telephone Options menu in Remote Mode. This menu is controlled by the TPS.

Note 1: Diagnostics are available on the IP Audio Conference Phone 2033 in Remote Mode only.

Note 2: When the user selects **Diagnostics** from the **Telephone Options** menu, if an IP Phone Installer Password is enabled in the Signaling Server, the **Diagnostics** menu is locked and the message “Access denied” displays on the IP Phone display.

Use Procedure 93 to access the **Diagnostics** submenu in Remote Mode:

Procedure 93

Accessing the Diagnostics submenu in Remote Mode

- 1 Press the **Services** key.
- 2 Select **Telephone Options**.
- 3 Select **Diagnostics**.
- 4 Do one of the following:
 - Press the **Cancel** soft key to quit the **Diagnostics** submenu and return to the **Telephone Options** menu.
 - Use the **Navigation** keys to scroll through the **Diagnostics** submenu.
 - Press **Select** to select one of the diagnostics.

The following items are available on the **Diagnostics** submenu:

- Diag Tools (Diagnostic Tools: Ping and TraceRoute)
- EtherStats (Ethernet Statistics)
- IP Stats (IP Statistics)
- RUDP Stats (RUDP Statistics)
- QoS Stats (Quality of Service Statistics)

End of Procedure

Procedure 94

Accessing Diagnostic Tools in Remote mode

- 1 Select **Diagnostic Tools** from the **Diagnostics** submenu.
- 2 Do one of the following:
 - Press the **Cancel** soft key to return to the **Diagnostics** submenu.
 - Use the **Navigation** keys to scroll to the DiagnosticTools selection.
- 3 Press the **Select** soft key to choose one of the following:
 - Ping (see Figure 60 on [page 548](#))
 - TraceRoute (see Figure 61 on [page 549](#))

End of Procedure

Ping

The following items are available on the **Ping** submenu in Remote mode:

- IP Addr
- Nr of Pings
- Ping!
- Last ping

Procedure 95
Entering an IP address

- 1 Scroll through the **Ping** submenu to the **IP Addr** menu item. An IP address appears if previously entered. Example 47.249.48.20.
- 2 Press the **Select** soft key.
- 3 Use the **Navigation** keys to scroll to the destination IP address.
 - If the destination IP address is in the list, press the **Select** soft key to select the IP address. Press the **Select** soft key again to return to the **Ping** submenu.
 - If the destination IP address is not in the list, continue scrolling through the available IP address list until the IP address 0.0.0.0 appears. Press the **Select** soft key.

Tip: To edit the IP address, use the dialpad and the **Delete** soft key and the **Cancel** soft key. Use the * key for dots.
- 4 Press the **Select** soft key to save the new IP address or press the **Cancel** soft key to return to the **Ping** submenu.

End of Procedure

Procedure 96
Changing the number of Pings

- 1 From the **Ping** submenu, use the **Navigation** keys to scroll to the **Nr of Pings** submenu item.
- 2 Press the **Select** soft key.

Tip: Use the **Delete** and **Clear** soft keys to enter the number of pings.
- 3 Do one of the following:
 - Press the **Select** soft key to accept the change and return to the **Ping** submenu.
 - Press the **Cancel** soft key to return to the **Ping** submenu.

End of Procedure

Procedure 97**Pinging an IP address**

- 1 From the **Ping** submenu, use the **Navigation** keys to scroll to the **Ping!** submenu item.
- 2 Press the **Select** soft key. Pinging starts.
Tip: Press the **Stop** soft key to stop pinging.
- 3 Press the **OK** soft key to return to the **Ping** submenu.

Procedure 98**Reviewing the results of the Ping:**

- 1 Use the **Navigation** keys to scroll to the **Last Ping** submenu item.
- 2 Press the **Select** soft key.
- 3 Use the **Navigation** keys to scroll through the results.
- 4 Press the **Cancel** soft key to return to the **Ping** submenu.

End of Procedure

TraceRoute

The following items are available on the **TraceRoute** submenu in Remote mode:

- IP Addr
- Max Nr of Hops
- TraceRt!
- Last TraceRt

Procedure 99**Entering an IP address**

- 1 Scroll through the **TraceRoute** submenu to the **IP Addr** menu item. An IP address appears if previously entered. Example 47.249.48.20.
- 2 Press the **Select** soft key.
- 3 Use the **Navigation** keys to scroll to the destination IP address.

- If the destination IP address is in the list, press the **Select** soft key to select the IP address. Press the **Select** soft key again to return to the **TraceRoute** submenu.
- If the destination IP address is not in the list, continue scrolling through the available IP address list until the IP address 0.0.0.0 appears. Press the **Select** soft key.

Tip: To edit the IP address, use the **Delete** soft key and the **Cancel** soft key. Use the * key for dots.

- 4 Press the **Select** soft key to save the new IP address, or press the **Cancel** soft key to return to the **TraceRoute** submenu.

End of Procedure

Procedure 100
Changing the number of Hops

- 1 From the **TraceRoute** submenu, use the **Navigation** keys to scroll to the **Max Nr of Hops** submenu item.

- 2 Press the **Select** soft key.

Tip: Use the dialpad and the **Delete** and **Clear** soft keys to enter the number of Hops.

- 3 Do one of the following:
 - Press the **Select** soft key to accept the change and return to the **TraceRoute** submenu.
 - Press the **Cancel** soft key to return to the **TraceRoute** submenu.

End of Procedure

Procedure 101
Tracing a route

- 1 From the **TraceRoute** submenu, use the **Navigation** keys to scroll to the **TraceRoute!** submenu item.

- 2 Press the **Select** soft key. Route tracing starts.

Tip: Press the **Stop** soft key to stop the trace.

- 3 Press the **OK** soft key to return to the **TraceRoute** submenu.

End of Procedure

Procedure 102

Reviewing the results of the trace

- 1 From the **TraceRoute** submenu, use the **Navigation** keys to scroll to the **Last TraceRt** submenu item.
- 2 Press the **Select** soft key.
- 3 Use the **Navigation** keys to scroll through the results.
- 4 Press the **Cancel** soft key to return to the **TraceRoute** submenu.

End of Procedure

Ethernet Statistics

Use Procedure 103 to access the **EtherStats** submenu item in Remote mode.

Procedure 103

Browsing Ethernet Statistics

- 1 Select **EtherStats** from the **Diagnostics** submenu. The Ethernet statistics appear on the display.
- 2 Do one of the following:
 - Press the **OK** soft key to return to the **Diagnostics** submenu.
 - Use the **Navigation** keys to browse the data. See Figure 62 on [page 550](#).
 - Press the **Cancel** soft key to return to the **Diagnostics** submenu.

End of Procedure

Procedure 104

Checking 802.1x Supplicant status

- 1 Select **EtherStats** from the **Diagnostics** submenu.
- 2 Scroll through the EtherStats menu and select **Supplicant Status**.
- 3 Press the **Select** soft key.

- 4 Do one of the following:
 - Press the **OK** soft key to return to the **EtherStats** submenu.
 - Use the **Navigation** keys to browse the data.
- 5 Press the **Cancel** softkey to return to the **EtherStats** submenu.

End of Procedure

Procedure 105

Checking 802.1x Supplicant Authentication state

- 1 Select **EtherStats** from the **Diagnostics** submenu.
- 2 Scroll through the EtherStats menu and select **Authentication State**.
- 3 Press the **Select** soft key.
- 4 Do one of the following:
- 5 Press the **OK** soft key to return to the **EtherStats** submenu.
 - Use the **Navigation** keys to browse the data.
- 6 Press the **Cancel** softkey to return to the **EtherStats** submenu.

End of Procedure

Procedure 106

Checking Device ID

- 1 Select **EtherStats** from the **Diagnostics** submenu.
- 1 Scroll through the **EtherStats** menu and select **Device ID**.
- 2 Press the **Select** soft key.
- 1 Do one of the following:
 - Press the **OK** soft key to return to the **EtherStats** submenu.
 - Use the **Navigation** keys to browse the data.
- 2 Press the **Cancel** soft key to return to the **EtherStats** submenu.

End of Procedure

Procedure 107**Checking Authenticator ID**

- 1 Select **EtherStats** from the **Diagnostics** submenu.
- 1 Scroll through the **EtherStats** menu and select **Authenticator ID**.
- 2 Press the **Select** soft key.
- 3 Do one of the following:
 - Use the **Navigation** keys to browse the data.
- 4 Press the **OK** soft key to return to the **EtherStats** submenu.
 - Use the **Navigation** keys to browse the data.
- 5 Press the **Cancel** soft key to return to the **EtherStats** submenu.

End of Procedure

IP Statistics

Use Procedure 108 to access the **IP Stats** submenu item in Remote mode.

Procedure 108**Browsing IP Statistics**

- 1 Select **IP Stats** from the **Diagnostics** submenu. The IP Statistics appear on the display.
- 2 Do one of the following:
 - Press the **OK** soft key to return to the **Diagnostics** submenu.
 - Use the **Navigation** keys to scroll through the data display results. See Figure 63 on [page 551](#).
 - Press the **Cancel** soft key to return to the **Diagnostics** submenu.

End of Procedure

RUDP Statistics

Use Procedure 109 to access the **RUDP Stats** submenu item in Remote mode.

Procedure 109
Browsing RUDP Statistics

- 1 Select **RUDP Stats** from the **Diagnostics** submenu. The RUDP statistics appear on the display.
- 2 Do one of the following:
 - Press the **OK** soft key to return to the **Diagnostics** submenu.
 - Use the **Navigation** keys to scroll through the data display results. See Figure 64 on [page 552](#).
 - Press the **Cancel** soft key to return to the **Diagnostics** submenu.

End of Procedure

QoS Statistics

Use Procedure 110 to access the **QoS Stats** submenu item in Remote mode.

Procedure 110
Browsing Quality of Service Statistics

- 1 Select **QoS Stats** from the **Diagnostics** submenu. The Quality of Service statistics appear on the display.
- 2 Do one of the following:
 - Press the **OK** soft key to return to the **Diagnostics** submenu.
 - Use the **Navigation** keys to scroll through the results. See Figure 65 on [page 552](#).
 - Press the **Cancel** soft key to return to the **Diagnostics** submenu.

Note: The IP Phone screen display returns to an idle state after 5 minutes if the user does not interact with menu items.

End of Procedure

Network Diagnostic Utilities data display pages

Data from the diagnostic utilities is displayed on the IP Phone screen display. One line of data at a time is displayed on IP Phone 2001 and IP Phone 2002 and 3 lines of data are displayed at a time on IP Phone 2004. Each line of data

is up to 24 characters long. Use the **Navigation** keys to scroll through the lines of data.


Local Mode data display pages

The following figures illustrate the Network Diagnostic Utilities data display pages in Local Mode.

Ping

Figure 53 illustrates the data displayed from the **Ping** diagnostic tool.

Figure 53
PING data display page

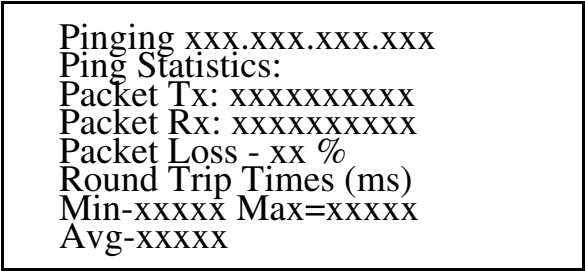

```
Pinging xxx.xxx.xxx.xxx
Ping Statistics:
Packet Tx: xxxxxxxxxxxx
Packet Rx: xxxxxxxxxxxx
Packet Loss - xx %
Round Trip Times (ms)
Min-xxxxx Max=xxxxx
Avg-xxxxx
```


In Figure 53,

- PacketTx = packets sent
- PacketRx = packets received

TraceRoute

Figure 54 on [page 542](#) illustrates the data displayed from the **TraceRoute** diagnostic tool. Browse through the last 30 items by pressing the **Navigation** keys.

Figure 54
TraceRoute data display screen

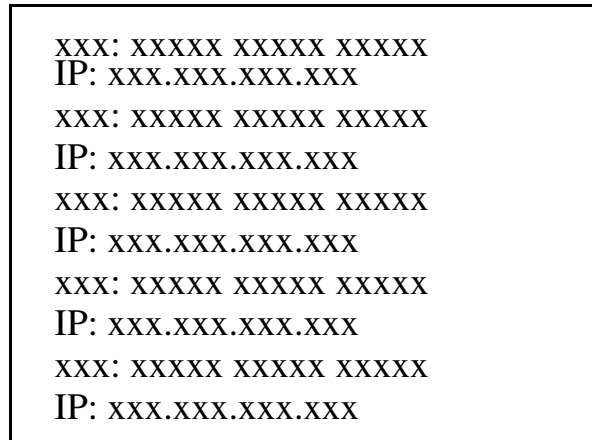


In Figure 54,

- xxx: = Time To Live (TTL):Round Trip Time1, Round Trip Time2, Round Trip Time3
- IP: = IP address

Ethernet Statistics

Figure 55 on [page 543](#) illustrates the data displayed from the **Ethernet Statistics** submenu item.

Figure 55
Ethernet Statistics data display page

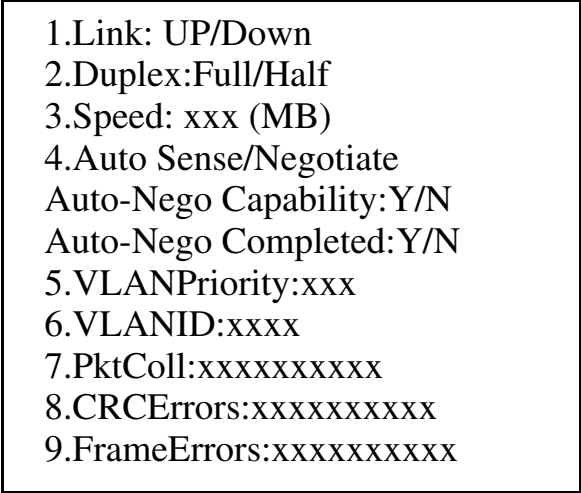

```
1.Link: UP/Down
2.Duplex:Full/Half
3.Speed: xxx (MB)
4.Auto Sense/Negotiate
Auto-Nego Capability:Y/N
Auto-Nego Completed:Y/N
5.VLANPriority:xxx
6.VLANID:xxxx
7.PktColl:xxxxxxxxxxx
8.CRCErrors:xxxxxxxxxxx
9.FrameErrors:xxxxxxxxxxx
```

In Figure 55,

- Duplex = duplex mode
- Speed = network speed 10MB/100MB
- Auto Sense/Negotiate = Auto Negotiate Protocol Received or Not (Y – Yes, N – No)

Note: In the **IP Phone Configuration** menu, Auto Negotiate mode is the default setting for initial startup. If the telephone is connected to a network that supports Auto Negotiate, it selects the best speed and duplex mode available. For more information, the applicable IP Phone section.

- VLANPriority = IP Phone VLAN priority
- VLANID = IP Phone VLAN ID
- PCollision = network packet collision peg counts
- CRCErrors = network CRC errors peg counts
- FrameErrors = network Framing errors peg counts

IP Networking Statistics

Figure 56 illustrates the data displayed from the **IP Networking Statistics** submenu item.

Figure 56
IP Networking Statistics data display screen

1. Packet Tx: xxxxxxxxxxxx
2. PacketRx: xxxxxxxxxxxx
3. BcastPktRx: xxxxxxxxxxxx
4. McastPktRx: xxxxxxxxxxxx
5. InPktDisc: xxxxxxxxxxxx
6. OutPktDisc: xxxxxxxxxxxx
7. UnknownPkts: xxxxxxxxxxxx
8. ICMPType—Code: xxx—xxx

In Figure 56,

- PacketTx = IP Phone packets sent
- PacketRx = IP Phone packets received
- BcastPktRx = broadcast packets received
- McastPktRx = multicast packets received
- InPktDisc = incoming packets discarded
- OutPktDisc = outgoing packets discarded
- UnknownPkts = unknown protocol packets discarded
- ICMPType-Code = the last ICMP message: XXX-XXX

DHCP Statistics

Figure 57 on [page 545](#) illustrates the data displayed from the **DHCP Statistics** submenu item.

Figure 57
DHCP information data display page

```
1.Configuration:
NetworkDataValided:Yes/No
MACAddressStored:Yes/No
PerformDHCP:Full/Partial
VLANEnable:Yes/No
VLANConfig:Manual/Auto
VLANIDsDiscovered:Yes/No
PrimaryServer:S1/S2
2.FWVersion:xxxxxxx
3.HWIDxxxxxxxxxxxxxxxxxxxxx
4.SetIP:xxx.xxx.xxx.xxx
5.SbMask:xxx.xxx.xxx.xxx
6.GtWay:xxx.xxx.xxx.xxx
7.PROMS1:xxx.xxx.xxx.xxx
  Port:xxxx Act:xxx
  Retries:xxx
8.PROMS2:xxx.xxx.xxx.xxx
  Port:xxxx Act:xxx
  Retries:xxx
9.VLANPriority:xxx
10.VLANID:xxxx
11.DHCPRespondString:
xxxxxxxxxxxxxxxxxxxxxxxxxxx
xxxxx.....
12.Servers'Information:
  SN:xxx.xxx.xxx.xxx
  Port:xxxx Act:xxx
  Retries:xxx FailOver:xxx
```

In Figure 57,

- NetworkDataValided = is EEPROM Network Data validated?
- MACAddressStored = is MAC Address stored in EEPROM?
- FWVersion = IP Phone firmware version
- HWID = IP Phone hardware ID
- SbMask = subnet mask
- GtWay = Gateway
- PROMS1 = EEPROM Server1 information
- PROMS2 = EEPROM Server2 information
- Sn = S: Server n is from 1 to 16

UNIStim/RUDP statistics

Figure 58 illustrates the data displayed from the **UNIStim/RUDP statistics** submenu item.

Figure 58

UNIStim/RUDP statistics data display screen (TPS)

```
1.MessageTx:xxxxxxxxxxxxx
2.MessageRX:xxxxxxxxxxxxx
3.Retries:xxxxxxxxxxxxx
4.UpTime:xxx/xx/xx/xx
```

In Figure 58,

- MessageTx = messages sent
- MessageRx = messages received
- Retries = number of retries
- UpTime = up-time of current TPS registration
(days/hours/minutes/seconds)

RTP/RTCP statistics

Figure 59 illustrates the data displayed from the **RTP/RTCP statistics** submenu item.

Figure 59
RTP/RTCP statistics data display page

```
1.EndIP:xxx.xxx.xxx.xxx
2.PortID:xxxx
3.PacketTX:xxxxxxxxxxx
4.PacketRx:xxxxxxxxxxx
5.DiscPktRx:xxxxxxxxxxx
6.PacketLossRx:xxx%
7.JittAveRx:xxxxxxxxxxx
8.JittMaxRx:xxxxxxxxxxx
9.RdTripDelay:xxxxx ms
```

In Figure 59,

- EndIP = endpoint IP address
- PortID = port ID
- PacketTx = RTP packets sent
- PacketRx = RTP packets received
- DPacketRx = BTR Disorder packets received
- PacketLossRx = packet loss received xxx%
- JittAveRx = jitter average received xxxxxx
- JittMaxRx = jitter maximum received xxxxxx
- RdTripDelay = round trip delay

Note: Each new call resets the counters.


Remote Mode data display pages

The following figures illustrate the **Network Diagnostic Utilities** data display pages in Remote Mode.

PING

Figure 60 illustrates the data displayed from the **Ping** Diagnostic Tool.

Figure 60
Ping data display page

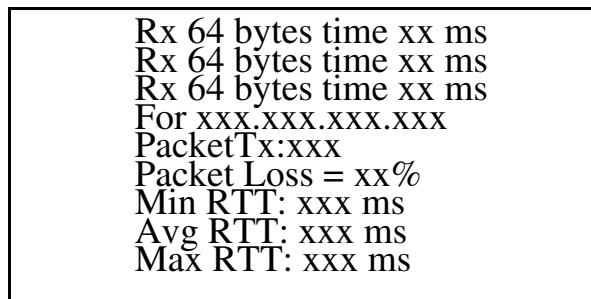

```
Rx 64 bytes time xx ms
Rx 64 bytes time xx ms
Rx 64 bytes time xx ms
For xxx.xxx.xxx.xxx
PacketTx:xxx
Packet Loss = xx%
Min RTT: xxx ms
Avg RTT: xxx ms
Max RTT: xxx ms
```


In Figure 60,

- Packet TX = packets sent
- Packet Rx = packets received
- RTT - Round Trip Time (for Min RTT, Avg RTT, and Max RTT)

TraceRoute

Figure 61 illustrates the data displayed from the **Tracert** Diagnostic tool.

Figure 61
Tracert data display screen

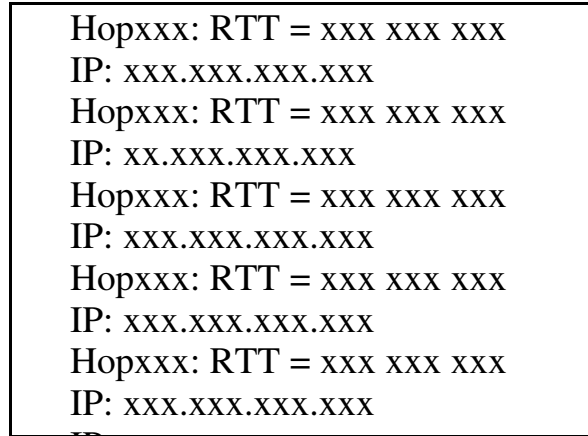

```
Hopxxx: RTT = xxx xxx xxx
IP: xxx.xxx.xxx.xxx
Hopxxx: RTT = xxx xxx xxx
IP: xx.xxx.xxx.xxx
Hopxxx: RTT = xxx xxx xxx
IP: xxx.xxx.xxx.xxx
Hopxxx: RTT = xxx xxx xxx
IP: xxx.xxx.xxx.xxx
Hopxxx: RTT = xxx xxx xxx
IP: xxx.xxx.xxx.xxx
```


In Figure 61,

- Hopxxx = the Hop number
- xxx = Round Trip Time1, Round Trip Time2, Round Trip Time3
- IP: = IP address

Ethernet Statistics

Figure 62 illustrates the data displayed from the **EtherStats** submenu item.

Figure 62
Ethernet statistics data display screen

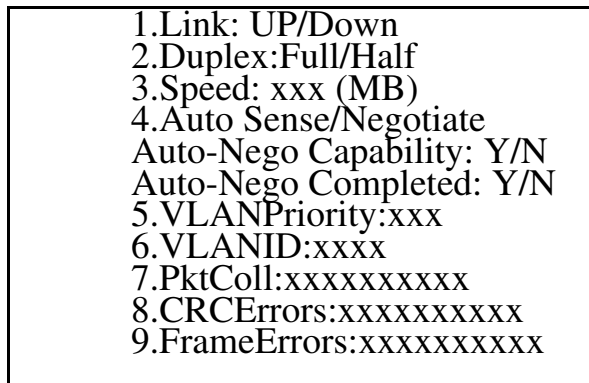

```

1.Link: UP/Down
2.Duplex:Full/Half
3.Speed: xxx (MB)
4.Auto Sense/Negotiate
Auto-Nego Capability: Y/N
Auto-Nego Completed: Y/N
5.VLANPriority:xxx
6.VLANID:xxxx
7.PktColl:xxxxxxxxxx
8.CRCErrors:xxxxxxxxxx
9.FrameErrors:xxxxxxxxxx
    
```

In Figure 62,


- Duplex - duplex mode
- Speed - network speed 10MB/100MB
- Auto Sense/Negotiate = Auto Negotiate Protocol Received or Not (Y - Yes, N - No)
- VLANPriority = IP Phone VLAN priority
- VLANID = IP Phone VLAN ID
- PCollision = network packet collision peg counts
- CRCErrors = network CRC errors peg counts
- FrameErrors = network Framing errors peg counts

Note: In the **IP Phone Configuration** menu, Auto Negotiate mode is the default setting for initial startup. If the telephone is connected to a network that supports Auto Negotiate, it selects the best speed and duplex mode available. For more information, see the applicable IP Phone section.

IP Networking Statistics

Figure 63 illustrates the data displayed from the **IP Stats** submenu item.

Figure 63

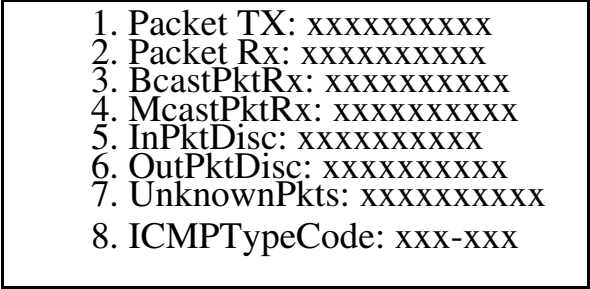IP Networking statistics data display screen

```
1. Packet TX: xxxxxxxxxx
2. Packet Rx: xxxxxxxxxx
3. BcastPktRx: xxxxxxxxxx
4. McastPktRx: xxxxxxxxxx
5. InPktDisc: xxxxxxxxxx
6. OutPktDisc: xxxxxxxxxx
7. UnknownPkts: xxxxxxxxxx
8. ICMPTypeCode: xxx-xxx
```

In Figure 63,

- PacketTx = IP Phone packets sent
- PacketRX = IP Phone packets received
- BcastPktRx = broadcast packets received
- McastPkeRx = multicast packets received
- InPktDisc = incoming packets discarded
- OutPktDisc = outgoing packets discarded
- UnknownPkts = unknown protocol packets discarded
- ICMPTypeCode = the last ICMP message: xxx-xxx

RUDP statistics data display screen (TPS)

Figure 64 illustrates the data displayed from the **RUDP Stats** submenu item.

Figure 64
RUDP statistics data display page

```
1.MessageTx:xxxxxxxxxxxxx
2.MessageRx:xxxxxxxxxxxxx
3.Retries:xxxxxxxxxxxxx
4.UpTime:xxx/xx/xx/xx
```

In Figure 64,

- MessageTx = messages sent
- MessageRx = messages received
- Retries = number of retries
- UpTime = up-time of current TPS registration (days/hours/minutes/seconds)

Quality of Service statistics

Figure 65 illustrates the data displayed from the **QoS Stats** menu item.

Figure 65
QoS statistics data display page

```
FarEndIP:xxx.xxx.xxx.xxx
PortEndPortID:xxxx
LocPktLossRx:xxxxxxxxxxxx
LocJittAvgRx:xxx
LocLatAvg:xxx
LocPktTx:xxx
LocPktRx:xxx
LocOutOrdRx:xxx
LocListR:xxx
RmtPktLossRx:xxx
RmtJittAvgRx:xxx
RmtLatAvg>xxx
RmtListR:xxx
```


In Figure 65,

- EndIP = endpoint IP address
- PortID = port ID
- PacketTx = RTP packets sent
- Packet Rx = RTP packets received
- DPacketRx = BTR Disorder packets received
- PacketLossRx = packet loss received xxx%
- JittAveRx = jitter average received xxxxxx
- JittMaxRx = jitter maximum received xxxxxx
- RdTripDelay = round trip delay

Note: Each new call resets the counters.

Network Address Translation Traversal

This section describes the Network Address Translation (NAT) Traversal feature as it effects IP Phones. NAT Traversal is required to permit IP Phones working behind a NAT box to connect and maintain signaling and media paths.

NAT Traversal is applicable to all UNISim IP Phone clients and is one-ended. That is, it does not require the other end of a call to support any special protocol, and it is interoperable with any other media termination.

In this document NAT refers to both IP port address mapping and IP address mapping (also known as NAPT). A NAT can be used with or without a Virtual Private Network (VPN).

The NAT Traversal feature supports only IP clients behind cone NAT types. There are three types of cone NAT—the full cone, restricted cone, and the port restricted cone. NAT traversal is not compatible with symmetric NATs. If the IP Phone is behind a Symmetric NAT, the LTPS unregisters the phone from the call server (while remaining registered on the LTPS), and displays the following message on the IP Phone display: “Error! Symmetric NAT”.

For detailed information about the NAT Traversal feature, see *IP Line: Description, Installation, and Operation* (553-3001-365).

For information about accessing NAT information from an IP Phone, see “Set IP Information” on page 555.

IMPORTANT!

Nortel recommends partial DHCP configuration for IP Phones residing behind a NAT router unless the NAT router supports special configuration of the DHCP server. For more information, see *IP Line: Description, Installation, and Operation* (553-3001-365).

General Information

The General Information menu displays information about the IP Phone. To access the General Information menu, press **Services > Telephone Options > Set Information > General Information**.

The General Information menu displays the following information about the IP Phone:

- Hardware ID
- Terminal Type
- Release Number
- Manufacturer Code
- Color Code
- Set TN
- Registered TN
- EEPROM Data Validity
- Set IP Information

Note: For further information about the Set IP Information menu option, see “Set IP Information” on page 555.

- Ethernet Information

Note: For further information about the Ethernet Information menu option, see

- Server Information

Note: For further information about the Server Information menu option, see “Server Information” on page 556.

Set IP Information

IP Phones which do not reside behind a NAT device display the following information:

Set IP:
SIG:
x.x.x.x:yyyy
GW:
x.x.x.x
Mask:
xxx.xxx.xxx.xxx

IP Phones which reside behind a NAT device display the following information:

Public Set IP
SIG:
x.x.x.x:yyyy
Public Set IP
RTP:
x.x.x.x:yyyy
Private Set IP
SIG:
x.x.x.x:yyyy
Private Set IP
RTP:
x.x.x.x:yyyy
GW:
x.x.x.x
Mask:
xxx.xxx.xxx.xxx

Type of NAT:

Cone

Ethernet Information

The following information is accessed through the Ethernet Information menu:

- MAC Address Stored
- VLAN Enabled
- VLAN Configuration
- VLAN Discovered
- VLAN Priority
- VLAN ID

Server Information

The following information is accessed through the Server Information menu:

- Node IP
- Node ID
- ITG IP Address
- Perform DHCP
- Primary Server
- S1, S2 IP Address
- S1, S2 Port
- S1, S2 Action
- S1, S2 Retry Count
- DHCP Server IP Address

Using CLI Commands

IDU commands

The system-based IDU command in LD 32 can be used to test the end-to-end IP connectivity of the IP Phone from the call server console instead of using set-based diagnostics.

The IDU command provides the following information:

- TN
- TN ID
- MAC address
- IP address
- LTPS IP address
- Manufacturer code
- Model
- NT code
- Color code
- Release code
- Serial number
- Firmware/Software version

Note: For an IP Phone behind a NAT, the IP address is composed of the public address followed by the private address in parentheses (see Table 69 on page 558). For an IP Phone without a NAT, the IP address is the signaling IP address of the IP Phone as seen by the LTPS (see Table 70 on page 558).

For detailed information, see *Software Input/Output: Maintenance* (553-3001-511).

Table 69 and Table 70 on page 558 provide the output format of the IDU commands in LD 32.

Table 69 provides the output format of the IDU commands in LD 32 for an IP Phone with a NAT.

Table 69
IDU command printout in LD 32 for IP Phone with a NAT

| Item | Description |
|-------------------|-------------------------------|
| ISSET TN: | I s c u |
| TN ID CODE: | i2001, i2002, i2004, or i2050 |
| ISSET MAC ADR | xx.xx.xx.xx.xx |
| ISSET IP ADR | xx.x.x.xxx:xxxx(xxx.xxx.x.xx) |
| LTPS IP ADR | xx.xx.xxx.xx |
| MANUFACTURER CODE | [NAME] |
| MODEL | |
| NT CODE: | xxxxxxx |
| COLOR CODE: | xx |
| RLS CODE: | x |
| SER NUM: | xxxxxx |
| FW/SW VERSION | xxxxxxx |

Table 70 provides the output format of the IDU commands in LD 32 for an IP Phone without a NAT.

Table 70
IDU command printout in LD 32 for IP Phone without a NAT (Part 1 of 2)

| Item | Description |
|---------------|-------------------------------|
| ISSET TN: | I s c u |
| TN ID CODE: | i2001, i2002, i2004, or i2050 |
| ISSET MAC ADR | xx.xx.xx.xx.xx |

Table 70
IDU command printout in LD 32 for IP Phone without a NAT (Part 2 of 2)

| Item | Description |
|-------------------|-----------------|
| ISet IP ADR | XX.X.X.XXX:XXXX |
| LTPS IP ADR | XX.XX.XXX.XX |
| MANUFACTURER CODE | [NAME] |
| MODEL | |
| NT CODE: | XXXXXXXX |
| COLOR CODE: | XX |
| RLS CODE: | X |
| SER NUM: | XXXXXX |
| FW/SW VERSION | XXXXXXXX |

If the IDU command cannot retrieve the information shown in Table 69, “IDU command printout in LD 32 for IP Phone with a NAT,” on page 558 or Table 70, it responds with one of the following:

- prints the IP Phone IP address and the Voice Gateway Media Card address, and generates an NPR0503 message
- the IP Phone is not registered with the Call Server and generates an NPR0048 message
- the IP Phone is registered, but the Call Server is not responding, and generates an NPR0503 message

End of Procedure

Graphic-based diagnostics utilities

Graphic diagnostic utilities are available on the IP Phone 2007, IP Phone 1120E, the IP Phone 1140E, and the IP Phone 1150E.

For information about diagnostic utilities for the IP Phone 2007, see “Local Diagnostics for the IP Phone 2007” on page 560. For information about diagnostic utilities for the IP Phone 1120E, and the IP Phone 1140E, see “Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E” on page 566.

Local Diagnostics for the IP Phone 2007

To access the Local Diagnostics menu on the IP Phone 2007, tap the **Tools** icon then tap the **Local Diagnostics** menu entry. The Local Diagnostics menu displays the following items:

- Network Diagnostic Tools
- Ethernet Statistics
- IP Network Statistics
- IP Set&DHCP Information

You can press the **Return** soft key in any submenu item screen to return to the Local Diagnostics submenu. Therefore, you can gather information and run tests without exiting and reentering the Local Diagnostics menu.

Use Procedure 111 to access Network Diagnostic Tools.

Procedure 111 Using Network Diagnostic Tools

- 1 Tap the **Tools** icon.
- 2 Tap the **Local Diagnostics** menu entry.
- 3 Tap the **Network Diagnostic Tools** soft key.

The screen displays **Ping**, **Tracert**, and **EXIT** soft keys, presents a pull-down list for IP addresses, and displays the Ping and Hop parameters.

- 4 Scroll down through the IP addresses and tap an address.
- 5 The number of repetitions of the **Ping** command are shown in the top bar of the screen. The default is 4.

To change the number of repetitions, tap on the number and enter a new value using the USB keyboard.

- 6 The number of hops for the **Tracert** command are shown in the top bar of the screen. The default is 30.

To change the number of hops, tap on the number and enter a new value using the USB keyboard.

- 7 Tap the **Ping** soft key to have the telephone attempt to access the IP address up to the number of times shown on the top of the screen.

The IP Phone displays the following:

Pinging x.x.x.x with 64 bytes
(where x.x.x.x is the IP address chosen in step 4 on [page 560](#))

The **Exit** soft key changes to **Stop** and the other soft keys become blank.

The IP Phone will attempt to contact (ping) the address the number of configured times, displaying the results of each attempt.

- 8 To stop the ping before completing, tap the **Stop** soft key.

The **Stop** key becomes the **Exit** soft key. The results of ping are displayed as follows:

- Packets transmitted (Tx)
- Packets received (Rx)
- Packets lost (Lost)
- Minimum round trip time (Min)
- Maximum round trip time (Max)
- Average round trip time (Avg)

- 9 Tap the **Tracert** soft key to request the IP Phone to trace the route to the entered IP address, up to MaxHop nodes.

The IP Phone displays the following:

Tracing route to: (x.x.x.x) over a maximum of y hops
(where x.x.x.x is the IP address chosen in step 4 on [page 560](#) and y is the number of hops displayed at the top of the screen)

The **Exit** soft key changes to **Stop** and the other soft keys become blank.

The IP Phone will trace the route to the address for the configured number of server hops, displaying the hop number (starting at 0), the time in milliseconds, and the IP address.

When the trace is complete, the screen displays the following:

Trace complete.

- 10 To stop Tracert before it completes, tap the **Stop** soft key.
The **Stop** soft key becomes the **Exit** soft key when Tracert stops.
- 11 Tap the **Exit** soft key to return to the Local Diagnostics menu.

End of Procedure

Procedure 112
Using Ethernet Statistics tool

- 1 Tap the **Tools** icon.
- 2 Tap the **Local Diagnostics** menu entry.
- 3 Tap the **Ethernet Statistics** soft key.

The tool displays **Reset**, **NIPort**, and **EXIT** soft keys, and the statistics for the Network Interface Port (NIPort).

The following statistics are displayed:

- Link Status
- Duplex Mode
- Network Speed
- AutoSense/Negotiate Capability
- AutoSense/Negotiate Completed
- Port VLAN Priority
- Port VLAN ID
- Packet Collision
- CRC Error count
- Frame Error count

- 4 To reset the NIPort counters to 0, tap the **Reset** soft key.
- 5 Tap the **NIPort** soft key.

The **NIPort** soft key changes to the **PCPort** soft key and the tool displays the statistics for the Personal Computer port (PCPort). The following statistics are displayed:

- Link Status
- Duplex Mode
- Network Speed
- AutoSense/Negotiate Capability
- AutoSense/Negotiate Completed
- Port VLAN Priority
- Port VLAN ID
- Packet Collision
- CRC Error count
- Frame Error count

- 6 To reset the PCPort statistics to 0, tap the **Reset** soft key.

End of Procedure

Procedure 113

Using the IP Network Statistics tool

- 1 Tap the Tools icon.
- 2 Tap the Local Diagnostics soft key.
- 3 Tap the IP Network Statistics soft key.

The tool displays the Reset, NIPort, and Exit soft keys, and the statistics for the Network Interface Port (NIPort).

The following statistics are displayed:

- Packets sent
- Packets received
- Broadcast Packets received (Rx)
- Multicast Packets received (Rx)
- Incoming Packets discarded
- Outgoing Packets discarded
- Unknown protocols (Unknown protos
- Last Internet Control Message Protocol (ICMP) message type and code (ICMP Type/Code)

4 To reset the NIPort counters to 0, tap the **Reset** soft key.

5 Tap the **NIPort** soft key.

The **NIPort** soft key becomes the **PCPort** soft key, and the statistics for the Personal Computer Port (PCPort) are displayed.

The following statistics are displayed:

- Packets sent
- Packets received
- Broadcast Packets received (Rx)
- Multicast Packets received (Rx)
- Incoming Packets discarded
- Outgoing Packets discarded
- Unknown protocols (Unknown protos
- Last Internet Control Message Protocol (ICMP) message type and code (ICMP Type/Code)

6 To reset the PCPort counters to 0, tap the **Reset** soft key.

7 Tap the **Exit** soft key to return to the Local Diagnostics menu.

End of Procedure

Procedure 114**Using the IPSet&DHCP Information tool**

- 1** Tap the **Tools** icon.
- 2** Tap the **Local Diagnostics** soft key.
- 3** Tap the **IPSet&DHCP Information** soft key.

The tool displays the **Exit** soft key at the bottom of the display and the following information:

- Configuration
 - Network data validated, MAC address stored, DHCP setting
 - Voice VLAN status, type of configuration and discovery status
 - Primary Server identification
 - Firmware version and Hardware Identification number
 - Telephone Set IP address
 - Network subnet mask
 - Gateway IP address
 - EPROM Server S1 and S2 IP addresses, ports, actions, and number of retries
 - Voice VLAN priority and VLAN ID
 - DHCP Respond String
 - Server Information for S01, S02, S03, and S04, including IP addresses, ports, actions, number of retries, and failover values
- 4** Use the scroll bar to display all the information.
 - 5** Tap the **Exit** soft key to return to the Local Diagnostics menu.


End of Procedure

Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E

The Local Diagnostics submenu offers the following choices:

- 1. IP Set&DHCP Information
- 2. Network Diagnostic Tools
- 3. Ethernet Statistics
- 4. IP Network Statistics
- 5. USB Devices

Figure 66
Local Diagnostics menu

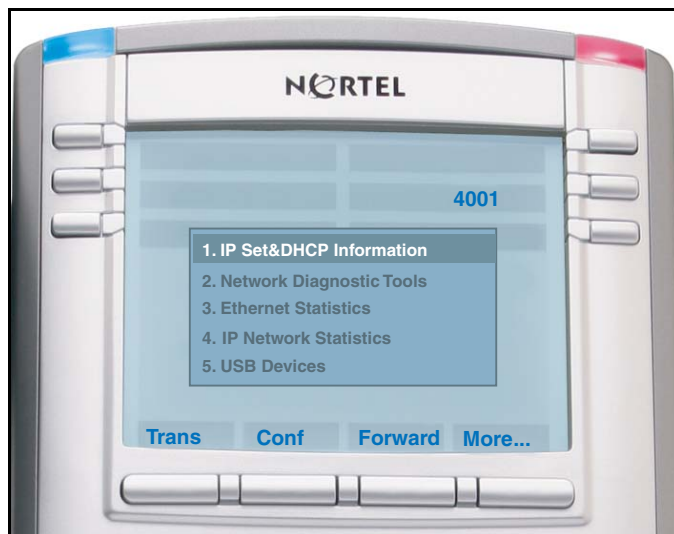

1. IP Set&DHCP Information

Use Procedure 115 to use the IP Set&DHCP Information tool.

Procedure 115**Using the IP Set&DHCP Information tool**

- 1** Press the **Services** key twice.
- 2** Press 2 1 on the dialpad to access the **IP Set&DHCP Information** menu or use the Up/Down navigation keys to scroll and highlight the IP Set & DHCP Information option.
- 3** Press the **Select** soft key.


You can press the **Return** soft key to exit the menu and return to **Local Diagnostics** submenu.

The tool displays the following information:

- Configuration
 - Network data validated, MAC address stored, DHCP setting
 - Voice VLAN status, type of configuration and discovery status
 - Primary Server identification, PC Port enabled status
- Firmware version and Hardware Identification number
- Telephone Set IP address
- Network subnet mask
- Gateway IP address
- EPROM Server S1 and S2 IP addresses, ports, actions, and number of retries
- Voice VLAN priority and VLAN ID
- DHCP Response String
- Server information for S01, S02, S03, and S04, including IP addresses, ports, actions, number of retries, and failover values
- TFTP Server IP address

Figure 67 on [page 568](#) shows IP Set & DHCP Information screen.

Figure 67
IP Set & DHCP Information screen

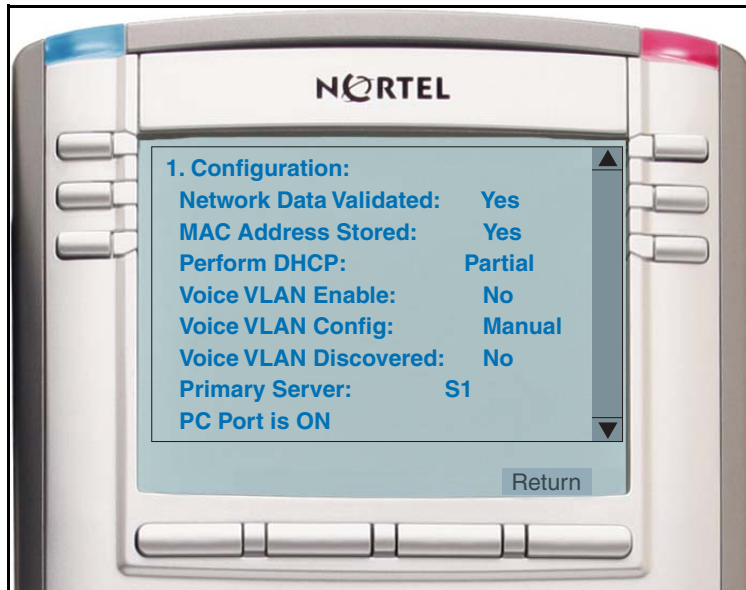

- 4 Use the scroll bar to display all the information.
- 5 Press the **Return** soft key to return to the **Local Tools** menu or the **Stop** key to exit the menu and return to the telephone display.

End of Procedure

2. Network Diagnostic Tools

The Network Diagnostic Tools menu contains the following menu items:

- IP/MaxPing/MaxHop
- Ping
- Tracert
- Exit

Use Procedure 116 on [page 569](#) to use Network Diagnostic Tools.

Procedure 116
Using Network Diagnostic Tools

- 1 Press the **Services** key twice.
- 2 Press 2 2 on the dialpad to access the **Network Diagnostic Tools** menu or use the Up/Down navigation keys to scroll and highlight the IP Set & DHCP Information option.
- 3 Press the **Select** soft key.

You can press the **Return** soft key exit the menu to return to the **Local Diagnostics** submenu.

The screen displays **IP/MaxPing/MaxHop**, **Ping**, **Tracert**, and **Return** soft keys.

Figure 68 on [page 569](#) shows the Network Diagnostic Tools screen.

Figure 68
Network Diagnostic Tools screen



- 4 Enter an IP address or use the Up/Down navigation keys to scroll down through the IP addresses.

- 5 The number of repetitions of the **Ping** command is shown in the top bar of the screen. The default is 4.

To change the number of repetitions, use the arrow keys to select the number and enter a new value using the dialpad.

- 6 The number of hops for the **Tracert** command is shown in the top bar of the screen. The default is 30.

To change the number of hops, use the arrow keys to select the number and enter a new value using the dialpad.

- 7 Press the **Ping** soft key to have the telephone attempt to access the IP address, up to the number of times shown on the top of the screen.

The IP Phone displays the following:

Pinging x.x.x.x with 64 bytes
(where x.x.x.x is the IP address chosen in step 4 on [page 569](#))

The **Return** soft key changes to **Stop** and the other soft keys become blank.

The IP Phone attempts to contact (ping) the address the number of configured times, and displays the results of each attempt.

- 8 To stop the ping before completing, tap the **Stop** soft key.

The **Stop** soft key becomes the **Return** soft key. The results of ping are displayed as follows:

- Packets transmitted (Tx)
- Packets received (Rx)
- Percentage of Packets Lost (Lost)
- Minimum round trip time (Min)
- Maximum round trip time (Max)
- Average round trip time (Avg)

- 9 Press the **Tracert** soft key to request the IP Phone to trace the route to the entered IP address, up to MaxHop nodes.

The IP Phone displays the following:

Tracing route to: (x.x.x.x) over a maximum of y hops
(where x.x.x.x is the IP address chosen in step 4 on [page 569](#) and y is the number of hops displayed at the top of the screen)

The **Return** soft key changes to **Stop** and the other soft keys become blank.

The IP Phone traces the route to the address for the configured number of server hops, displaying the hop number (starting at 0), the time in milliseconds, and the IP address.

When the trace is complete, the screen displays the following:

Trace complete.

- 10 To stop Tracert before it completes, tap the **Stop** soft key.

The **Stop** soft key becomes the **Return** soft key when Tracert stops.

- 11 Tap the **Return** soft key to return to **Local Tools** menu or the **Stop** key to exit the menu and return to the telephone display.

End of Procedure

3. Ethernet Statistics

Use Procedure 117 on [page 571](#) to use the Ethernet Statistics menu.

Procedure 117

Using Ethernet Statistics tool

- 1 Press the **Services** key twice.
- 2 Press 2 3 on the dialpad to access the **Ethernet Statistics** menu or use the Up/Down navigation keys to scroll and highlight the **Ethernet Statistics** option.
- 3 Press the **Select** soft key.

You can press the **Return** soft key exit the menu to return to the **Local Diagnostics** submenu.

The screen displays **Reset**, **Nlport/PCport**, and **Return** soft keys. The **Nlport/PCport** soft key is used to select the Network (NI) Port or the PC (PC) Port. The soft key label indicates the current display page. For example, when Nlport appears on the soft key label, the information showing on the display is for the network interface port.

When NPort appears on the second soft key label, the following statistics are displayed:

- Link Status
- Duplex Mode
- Network Speed (10 Mb, 100 Mb, or 1G)
- AutoSense/Negotiate
 - AutoSense/Negotiate Capability
 - AutoSense/Negotiate Completed
- Port VLAN Priority
- Port VLAN ID
- Packet Collision
- CRC Error count
- Frame Error count
- Unicast Packets Sent
- Unicast Packets Received
- Broadcast Packets Received
- Multicast Packets Received
- 802.1x Status (EAP Status)

4 To reset the NPort counters to 0, press the **Reset** soft key.


5 Press the **NPort** soft key.

The **NIPort** soft key changes to the **PCPort** soft key and the tool displays the statistics for the Personal Computer port (PCPort). The following PCPort statistics are displayed:

- Link Status
- Duplex Mode
- Network Speed
- AutoSense/Negotiate Capability
- AutoSense/Negotiate Completed
- Port VLAN Priority
- Port VLAN ID
- Packet Collision
- CRC Error count
- Frame Error count
- Unicast Packets Sent
- Unicast Packets Received
- Broadcast Packets Received
- Multicast Packets Received

Figure 69 on [page 574](#) shows Ethernet Statistics display screen.

Figure 69
Ethernet Statistics display screen

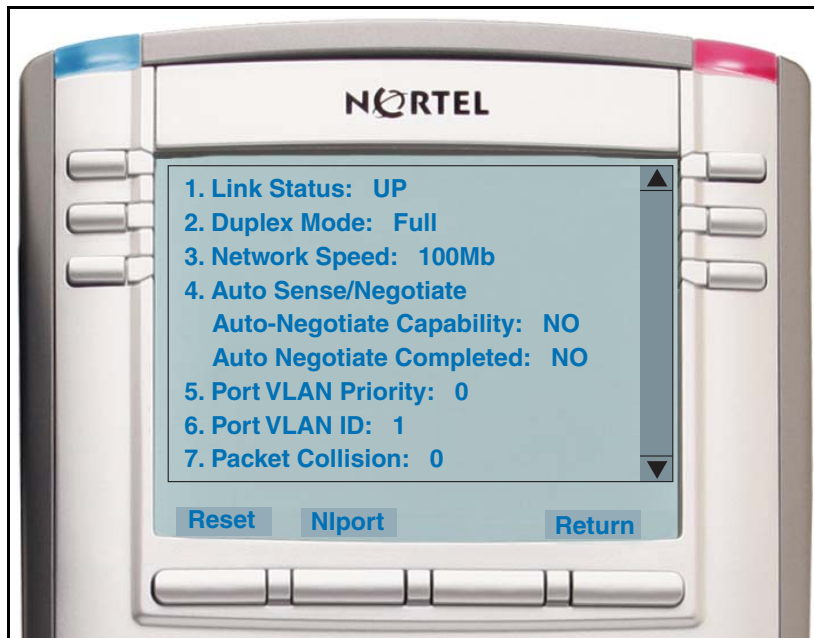

- 6 To reset the PCPort statistics to 0, tap the **Reset** soft key.

End of Procedure

4. IP Network Statistics

Use Procedure 118 to use the Network Statistics tool.

Procedure 118

Using the IP Network Statistics tool

- 1 Press the **Services** key twice.
- 2 Press 2 4 on the dialpad to access the **IP Network Statistics** menu or use the Up/Down navigation keys to scroll and highlight the **IP Network Statistics** option.
- 3 Press the **Select** soft key.

You can press the **Return** soft key exit the menu to return to the **Local Diagnostics** submenu.


- 4 The screen displays **Reset**, **Refresh**, and **Return** soft keys. The Refresh soft key (second soft key on the display) refreshes the counts on the display. This display shows the Network statistics for the IP Phone's port of the 3 port switch.

The following statistics are displayed:

- Packets sent
- Packets received
- Incoming Packet errors
- Outgoing Packet errors
- Incoming Packets discarded
- Outgoing Packets discarded
- Unknown protocols (Unknown protos)
- Last Internet Control Message Protocol (ICMP) message type and code (The Last ICMP Type/Code)

Figure 70 on [page 576](#) shows IP Networks Statistics screen.

Figure 70
IP Networks Statistics screen

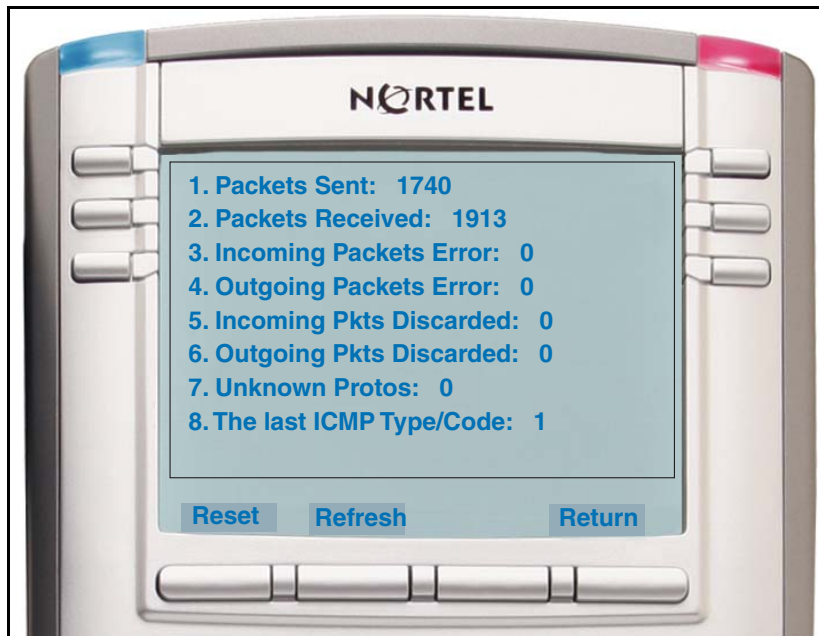

- 5 To reset the NIPort counters to 0, press the **Reset** soft key.
- 6 The display counter values are a snapshot and the displayed counter values will not change while the display is shown. To refresh them as you view the counter display, press the **Refresh** soft key.
- 7 You can press the **Return** soft key exit the menu to return to the **Local Diagnostics** submenu, or you can press the **Stop** key to close the menu and return to the telephone display.

End of Procedure

5. USB Devices

The USB Devices tool provides information about an Universal Serial Bus (USB) devices that connect to your IP Phone. The IP Phone automatically detects USB devices when they are connected to the USB port in the back of the IP Phone. The IP Phone will enumerate and list any USB device, but only

USB mice and USB keyboards can be used. The display shows the descriptive text string received from the USB device.

Procedure 119**Using the USB Devices tool**

- 1** Press the **Services** key twice.
- 2** Press 2 5 on the dialpad to access the **USB Devices** menu or use the Up/Down navigation keys to scroll and highlight the USB Devices option.
- 3** Press the **Select** soft key.

You can press the **Return** soft key exit the menu to return to the **Local Diagnostics** submenu.

End of Procedure

Appendix F: Configuring the Local Tools menu

Contents

This section contains information on the following topics:

| | |
|--|---------------------|
| Introduction | 579 |
| Configuring the Local Tools menu | 580 |

Introduction

This section describes the Local Tools menu for the IP Phone 1110, IP Phone 1120E, IP Phone 1140E and the IP Phone 1150E.

For information about the IP Phone 2007 Local Tools menu, see “Local Tools menu” on page 158.

Configuring the Local Tools menu

Double press the Services key to access the Local Tools menu. To make a menu selection, you can press the number associated with the menu item (for example, press 21 to show the IP Set&DHCP Information menu) or you can use the navigation keys to scroll through the list of menu items.

For information about the Local Tools menu for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E see “Local Tools menu for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E” on page 581.

For information about the Local Tools menu for the IP Phone 1110, see “Local Tools menu for the IP Phone 1110” on page 586.

Local Tools menu for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E

Table 71 shows the options in the Local Tools menu for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E.

Table 71

Local Tools menu options for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E

| |
|-------------------------------|
| 1. Preferences |
| 1. Display Settings |
| 2. Languages... |
| 3. Bluetooth Setup (see Note) |
| 2. Local Diagnostics |
| 1. IP Set&DHCP Information |
| 2. Network Diagnostic Tools |
| 3. Ethernet Statistics |
| 4. IP Network Statistics |
| 5. USB Devices |
| 3. Network Configuration |
| 4. Lock Menu |
| 1. Manual Secure Local Menu |
| 2. Manual Partial Secure Menu |
| 3. Manual Disable Secure Menu |
| 4. DHCP Secure Menu |
| 5. Lock Now |

Note: Bluetooth wireless technology (available on IP Phone 1140E, and IP Phone 1150E) is optional and is dimmed if it is not enabled.

Preferences

The Preferences submenu offers the following choices:

- 1. Display Settings
- 2. Languages...
- 3. Bluetooth Setup (IP Phone 1140E, and IP Phone 1150E)

1. Display Settings

The Display Settings menu provides access to the Contrast and Screen Saver tools. Contrast adjusts the viewing angle of the display. Screen Saver controls how long the display remains lit if the phone is inactive.

Note: Nortel recommends you use the Telephone Options menu to adjust the contrast.

2. Languages...

This item is used to select the language in the local menus of the IP Phone.

3. Bluetooth Setup

You can access the Bluetooth Setup options using either of the following two methods:

- Double press the **Headset** key to open the 3. Bluetooth Setup dialog box.
- Double press the **Services** key to open the Local Tools menu, press 1 on the dialpad to select **1. Preferences** and press 3 on the dialpad to open the **3. Bluetooth Setup** dialog box.

The **3. Bluetooth Setup** item is not available on all phones. If the 3. Bluetooth Setup menu item appears dimmed, or fails to open when you double press the **Headset** key, Bluetooth wireless technology is not enabled on your phone. To configure the administration setting for Bluetooth wireless technology, see “Bluetooth wireless technology” on page 426.

Local Diagnostics

For information about Local Diagnostics for the IP Phone 1120E, the IP Phone 1140E, and the IP Phone 1150E see “Local Diagnostics for the IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E” on page 566.

Network Configuration

Use the Network Configuration menu item to configure the IP Phone 1120E, IP Phone 1140E, and the IP Phone 1150E, and to display information which was configured during installation. You can access the Network Configuration menu using one of the following methods:

- Reboot the IP Phone and press the four soft keys at the bottom of the display in sequence from left to right.
- Select 3. Network Configuration from the Local Tools menu.

Note: When attempting to access Network Configuration by double pressing the Services key, or if the soft keys 1, 2, 3, and 4 are pressed during bootup, the **Admin Password** window will prompt for the Admin Password to be entered. Enter the “26567*738 (color*set) password, then press the center of Nav key.

For information about Network Configuration, see the following procedures:

- Procedure 66 on [page 373](#)—IP Phone 1120E
- Procedure 73 on [page 416](#)—IP Phone 1140E
- Procedure 80 on [page 463](#)—IP Phone 1150E

Lock Menu

You must enter the fixed password whenever the Lock Menu sub menu is accessed. Use the dialpad and enter the fixed password 26567*738 (color*set).

Note: The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

The Lock Menu offers the following choices:

- 1. Manual Secure Lock Menu
- 2. Manual Partial Secure Menu
- 3. Manual Disable Secure Menu
- 4. DHCP Secure Menu
- 5. LockNow

When options are inactive, the text appears dimmed.

1. Manual Secure Local Menu

When this option is selected, you are prompted to enter the fixed password whenever the **Services** key is double-pressed.

2. Manual Partial Secure Menu

When this option is selected, you are prompted to enter the fixed password whenever you access the Local Diagnostics and the Network Configuration sub menus.

3. Manual Disable Secure Menu

When this option is selected, the Lock Menu is disabled.

4. DHCP Secure Mode

The IP Phone follows the menu lock configuration received from the Full DHCP string:

- if SECUREMENU is present, you are prompted to enter a password after you double-press the Services key
- if PARTSECURE is present, you are prompted to enter a password whenever you select Local Diagnostics and Network Configuration
- if neither SECUREMENU nor PARTSECURE is present, then the menu is not locked

For information about Password Protection of the Local Tools menu in the applicable IP Phone section.

5. Lock Now

The Lock Now item immediately exits the Tools menu, closes any open Tools menu pages, and locks the **Tools** menu.

Procedure 120
Locking the Tools menu

- 1 Press the Services key twice.
- 2 Press 4 on the dialpad to access the Lock Menu item or use the Up/Down navigation keys to scroll and highlight the Lock Menu options.
- 3 Press the Select soft key.

End of Procedure

Procedure 121
Unlocking the Tools menu

- 1 Press the Services key twice.
- 2 Enter the password 26567*738 (color*set) in the prompt window.
- 3 The Tools menu is unlocked, and will remain active for five minutes.

End of Procedure

Local Tools menu for the IP Phone 1110

Table 71 shows the Local Tools menu for the IP Phone 1110.

Table 72
Local Tools menu options for the IP Phone 1110

| |
|-------------------------------|
| 1. Preferences |
| 1. Contrast |
| 2. Language |
| 3. Backlight Timer |
| 2. Local Diagnostics |
| 1. IP Set&DHCP Information |
| 2. Network Diagnostic Tools |
| 3. Ethernet Statistics |
| 4. IP Network Statistics |
| 3. Network Configuration |
| 4. Lock Menu |
| 1. Manual Secure Local Menu |
| 2. Manual Partial Secure Menu |
| 3. Manual Disable Secure Menu |
| 4. DHCP Secure Menu |
| 5. Lock Now |

1. Preferences

The Preferences submenu offers the following choices:

- 1. Contrast
- 2. Language
- 3. Backlight Timer

1. Contrast

The Contrast tool adjusts the contrast of the LCD display screen on the IP Phone 1110.

The initial Contrast level for the LCD display screen is downloaded when the IP Phone 1110 is configured. Selecting the Contrast tool automatically sets the LCD display screen contrast to the IP Phone's local contrast setting.

2. Language

Use this item to select the language in the local menus of the IP Phone. To access the language used by the server-based features, press **Services > Telephone Options > Languages**.

To access the local language tool, double-press the **Services** key, select the **Preferences** menu, or press **1** on the dialpad to open the **Preferences** menu, then press **2** to select the **Language** tool.

3. Backlight Timer

Use this item to adjust how long the LCD display screen remains lit when the IP Phone 1110 is inactive.

The backlight time is displayed in the format **xxx**, where **xxx** is the time in minutes or hours.

Local Diagnostics

For information about Local Diagnostics for the IP Phone 1110, see Appendix Appendix E: "IP Phone diagnostic utilities" on [page 525](#).

Network Configuration

Use the Network Configuration menu item to configure the IP Phone 1110 and to display information which was configured during installation. You can access the Network Configuration menu using one of the following methods:

- Reboot the IP Phone and press the four soft keys at the bottom of the display in sequence from left to right.
- Select **3. Network Configuration** from the Local Tools menu.

For information about Network Configuration see Procedure 58 on [page 327](#) or Procedure 59 on [page 334](#).

Lock Menu

You must enter the fixed password whenever the Lock Menu sub menu is accessed. Use the dialpad and enter the fixed password 26567*738 (color*set).

Note: The settings configured in the Lock Menu sub menu override the settings received from the DHCP string.

The Lock Menu offers the following choices:

- 1. Manual Secure Lock Menu
- 2. Manual Partial Secure Menu
- 3. Manual Disable Secure Menu
- 4. DHCP Secure Menu
- 5. LockNow

When options are inactive, a black box appears at the beginning of the menu item, and replaces the menu option number.

1. Manual Secure Local Menu

When this option is selected, you are prompted to enter the fixed password whenever the **Services** key is double-pressed.

2. Manual Partial Secure Menu

When this option is selected, you are prompted to enter the fixed password whenever you access the Local Diagnostics and the Network Configuration sub menus.

3. Manual Disable Secure Menu

When this option is selected, the Lock Menu is disabled.

4. DHCP Secure Mode

The IP Phone follows the menu lock configuration received from the Full DHCP string:

- if SECUREMENU is present, you are prompted to enter a password after you double-press the Services key
- if PARTSECURE is present, you are prompted to enter a password whenever you select Local Diagnostics and Network Configuration
- if neither SECUREMENU nor PARTSECURE is present, then the menu is not locked

For information about Password Protection of the Local Tools menu in the applicable IP Phone section.

5. Lock Now

The Lock Now item immediately exits the Tools menu, closes any open Tools menu pages, and locks the **Tools** menu.

Procedure 122 Locking the Tools menu

- 1** Press the Services key twice.
- 2** Press 4 on the dialpad to access the Lock Menu item or use the Up/Down navigation keys to scroll and highlight the Lock Menu options.
- 3** Press the Select soft key.

End of Procedure

Procedure 123 Unlocking the Tools menu

- 1** Press the Services key twice.
- 2** Enter the password 26567*738 (color*set) in the prompt window.
- 3** The Tools menu is unlocked, and will remain active for five minutes.

End of Procedure

Appendix G: Bluetooth wireless technology

Contents

This section contains information on the following topics:

| | |
|----------------------------|-----|
| Introduction | 591 |
| Description | 591 |
| Manual configuration | 592 |
| TFTP configuration | 594 |
| Pairing your headset | 598 |

Introduction

Bluetooth wireless technology  **Bluetooth** is supported on the IP Phone 1140E, and the IP Phone 1150E. The IP Phone 1120E does not support Bluetooth wireless technology.

Note: On the IP Phone 1150E, only the Agent port supports Bluetooth wireless technology.

Description

The IP Phone 1140E, and the IP Phone 1150E contain both hardware and software support for Bluetooth wireless technology enabled headsets. When the IP Phone powers up, Bluetooth wireless technology is disabled and it must be explicitly enabled.

The following methods are available to enable Bluetooth wireless technology on the IP Phone:

- **Manual configuration**— can be used to set the Bluetooth wireless technology mode on the IP Phone on a phone-by-phone basis. If manual configuration is used exclusively, a TFTP server is not required to configure Bluetooth wireless technology. For further information about manual configuration, see “Manual configuration” on page 592.

Use Procedure 124 on [page 593](#) to configure the Bluetooth wireless technology through the **Local Tools > Network Configuration** submenu.

- **TFTP configuration**—can be used to initially set the Bluetooth wireless technology mode then the TFTP Server can be removed. The IP Phone will now retain the value and will use the last value received if no new value is received.

Use Procedure 125 on page 594 to enable Bluetooth wireless technology on the IP Phone 1140E using the TFTP configuration file (1140e.cfg) retrieved during bootup.

Note: If Bluetooth wireless technology is enabled on your phone, and password-protection for the Local Tools menu has been enabled, you can still double-press the **Headset** key to access the **3. Bluetooth Setup** menu.

Manual configuration

You can enable or disable Bluetooth wireless technology through the Network Configuration menu. The **Enable Bluetooth** option provides administration control over Bluetooth wireless technology. The following values are available:

- **Auto**—(default) Bluetooth wireless technology setting received through TFTP configuration
- **Yes**—Bluetooth wireless technology is enabled on the IP Phone
- **No**—Bluetooth wireless technology is disabled on the IP Phone

When the IP Phone 1140E firmware is upgraded, or when the IP Phone is received from the manufacturer with the latest firmware, the default power up

setting is Auto. When the setting is Auto, the setting received from the TFTP Device Config file controls whether Bluetooth wireless technology is enabled.

When the Bluetooth wireless technology setting is Yes or No, the value received from the TFTP Device Config file is saved but is not used. The Bluetooth wireless technology administration setting is forced enabled, or disabled respectively regardless of the value received in the TFTP Device Config file. If the setting is then changed back to Auto, the saved value will take effect if no further setting is received through the TFTP server.

Procedure 124

Configure the Bluetooth wireless technology administration setting

- 1** Double-press the **Services** key.
- 2** Press **3** on the dialpad to access the **Network Configuration** menu or use the Up/Down navigation keys to scroll and highlight the Network Configuration option.
- 3** Use the Right navigation key to navigate to the **Enable Bluetooth** combo box. The current setting is displayed.
- 4** Press **Enter** to start the edit mode.
- 5** Use the Down navigation key to open the list.
- 6** Use the Up/Down navigation keys to scroll and highlight the desired Bluetooth wireless technology mode.
- 7** Press **Enter** to select the mode and to close the list.
- 8** Press **Enter** to exit the edit mode.
- 9** Press the **Apply&Reset** soft key to save the change and to restart the phone.

End of Procedure

The new mode takes affect when the IP Phone restarts. If the administrative control enabled Bluetooth wireless technology on the phone, the item **3. Bluetooth Setup** appears in **1. Preferences** submenu.

After setting administrative control, it is recommended that the Partial Menu Lock feature be activated to prevent users from changing the administration setting. For further information about the Partial Menu Lock feature, see Appendix Appendix F: “Configuring the Local Tools menu” on [page 579](#).

TFTP configuration

Use Procedure 125 on [page 594](#) to enable Bluetooth wireless technology on the IP Phone. The IP Phone 1140E is used as an example.

Procedure 125 Enabling Bluetooth wireless technology on the IP Phone 1140E

Note: If the TFTP server is configured and is running, skip to step 5 on [page 596](#) to configure the IP Phone 1140E with the TFTP Server IP address.

- 1 Add the [DEVICE_CONFIG] section to the 1140e.cfg file.
- 2 Create the device configuration file. This file must have the same name as that specified for the FILENAME parameter in the [DEVICE_CONFIG] section of the 1140e.cfg file. See Figure 71.

Figure 71
Sample of the 1140eDEV.cfg file

```
ENABLE_BT 1
```

- 3 The device configuration file (1140eDEV.cfg) enables Bluetooth wireless technology if ENABLE_BT 1 is present. If ENABLE_BT 0 is present, Bluetooth wireless technology is disabled. Figure 72 shows an example of the 1140e.cfg file with the FW and the ENABLE_BT line.

It is also possible to use the 1140e.cfg file with only the [DEVICE_CONFIG] section for the control of Bluetooth wireless technology. Figure 73 on [page 595](#) shows an example of the 1140e.cfg file with only the [DEVICE_CONFIG] section.

Note: If only the [DEVICE_CONFIG] version is used, you must add the [FW] section before the BootC FW recovery is used. Otherwise, the BootC FW download fails and the IP Phone reverts to the BootC TPS download screen.

Figure 72
Sample of the 1140E.cfg file

```
[FW]
DOWNLOAD_MODE AUTO
VERSION 0625Cxx
FILENAME 0625Cxx.bin
PROTOCOL TFTP
SERVER_IP 192.168.1.100
SECURITY_MODE 0

[DEVICE_CONFIG]
DOWNLOAD_MODE FORCED
VERSION 000001
FILENAME 1140eDEV.cfg
SERVER_IP 192.168.1.100
```

Figure 73
Sample of the DEVICE_CONFIG file with only the [DEVICE_CONFIG] section

```
[DEVICE_CONFIG]
DOWNLOAD_MODE FORCED
VERSION 000001
FILENAME 1140eDEV.cfg
SERVER_IP 192.168.1.100
```

- 4 Start the TFTP Server. The TFTP Server must be running on the network when the IP Phone 1140E powers up to retrieve the Bluetooth wireless technology administrative control. After you put the 1140e.cfg and the device config file in the TFTP Server directory, ensure the TFTP Server is running then reboot the IP Phone 1140E. For information about TFTP Server configuration, see Appendix Appendix H:: “TFTP Server” on [page 605](#).

Once the IP Phone 1140E retrieves the setting when the IP Phone 1140E restarts, it is saved in persistent memory. If the Enable BT setting is set to Auto, then the received value is acted on and Bluetooth wireless technology is either enabled or disabled on the IP Phone 1140E. If the Device Config file with the Enable BT setting is not received for any reason and the Enable Bluetooth mode is set to Auto, then the phone uses the last value received (retrieved from persistent memory).

If administrative control is not retrieved, the previously received value is used. If no value has ever been retrieved, then Bluetooth wireless technology is disabled by default.

If the IP Phone 1140E successfully retrieves the administrative control and enables Bluetooth wireless technology, 3. *Bluetooth Setup* appears in the Preferences menu.

- 5 Configure the IP Phone 1140E with a TFTP Server IP address so the IP Phone can access the TFTP Server.
- 6 Press the **Services** key twice.
- 7 Press 3 on the dialpad to access the **Network Configuration** menu or use the Up/Down navigation keys to scroll and highlight the **Network Configuration** option. Press **Enter**.
- 8 Enter the TFTP IP address in the **TFTP IP** field.
- 9 Press the **Apply&Reset** soft key.

End of Procedure

Table 73 lists the 1140e.cfg field names and definitions.

Table 73
1140e.cfg field name definitions (Part 1 of 2)

| Field name | Field value | Definition |
|---------------|-------------|---|
| [FW] | | Section header for firmware download information |
| DOWNLOAD_MODE | AUTO | Recommended setting. FW is downloaded when the IP Phone's FW version is older than the value in the 1140e.cfg file's VERSION field. |
| VERSION | 0625Cxx | FW version |
| FILENAME | 0625Cxx.bin | image file name, must match the file name of the FW file |
| PROTOCOL | TFTP | Download protocol must be TFTP |

Table 73
1140e.cfg field name definitions (Part 2 of 2)

| Field name | Field value | Definition |
|---------------|-----------------|---|
| SERVER_IP | xxx.xxx.xxx.xxx | IP address of the TFTP server that will download the FILENAME file. |
| SECURITY_MODE | 0 | For future use. |

Possible reasons Bluetooth wireless technology remains disabled on the IP Phone after startup

The following are possible reasons Bluetooth wireless technology remains disabled on the IP Phone 1140E after startup:

- The TFTP Server is down or is no longer present on the network.
- Network failure.
- The DEVICE_CONFIG section is missing from the 1140e.cfg file or is present but the specified device config file cannot be accessed, or it can be accessed but the ENABLE_BT line is either missing, or is present but the value of 1 is missing.

Create the DEVICE CONFIG section and file

The file pointed to by the [DEVICE CONFIG] section contains the parameter, ENABLE_BT. The parameter's value is set to 1, which enables Bluetooth wireless technology.

The [DEVICE_CONFIG] section can point to a single file that enables or disables the Bluetooth wireless technology on all phones, or it can point to a device configuration file for specific phones using a wildcard file name to enable the Bluetooth wireless technology for select phones. The configuration files for the specific phones use the IP Phone MAC address as the file name with the .cfg file extension.

Table 74 lists the [DEVICE_CONFIG] section field names and definitions.

Table 74
 [DEVICE_CONFIG] field name definitions

| Field name | Field value | Definition |
|-----------------|-----------------|---|
| [DEVICE_CONFIG] | | Section header for device configuration file information |
| DOWNLOAD_MODE | FORCED | Recommended setting. The version is ignored and the DEVICE_CONFIG file is always read. |
| | or | |
| VERSION | 000001 | The version of the device config file |
| FILENAME | 1140eDEV.cfg | Device config filename. The file name can be anything. If a file name is specified, the file name is loaded to every IP Phone 1140e. |
| | or | |
| | *.cfg | A wildcard file name enables a different setting to be configured for every IP Phone. The IP Phone checks for a file with the MAC address as the file name (for example, 001365FEF1C6.cfg). |
| SERVER_IP | xxx.xxx.xxx.xxx | The IP address of the TFTP Server that will download the FILENAME file. |

Pairing your headset

Use Procedure 126 to pair the Bluetooth wireless technology headset with your IP Phone.

Procedure 126**Pairing the Bluetooth wireless technology headset with your IP Phone**

- 1 Restart your IP Phone using one of the following methods:
 - If you are using an AC power adapter, unplug it, wait ten seconds, and reinsert it.
 - If you are using POE, unplug the LAN Ethernet cable, wait ten seconds, and reinsert it.
- 2 Double-press the **Headset** key to open the 3. Bluetooth Setup dialog box. The **Enable Bluetooth** check box is highlighted.

Note: If the 3. Bluetooth Setup menu fails to open when you double press the Headset key, Bluetooth wireless technology is not enabled on your phone.
- 3 Press the **Enter** key to activate Bluetooth wireless technology.

A check mark is displayed to indicate that Bluetooth wireless technology is activated. The message *BT Enabled* appears at the bottom of the display.
- 4 Put your wireless headset in its pairing or search mode. The procedure for doing this can be different for each wireless headset. See the documentation that accompanied your headset.
- 5 Search for the headset.
 - a. Press the **Right** navigation key twice to highlight the **Search** button, displayed next to the Search Devices item.
 - b. Press the **Enter** key.

The message *Searching...* is displayed.

If the search is successful, a list of Bluetooth wireless technology headsets appears in the Found: combo box.
 - c. Choose one of the following:
 - If the search is successful, proceed to step 6.
 - If the search is not successful, the message *Search completed. No device found* is displayed. Power off the wireless technology, and repeat step 4 and step 5.

If pairing is still unsuccessful, pair the phone to another wireless headset, or contact the headset vendor.

- 6 When the name of your headset appears in the Found: box, press the Stop soft key or wait for the search to finish. When the search is complete, the message *Search Completed Found Device(s)* appears.
- 7 Choose one of the following:
 - If your headset is displayed as the first item in the Found combo box, proceed to step 8.
 - If your headset is not displayed as the first item in the Found combo box, select your headset from the list, as follows:
 - a. Press the **Right** navigation key one or more times to highlight the Found: combo box. Press the **Enter** key to start the edit mode.
 - b. Press the **Down** navigation key to open the list. Press the **Up/Down** navigation keys to scroll and highlight your headset.
 - c. Press the **Enter** key to select the headset and close the list. Press the **Enter** key to exit edit mode.
- 8 Press the **Right** navigation key one or more times to highlight the **Pair** button (next to the Pair Device item) and press the **Enter** key.
 - a. A dialog box appears, with the prompt *Enter PIN#*.
 - b. Use the telephone dialpad to enter the Bluetooth wireless technology headset PIN and press the **Enter** key.

Check your headset's documentation to find its PIN (sometimes called a passkey). Typically this value is 0000.

- 9 Choose one of the following:
 - If the headset is successfully paired with your phone, proceed to step 10. To verify that the pairing was successful, ensure that the headset appears in the list next to the Paired: item. If pairing is successful, the message *Pair completed* also appears at the bottom of the screen.
 - If the headset is not successfully paired with your phone, an error message appears at the bottom of the screen. If an error message appears:
 - Confirm that the wireless headset is still in search/pair mode. For example, on the GN Netcom GN 6210 headset the blue LED should still be lighted when the pairing operation starts.

- If the headset timed out and exited search/pairing mode, put the headset in pairing mode, as discussed in step 4, and repeat step 8.
- Check that you are using the correct PIN and repeat step 8.

10 Choose one of the following:

- If your headset is displayed as the first item in the Paired combo box, proceed to step 11.
- If more than one device is paired, you may need to navigate to the one you want, as follows:
 - Press the **Right** navigation key one or more times to highlight the item in the Paired combo box. Press the **Enter** key to start the edit mode.
 - Press the **Up/Down** navigation keys to open the list. Press the **Up/Down** navigations key to scroll in the list and highlight your headset.
 - Press the **Enter** key to select the headset and close the list. Press the **Enter** key to exit edit mode.

11 Choose one of the following:

- If only one headset is paired, proceed to step 12.
- If more than one wireless headset is paired, the first headset paired is automatically made the active device.

To make a different headset active, press the **Right** navigation key one or more times to highlight the Set button (next to the Set Active Device item). Press the **Enter** key.

The message *Set active: <device name>* appears. This means the headset named is now the active wireless headset and is used when you press the headset key.

12 Press the **Exit** soft key to exit to the main display. Changes are saved automatically.

Note 1: Paired headset information is saved and restored when a reboot of the IP Phone occurs; therefore, the active wireless headset will remain paired and active.

Note 2: It is not recommended to pair more than one headset of the same model because they will have identical names in the Paired list.

End of Procedure

Dual Pairing Headsets

Take special care when using a dual pairing type of Bluetooth wireless technology headset. This headset can be paired to its base as well as to the IP Phone 1140E and IP Phone 1150E.

If the headset is paired to both, the IP Phone is the second device. When you press the headset telephone key and you hear a single tone, the headset is active for a call from the desktop telephone base.

To use the headset with the IP Phone, press and hold the headset's telephone key for 1 second. You will hear a double beep. The headset is active with the IP Phone.

If the base is powered off, then the headset is only paired to the IP Phone. Press the headset's telephone key to connect to the IP Phone.

Note: Unless there is a need to dual pair a headset, operating the headset with the IP Phone is simpler if the headset is only used with its charging-only base. The desktop IP Phone base should be powered off if it is not in use.

Using a wired headset

If you connect a Bluetooth wireless technology headset and a wired handset to the same IP Phone, the two interact as follows:

- If no wireless headset is paired, the wired headset works as normal. Likewise, if a wireless headset is paired with an IP Phone but is not in range, the wired headset works as normal.
- If the Use BT Headset check box is selected, the Bluetooth wireless technology headset is used as the phone headset.

The Bluetooth wireless technology headset can work only within range of the IP Phone; as a wireless headset approaches the edge of its radio range, the audio quality degrades and radio interference noise increases. When the wireless headset is in connecting range, the **Headset** key controls the headset, even if a wired headset is attached. If a Bluetooth wireless technology headset moves out of connecting range, a special beep sounds in the headset indicating the connection was lost.

When you do not want to use Bluetooth wireless technology

If a Bluetooth wireless technology headset is connected, and you want to use the wired headset, you can switch between the wireless headset and the wired headset. It is not necessary to unpair or disable Bluetooth wireless technology. You can switch between a wired headset and back again either with the phone is idle or during an active call.

Use Procedure 127 to switch between a wired headset and a wireless headset.

Procedure 127

Switching between a wired headset and wireless headset

- 1** Double-press the **Headset** key to open the **3. Bluetooth Setup** dialog box.
- 2** Press the **Left/Right** navigation key to select the **Use BT headset** item.
A check mark indicates that the wireless headset is used. This option is on (o) by default.
- 3** To switch between a wired headset and a wireless headset, do one of the following:
 - Press the **Enter** key to clear the check box and to use the wired headset.
 - Press the **Enter** key to select the check box and to use the wireless headset.
- 4** Press the **Exit** soft key to exit to the main display.

End of Procedure

Use Procedure 128 to unpair the Bluetooth wireless technology headset.

Procedure 128

Unpairing a wireless headset

- 1 Double-press the **Headset** key to open the **3. Bluetooth Setup** dialog box.
- 2 Press the **Right** navigation key to select the Paired: item.
- 3 Choose one of the following:
 - If your headset is displayed in the Paired combo box, proceed to step 4.
 - If more than one device is paired, and your headset is not already displayed in the Paired combo box, do the following:
 - Press the **Right** navigation key one or more times to highlight the Paired: combo box. Press the **Enter** key to open edit mode.
 - Press the **Up/Down** navigation keys to open the list. Press the **Up/Down** navigations key to scroll in the list and highlight your headset.
 - Press the **Enter** key to select the headset and close the box. Press the **Enter** key to exit edit mode.
- 4 Press the **Right** navigation key one or more times to highlight the UnPair button (next to the UnPair Device item).
- 5 Press the **Enter** key.

Your Bluetooth wireless technology headset is unpaired and removed from the Paired: item list.
- 6 Press the **Exit** soft key to exit to the main display.

Note: Your Bluetooth wireless technology headset is no longer paired with your phone, and the wired headset can be used. To use the Bluetooth wireless technology headset again, you must perform the pairing and activation procedure.

End of Procedure

Appendix H: TFTP Server

Contents

This section contains information on the following topics:

| | |
|---|-----|
| Introduction | 605 |
| TFTP Server planning | 606 |
| Pre-download checklist | 607 |
| Updating IP Phones firmware | 607 |
| Updating the IP Phone 2007 firmware | 608 |
| Updating the firmware for IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E | 613 |

Introduction

A Trivial File Transfer Protocol (TFTP) Server may be required in an IP Telephony system to distribute firmware to IP Phones. The TFTP Server can reside on a subnet other than the Call Server and can be located on either side of the firewall.

TFTP Server planning



CAUTION

TFTP firmware download does not work when the IP Audio Conference Phone 2033 is behind a NAT Server.

The TFTP Server holds the firmware for updating the IP Phones. Assuming the IP address for the TFTP Server has been configured on the IP Phone, each time the IP Phone is powered on, rebooted, or is manually reset, the IP Phone checks the version of firmware against the version of firmware on the TFTP Server. If the versions are different, the IP Phone downloads the new firmware from the TFTP Server.

The following information must be considered when planning for a TFTP Server:

- The process for the IP Phone to check the version of firmware against the firmware on the TFTP Server takes a few seconds for a quiet network.
- The IP Phone attempts to connect to the TFTP Server. If the TFTP Server is offline, unreachable, or no connection is made, the IP Phone uses its existing version.
- The firmware downloading process takes about 30 seconds.
- The TFTP Server must be capable of supporting multiple TFTP sessions.
- When the IP Phone makes a TFTP request, it uses filenames without a full path name. Therefore, firmware updates for the IP Phones must be installed on the root directory of the TFTP Server.

When the firmware is uploaded to the TFTP Server, the files must be unzipped. Allow time for the TFTP Server to refresh. Monitor the TFTP Server for any errors. The TFTP Server can be located anywhere on the network if the IP Phones have the subnet mask and default IP gateway configured correctly. However, the IP Phone expects a response within two seconds to any TFTP Server request. Therefore, the TFTP Server should not be located, for example, at the other end of a slow WAN link.

If too many IP Phones attempt to download new software simultaneously, it can cause the downloads to slow down or return error messages. To reduce the number of retries and error messages, manage the download process by staggering the times the IP Phones download the firmware.

Nortel has tested the following TFTP Servers. They are listed in order of preference:

- Nortel TFTP Server (ONMS application)
- 3COM TFTP Server
- Pumpkin TFTP Server

Pre-download checklist

Ensure the following requirements are met before downloading firmware:

- A LAN must be properly configured and operational.
- The Nortel Telephony system must be connected to the network and completely operational.
- A TFTP Server must be available on the network in order to load the appropriate firmware in the IP Phones.

Updating IP Phones firmware

The latest IP Phone firmware files are found on the Nortel web site. When the firmware is uploaded to the TFTP Server, the files must be unzipped. The zip file contains a configuration file (.cfg) and a README text file (.txt) with instructions to set up the TFTP Server and to modify the configuration file correctly so that the IP Phone downloads the firmware.

For future firmware upgrades, update the firmware file which is stored on the TFTP Server. Each time the IP Phone is powered on, it checks with the TFTP Server to ensure it has the proper firmware version, and it downloads the new software, if necessary.

Use Procedure 129 to update the IP Phone firmware for IP Phone 2001, IP Phone 2002, IP Phone 2004, and IP Audio Conference Phone 2033.

For information about updating the firmware for the IP Phone 2007, see “Updating the IP Phone 2007 firmware” on page 608. For information about updating the firmware for the IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E, see “Updating the firmware for IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E” on page 613.

Procedure 129

Updating the IP Phones firmware

Note: Nortel recommends that the user ends an active call before performing firmware upgrade. Otherwise results may be unpredictable.

- 1 Download the latest IP Phones firmware from the Nortel web site.
- 2 Load the latest version of the IP Phones firmware, place it on the TFTP Server, and unzip the files. Ensure the TFTP Server is started.

The files required are:

- configuration file (i2033.cfg, for example)
 - firmware binary file (2310S10.bin, for example)
- 3 If you statically assign IP addresses, ensure that the IP address, TFTP Server IP Address, Subnet Mask, and Default Gateway information are accurate. If you are using a DHCP Server, ensure the DHCP options are configured.
 - 4 Enter the TFTP Server IP address in the configuration menu, and reboot the IP Phone.

End of Procedure

Updating the IP Phone 2007 firmware

The IP Phone 2007 can perform TFTP firmware upgrade from within the **Tools** menu. This method requires the TFTP Server to store the following files in the root directory:

- i2007.cfg – downloading script file

- 0625Cxx.bin – firmware image file

Note: 0625Cxx.bin is the name of the firmware file by default, but the location and the name of the firmware image file being downloaded is specified in the i2007.cfg file and can be any name. The name of the firmware image file can be specified in relative path name notation (for example, /subfolder/name.ext or name.ext).

Table 75 describes the fields in the configuration file on the TFTP Server. The download mode can be set to AUTO or FORCED. It is recommended that you set DOWNLOAD_MODE to AUTO.

Table 75
Fields in the TFTP configuration file

| Field Name | Field Value | Descriptions |
|---------------|-----------------|--|
| DOWNLOAD_MODE | AUTO | Recommended setting. The application looks at the version and downloads the FW if it is a newer version than what is on the phone. |
| | FORCED | The version of firmware is ignored. The firmware is always downloaded. |
| VERSION | 0625Cxx | The version string compared to what is on the phone. |
| FILENAME | 0625Cxx.bin | Image file name. Must match the file name of the actual IP Phone FW file. |
| PROTOCOL | TFTP | Download protocol. Must be TFTP. |
| SERVER_IP | xxx.xxx.xxx.xxx | IP Address of the TFTP server in decimal. |
| SECURITY_MODE | 0 | For future use. |

Use Procedure 130 to upgrade the firmware for the IP Phone 2007.

Procedure 130

Downloading the firmware for the IP Phone 2007


Note: Nortel recommends that the user ends an active call before performing firmware upgrade otherwise results may be unpredictable.

- 1 Download the latest IP Phones firmware from the Nortel web site.
- 2 Load the latest version of the IP Phones firmware and place it on the TFTP Server. Ensure the TFTP Server is started.
- 3 Select the TFTP Upgrade option in the **Service > Option > Tools** menu.

See Figure 74 on [page 610](#).

Figure 74

TFTP Upgrade menu option

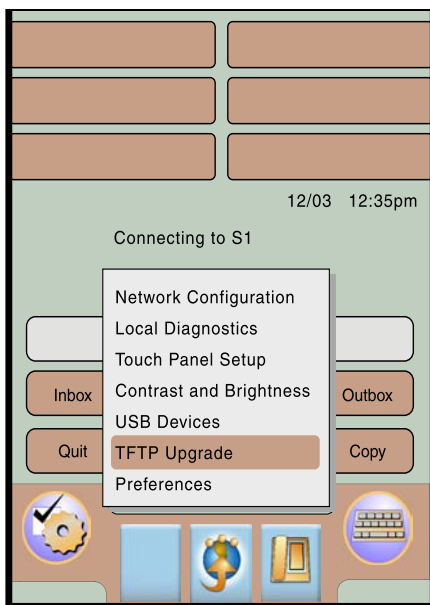

- 4 Enter the IP address for the TFTP Server in the **TFTP IP:** edit box. The dialpad can be used to enter the IP address by substituting star (*) as dot (.). See Figure 75 on [page 611](#).

Figure 75
TFTP Server IP address screen

TFTP DOWNLOADING

TFTP Configuration -

TFTP IP: 192.168.249.10

Read_Configuration

Config File Content (not read yet)

TFTP Address: -

DownLoad Mode: -

Version: -

Type: -

File Name: -

1 2 3 4 5 6 7 8 9 0 ←

→ | \ @ # \$ % & * () []

CAP - + = ~ { } ' | . →

Shift Space ^ ! abc 123

- 5 Tap on the **Read_Configuration** button.

The IP Phone reads the configuration file information from the TFTP Server and displays the image information in the dialog box. Check your network connection if the phone cannot read the configuration file. See Figure 76 on [page 612](#).

Figure 76
Configuration file information



6 Press the **Download** button to start the TFTP Server.

The phone will go blank briefly. Then the message “Starting TFTP download” appears on the screen. Then the firmware is downloaded. The message “Writing firmware to Flash ROM” appears on the screen while the firmware is written to Flash memory. The IP Phone 2007 resets and the application starts.

End of Procedure

Updating the firmware for IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E

Automatic TFTP download at startup

If a TFTP IP address has been configured and a firmware upgrade is available on the server when the phone restarts, the phone executes the automatic TFTP download. This method requires the TFTP Server to store the .cfg and .img files for the IP Phone in the root directory.

For example, the IP Phone 1110, IP Phone 1120E, IP Phone 1140E, and IP Phone 1150E require the following files:

- 1110.cfg
0625Cxx.bin
- 1120e.cfg
0625Cxx.bin
- 1140e.cfg
0625Cxx.bin
- 1150e.cfg
0625Cxx.bin

Note: 0625Cxx.bin is the name of the firmware file by default, but the location and the name of the firmware image file being downloaded is specified in 1110.cfg, 1120e.cfg, 1140e.cfg, or 1150e.cfg and can be any name. The name of the firmware image file can be specified in relative path name notation (for example, /subfolder/name.ext or name.ext).

Table 76 describes the fields in the configuration file on the TFTP Server. The download mode can be set to AUTO or FORCED. It is recommended that you set DOWNLOAD_MODE to AUTO.

Table 76
Fields in the TFTP configuration file

| Field Name | Field Value | Descriptions |
|---------------|-----------------|--|
| [FW] | | Section header for firmware download info |
| DOWNLOAD_MODE | AUTO | Recommended setting. The application looks at the version and downloads the FW if it is a newer version than what is on the phone. |
| | FORCED | The version of firmware is ignored. The firmware is always downloaded. |
| VERSION | 0625Cxx | The version string compared to what is on the phone. |
| FILENAME | 0625Cxx.bin | Image file name. Must match the file name of the actual IP Phone FW file. |
| PROTOCOL | TFTP | Download protocol. Must be TFTP. |
| SERVER_IP | xxx.xxx.xxx.xxx | IP Address of the TFTP server in decimal. |
| SECURITY_MODE | 0 | For future use. |

Use Procedure 131 on [page 615](#) to upgrade the firmware for the IP Phone 1110, IP Phone 1120E, IP 1140E, and IP Phone 1150E using automatic TFTP download during bootup.

Procedure 131
Upgrading the firmware for IP Phone 1110,
IP Phone 1120E, IP Phone 1140E, and
IP Phone 1150E using automatic TFTP download
at bootup

- 1 Use one of the three methods to configure the TFTP Server address:
 - Access the Network Configuration menu. Enter the address at the TFTP IP prompt. Press the **ApplyandReset** soft key to save the change.
 - Enter the address in the BootC menu. See “Manual TFTP Download from BootC Procedure” on page 615.
 - Enter the IP address in the TFTP IP address field retrieved by the DHCP Server.

- 2 Restart the phone.

After the phone starts and begins to run the latest version of firmware, the 1110.cfg, 1120e.cfg, 1140e.cfg, and 1150e.cfg files are downloaded from the TFTP Server. After the .cfg file is retrieved, the DOWNLOAD_MODE and VERSION fields are checked. If necessary, the firmware file is transferred to the phone using TFTP. The display shows the message “[FW] reading...”. If successful, the display shows “[FW] writing...” and the blue LED starts to flash. After the FW image is written to the phone, the message “[FW] finished” is displayed, the blue LED stops flashing, and the phone resets. The phone registers to the TPS with the new FW version.

End of Procedure

Manual TFTP Download from BootC Procedure

This method of upgrading the firmware is normally used only when you need to force the phone to restore an older firmware version. To use this method, the firmware must be placed on the TFTP Server, and you must manually configure the phone to point to that TFTP Server. The BootC firmware carries out the upgrade. To initiate the firmware download task, BootC must be triggered to run.

Note: You can create the configuration file with a default file name, such as "1140E.img" so you do not have to change the file name each time a new IP Phone 1140E firmware load is released. However, if you take this approach, be sure to rename the released firmware file (for example, 0625Cxx.bin) to the default file name when the new firmware file is copied into the TFTP Server root directory and to update the VERSION string in the configuration file.

After the configuration file and the image file are in the TFTP Server root directory, use Procedure 132 to upgrade the firmware using BootC.

Procedure 132

**Upgrading the firmware for IP Phone 1110,
IP Phone 1120E, IP Phone 1140E, and
IP Phone 1150E using BootC**

- 1 Hold down the [Up] and [2] keys, and while doing so, repower the phone. When the phone restarts, it will load and run BootC instead of the application. When the Msg Waiting LEDs go off, you can release the [Up] and [2] keys.
- 2 The following text menu on a white background appears:

| |
|---|
| 11x0 IP Phone Manual Configuration Nortel |
|---|

Note: If you do not see this message, you are in the wrong menu. Repeat step 1. If BootC is damaged from a power reset, hold down the [Up] and [3] keys to use the backup BootC.

- 3 When Nortel appears on the screen, press the soft keys 1,2,3,4 in sequence (left to right). BootC goes to manual configuration. If you miss this step, and the phone begins to register to the TPS, repeat step 1.
- 4 Follow the prompts to configure DHCP and other IP parameters or, if DHCP and other parameters are already configured, just keep pressing the 1 soft key or OK. The soft keys functions are listed below:
 - soft key 1 (below the LCD) is OK
 - soft key 2 is BackSpace
 - soft key 3 is Clear
 - soft key 4 is Cancel


- 5 When prompted: "TFTP Dwnld? (0-No, 1-Yes):0",
 - Press soft key 2 (BKSpace) to clear the 0 (No).
 - Press 1 on the dialpad, then press soft key 1 (OK).
- 6 When prompted: "TFTP IP xxx.xxx.xxx.xxx",
 - If the IP address is correct for the TFTP server, press soft key 1 (OK). After the TFTP address is entered the first time, it is presented the next time you enter the menu.
 - If the IP address is incorrect, press soft key 2 (Clear) to erase the address shown and enter a new address. Press the asterisk (*) key to enter a period (.) in the IP address. You can also use backspace key to erase part of the address or correct errors by pressing soft key 1 (BKSpace). When the address is correct, press soft key 1 (OK).
- 7 The phone reads the configuration file from the TFTP server, extracts the Server_IP and Filename fields, and attempts to download the file. The display shows the message "[FW] reading..."
- 8 The display shows "[FW] writing..." and the blue LED starts to flash.
- 9 After the FW image is written to the phone, the message "[FW] finished" is displayed, the blue LED stops flashing, and the phone resets.

The phone registers to the TPS with the new FW version.

Note: If the TFTP Server, specified by the TFTP IP address entered during configuration, is unreachable or down, the IP Phone attempts to register to the TPS to perform a firmware download. If the IP Phone does not register to the TPS, the IP Phone will not work. Check the TFTP IP address and the state of the TFTP Server, then reboot the IP Phone.
- 10 If the IP Phone remains in this condition because no TPS FW download occurs, check the TFTP IP address and the state of the TFTP Server, then restart the IP Phone.

End of Procedure

Figure 77:
TFTP Server on a network

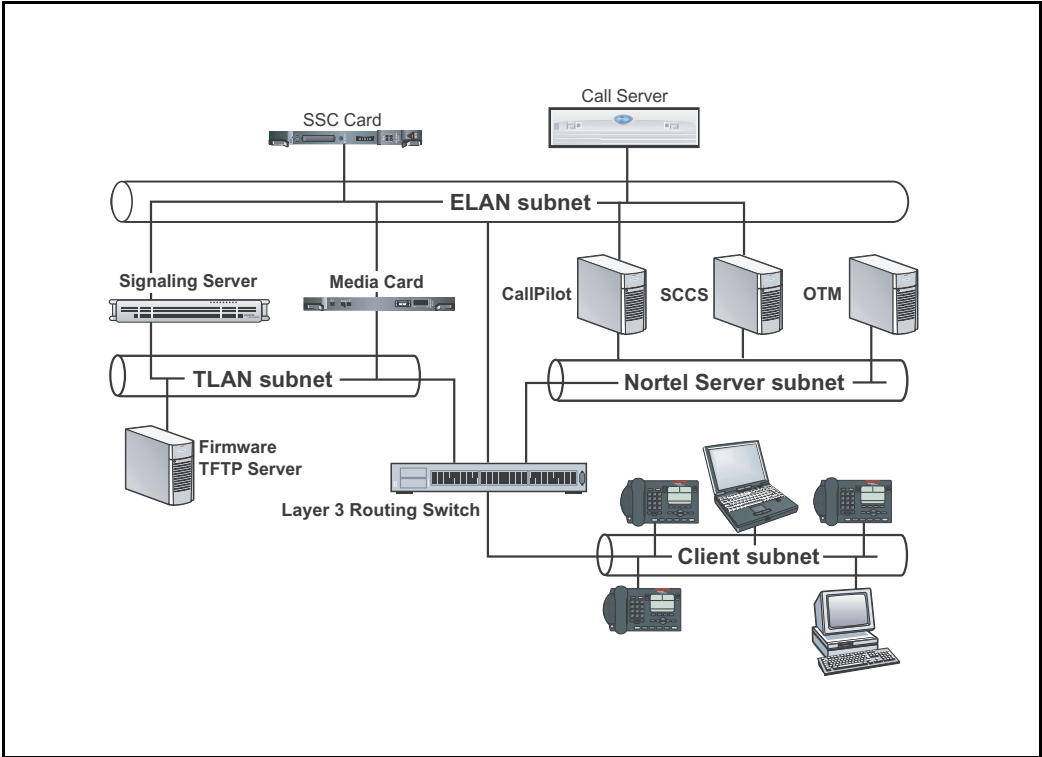

Appendix I: IP Phone soft keys

Table 77 describes the IP Phone function assignment for each of the context-sensitive soft keys. Use LD 11 to program keys 16 to 26 on the IP Phones.

Note: If you attempt to configure anything other than the permitted response, the Call Server generates an error code.

Table 77
IP Phone context-sensitive soft key functions (Part 1 of 2)

| Key number | Response | Description |
|------------|----------|--------------------------------------|
| Key 16 | MWK | Message Waiting key |
| | NUL | Removes function or feature from key |
| Key 17 | TRN | Call Transfer key |
| | NUL | Removes function or feature from key |
| Key 18 | A03 | Three-party conference key |
| | A06 | Six-party conference key |
| | NUL | Removes function or feature from key |
| Key 19 | CFW | Call Forward key |
| | NUL | Removes function or feature from key |
| Key 20 | RGA | Ring Again key |
| | NUL | Removes function or feature from key |
| Key 21 | PRK | Call Park key |
| | NUL | Removes function or feature from key |
| Key 22 | RNP | Ringing Number Pickup key |
| | NUL | Removes function or feature from key |

Table 77
IP Phone context-sensitive soft key functions (Part 2 of 2)

| Key number | Response | Description |
|------------|----------|--------------------------------------|
| Key 23 | SCU | Speed Call User |
| | SSU | System Speed Call User |
| | SCC | Speed Call Controller |
| | SSC | System Speed Call Controller |
| | NUL | Removes function or feature from key |
| Key 24 | PRS | Privacy Release key |
| | NUL | Removes function or feature from key |
| Key 25 | CHG | Charge Account key |
| | NUL | Removes function or feature from key |
| Key 26 | CPN | Calling Party Number key |
| | NUL | Removes function or feature from key |

Appendix J: Call features

Table 78 shows a list of supported call features for the IP Phones.

Table 78
IP Phone supported call features

| Feature | Description |
|---------|-------------------------------|
| AAG | ACD Answer Agent |
| ACNT | ACD Account |
| ADL | Autodial |
| AGT | ACD Agent |
| AMG | ACD Answer Emergency |
| A03 | Three party conference |
| A06 | Six party conference |
| ARC | Attendant recall |
| ASP | ACD Call Supervisor |
| AWT | ACD Call Waiting Time |
| AWC | ACD Calls Waiting |
| BFS | Busy Forward Status |
| CA | No hold conference - autodial |
| CCOS | Controlled Class of Service |
| CFW | Call Forward |

Table 78
IP Phone supported call features

| Feature | Description |
|---------|---------------------------------|
| CHG | Charge Account |
| CLID | Caller ID and called ID |
| CPN | Calling Party Number |
| CS | No hold conference - speed call |
| CSD | Conferee Selectable Display |
| CWT | Call Waiting |
| DAG | ACD Display Agents |
| DSP | Display |
| DIG | Display Intercom Group |
| DPU | Directed Call Pickup |
| DRC | DID Route Control |
| DWC | ACD Display Call Waiting Calls |
| EOV | Enhanced Override |
| EMG | ACD Emergency |
| ENI | ACD Enable Inflow |
| FLH | BCS Flash |
| FOV | Flash Override |
| GHD | Group Hunt Deactivate |
| GRC | Group Call |
| GPU | Group Pickup |
| HOT | Hotline |
| ICF | Internal Call Forward |

Table 78
IP Phone supported call features

| Feature | Description |
|----------------|--------------------------|
| IMM | BCS Immediate |
| LNR | Last Number Redial |
| MCK | Message Cancellation Key |
| MIK | Message Indication Key |
| MRK | Message Registration Key |
| MSB | Make Set Busy |
| MWK | Message Waiting Key |
| NHC | No Hold Conference |
| NKL | Notification Key Lamp |
| NRD | Not Ready |
| NSVC | ACD Night Service |
| OBV | ACD Observe Agent |
| OSN | Onsite Notification |
| OVB | Overflow position Busy |
| OVR | Override |
| PRK | Call Park |
| PRS | Privacy Release |
| PRY | Priority |
| RAG | ACD Agent Call |
| RCK | Ringing Change Key |
| RDL | Redial Stored Number |
| RGA | Ring Again |

Table 78
IP Phone supported call features

| Feature | Description |
|---------|----------------------------------|
| RLS | Release |
| RMK | Room Status Key |
| RMWK | Remote Message Waiting Key |
| RNP | Ringing Number Pickup |
| RPAG | Radio Page |
| SCC | Speed Call Controller |
| SCU | Speed Call User |
| SIG | Signal |
| SSC | Speed System Call Controller |
| SSU | System Speed call User |
| THF | Centrex Switch Hook Flash |
| TRC | Malicious Call Trace |
| TRN | Call Transfer |
| USR | User Selectable Call Redirection |
| UST | User Status |
| VCC | Voice Call |
| WUK | Wake Up Key |
| XMWK | Multiple DN Message Waiting |

Index

Numerics

- 3-port switch
 - and 802.1Q header, 512
- 802.1Q, 509
 - Ethernet frame, 510
 - p bits, 510
- 802.1Q support, 510
- 802.3af, 499

A

- AC adapter, 499
- Accessory Expansion Module (AEM), 197
- Ack message, 514
- Active Call Failover, 494
- Application menu
 - language selection, 207
- Auto-discovery
 - VLAN ID, 513

C

- Callers List, 493
- call features, 236
- Call forward key
 - IP Phone 2004, 617
 - IP Softphone 2050, 221
- Call Handling screen, 246

- Call park key
 - IP Phone 2004, 617
 - IP Softphone 2050, 221
- Call transfer key
 - IP Phone 2004, 617
 - IP Softphone 2050, 220
- Charge account key
 - IP Softphone 2050, 221
- Checking Ethernet Statistics IP Phone 2001, 69
- Clear Type, 236
- Closet power, 172
- Codecs
 - and jitter buffer, 216
 - IP Softphone 2050, 219
- Conference key
 - IP Softphone 2050, 220
- Context-sensitive soft keys, 304
- Controls, 191
- Corporate Directory, 492
- cursor control, 238

D

- Default gateway
 - IP Phone 2002, 57, 131, 284, 327
- def gw *See* Default gateway
- Desk-mount bracket, 196

DHCP

- Ack message, 514
- Discovery request, 514
- VLAN ID discovery, 513

Diagnostic Utilities

- Network diagnostic utilities availability, 525

Diagnostic utilities

- Authentication State, 527
- Authenticator ID, 527
- Command Line Interface (CLI), 524
- data display pages, 538
- DeviceID, 527
- DHCP information process, 526
- Ethernet statistics, 526
- IDU command printout in LD 32 for IP Phone
 - with a NAT, 556
- IDU command printout in LD 32 for IP Phone
 - without a NAT, 556
- IP Networking statistics, 526
- Network Address Translation (NAT)
 - Traversal, 551
- Network QoS Process, 526
- Ping and TraceRoute, 525
- RTP/RTCP statistics, 526
- UNISim/RUDP statistics, 526
- Using CLI Commands, 555

diagnostic utilities, 523

Diagnostic utilities

- Supplicant Status, 526

Display area

- IP Softphone 2050, 212

Display label, 191

Driver software

- headset adapter, 226

E

Echo cancellers, 215

Emergency Services for Virtual Office, 494

Enabling Full Duplex mode IP Phone 2001, 69, 295

Ethernet frame, 510

F

Feature keys

- IP Softphone 2050, 220

Features

- Callers List, 493
- Corporate Directory, 492
- Emergency Services for Virtual Office, 494
- IP Call Recording, 493
- Password Administration, 493
- Personal Directory, 492
- Redial List, 493
- Virtual Office, 494

Frame size

- IP Softphone 2050, 219

Full Duplex mode IP Phone 2001, 68, 294

G

Gateway

- default, 57, 131, 284, 327

Global IP Sound NetEQ, 236

H

Headset adapter

- driver software, 226

I

Installer password, 61, 136, 288

integrated switch, 499

IP, 42

IP address, 54, 91, 128, 173, 282, 324, 369, 412, 459

IP Call Recording, 493

IP Line IP stack, 510

IP Phone

- diagnostic utilities, 523
- password, 225

- IP Phone 2001
 - Changing TN, 71, 297
 - components and functions, 42
 - features not supported, 46
 - Introduction, 39
 - Reinstalling, 70, 107, 146, 184, 296, 340, 381, 424, 471
 - Removing, 72, 298
 - Replacing, 72, 298
 - Supported features, 44
- IP Phone 2002, 196
 - user ID, 55, 91, 129, 174, 282, 325, 370, 413, 460
- IP Phone 2002 keys
 - reserved, 221
- IP Phone 2004, 196
- IP Phone controls, 191
- IP Phone Installer Password, 61, 136, 288
- IP Phone KEM, 189, 196
- IP Phone Key Expansion Module (KEM), 189
- IP Phones
 - environmental specifications, 502
- IP Softphone 2050
 - codecs, 219
 - loss plan, 215
 - registration, 214
 - software version, 222
 - TN, 222
- isetShow command
 - IP Softphone 2050 software version, 222

J

- Jitter buffer
 - setting, 216

K

- Key expansion module
 - configuration, 192
 - connection, 197
 - Description, 189, 475
 - display, 191
 - features, 190
 - initialization, 198
 - installation, 196
 - key number assignments, 191
 - operating parameters, 199
 - package components, 191
- Key expansion module (KEM), 189

L

- Language
 - IP Softphone 2050 Application menu, 207
 - Terminal Proxy Server, 207
- Line/feature keys, 191
- Local power, 172
- local power, 499
- Loss Plan
 - IP Softphone 2050, 215

M

- Message waiting key, 617
 - IP Softphone 2050, 220

MVC

- 2050
 - WLAN Access Point
 - WAP, 234

MVC 2050

- Application software, 236
- automatic gain control and feedback, 237
- compatible PDAs, 237
- Components, 236
- Menus, 239
- Personal Digital Assistant
PDA, 234
- Pocket PC 2003, 234
- skins, 243
- software, 234
- Supported features, 235
- Virtual Private Network client, 234
- Windows Mobile 5.0, 234

MVc 2050

- audio quality, 238
- Call handling screen, 238

N

navigation

- buttons, 238

Net mask (net msk), 55, 91, 128, 173, 282, 324, 369, 412, 460

Node ID, 225

P

Party conference key

- IP Phone 2004, 617

Password

- installer, 61, 136, 288

Password Administration, 493

p bits, 510

Personal Directory, 492

Power over Ethernet (PoE), 499

Power over LAN, 172

Power requirements

- Phase II Phones, power over Ethernet, 501

power splitters, 499

Power supply, 50, 124

- IP Phone 2004, 172

Privacy release key

- IP Softphone 2050, 221

Q

QoS, 216

- DiffSERV, 218

R

Reboot

- IP Phone 2002, 71, 108, 146, 185, 297, 341, 382, 425, 472

Redial List, 493

Registration

- error messages, 557
- IP Softphone 2050, 214

Reserved keys

- IP Phone 2002, 221

Ring again key

- IP Phone 2004, 617
- IP Softphone 2050, 221

Ringing number pickup key

- IP Phone 2004, 617
- IP Softphone 2050, 221

Router address, 55, 91, 129, 174, 282, 324, 369, 413, 460

S

Speed dial

- IP Phone 2004, 618
- IP Softphone 2050, 221

Start up

- IP Softphone 2050, 227, 228

Structural baseplate, 196

T

Terminal Proxy Server

- language selection, 207

TN, 225

IP Softphone 2050, 222

sharing, 72, 109, 147, 186, 298, 342, 383, 426,
473

Transfer key

IP Phone 2004, 617

Trivial File Transfer Protocol, 603

U

User ID

IP Phone 2002, 55, 91, 129, 174, 282, 325, 370,
413, 460

V

Virtual Office, 494

VLAN

802.1Q, 509

priority, 292

VLAN ID

discover using DHCP, 513

values, 286, 292

W

WLAN Handset

2210, 261

2211, 261

Nortel Communication Server 1000

IP Phones

Description, Installation, and Operation

Copyright © 2007 Nortel Networks. All Rights Reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, the Nortel Logo, the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

The *Bluetooth* word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nortel Networks is under license. Other trademarks and trade names are those of their respective owners.

Publication number: 553-3001-368

Document release: Standard 26.00

Date: August 2007

Produced in Canada

To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback.

